





**BRUSH CUTTER
PARTS CATALOG**

SRM-2200
SERIAL NUMBER 001001 & UP


ECHO, INCORPORATED
400 OAKWOOD ROAD
LAKE ZURICH, IL 60047

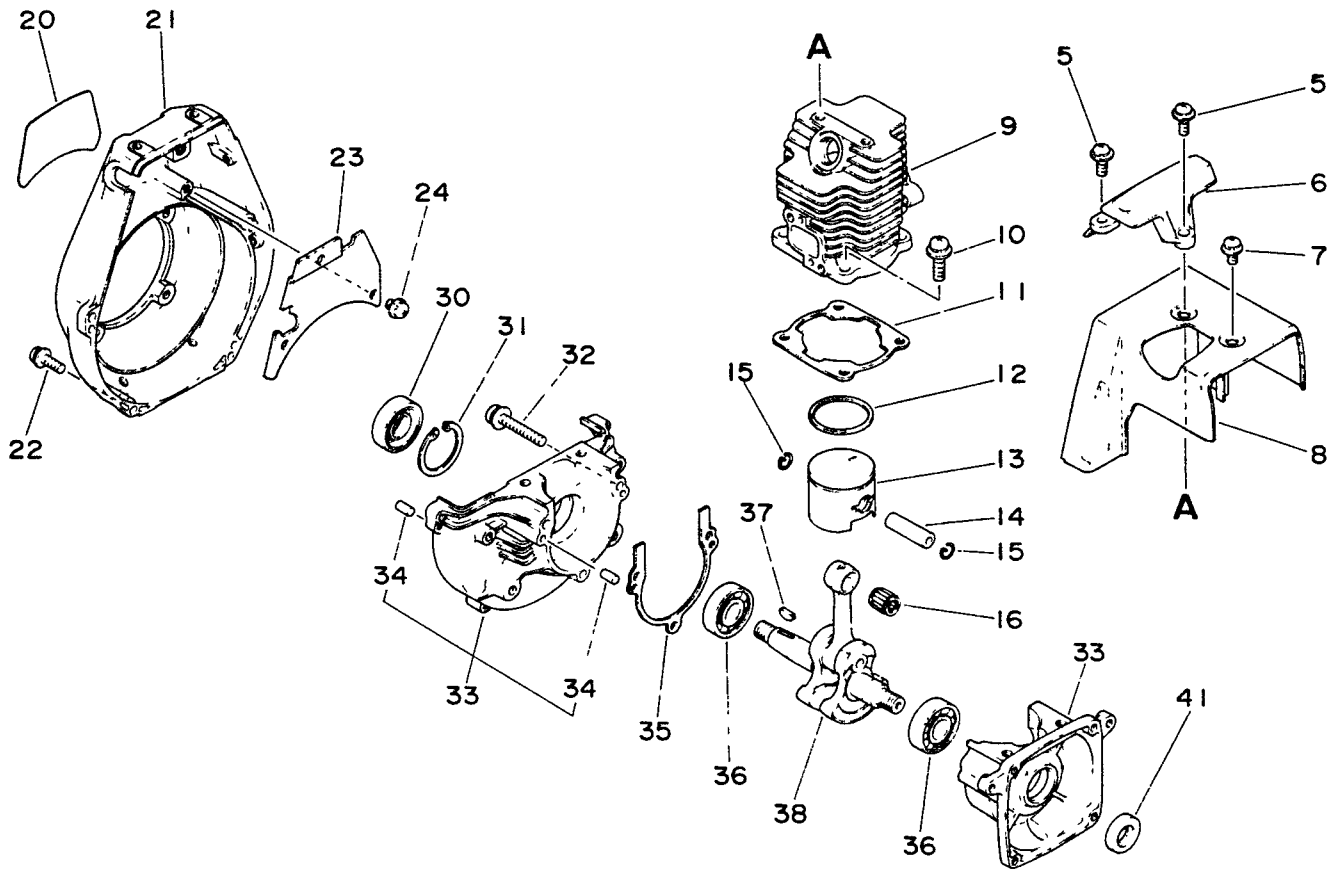


Key No.	Part Number	Q'ty	Description	Key No.	Part Number	Q'ty	Description
1- 5	900 238 0401 4	3	Screw 4x14	1- 23	101 534-4063 0	1	Plate
6	159 905-4063 0	1	Guard, top	24	900 238-0400 8	3	Screw 4x8
7	900 238-0401 0	1	Screw 4x10	30	100 212-2823 0	1	Oilseal
8	101 514-4063 0	1	Cover, cylinder	31	900 702-0002 8	1	Circlip 28
9	101 011-4063 0	1	Cylinder	32	900 238-0502 8	3	Screw 5x28
10	900 238-0501 6	4	Screw 5x16	33	100 200-2823 0	1	Crankcase set
11	101 010-2823 0	1	Gasket, cylinder base	34	-100 215-0393 0	4	Pin, dowel
12	100 011-0533 0	1	Ring, piston	35	100 242-2823 0	1	Gasket, crankcase
13	100 010-4063 0	1	Piston	36	900 800-3600 1	2	Bearing, ball 6001
14	100 013-2233 0	1	Pin, piston	37	100 142-1233 0	1	Key, Woodruff
15	100 015-0463 0	2	Circlip, piston pin	38	100 100-4063 0	1	Crankshaft ass'y
16	100 012-2233 0	1	Bearing, needle	41	100 212-0463 0	1	Oilseal
20	890 115-4083 0	1	Label, model				
21	101 511-4063 0	1	Cover, fan				
22	900 238-0401 6	4	Screw 4x16				

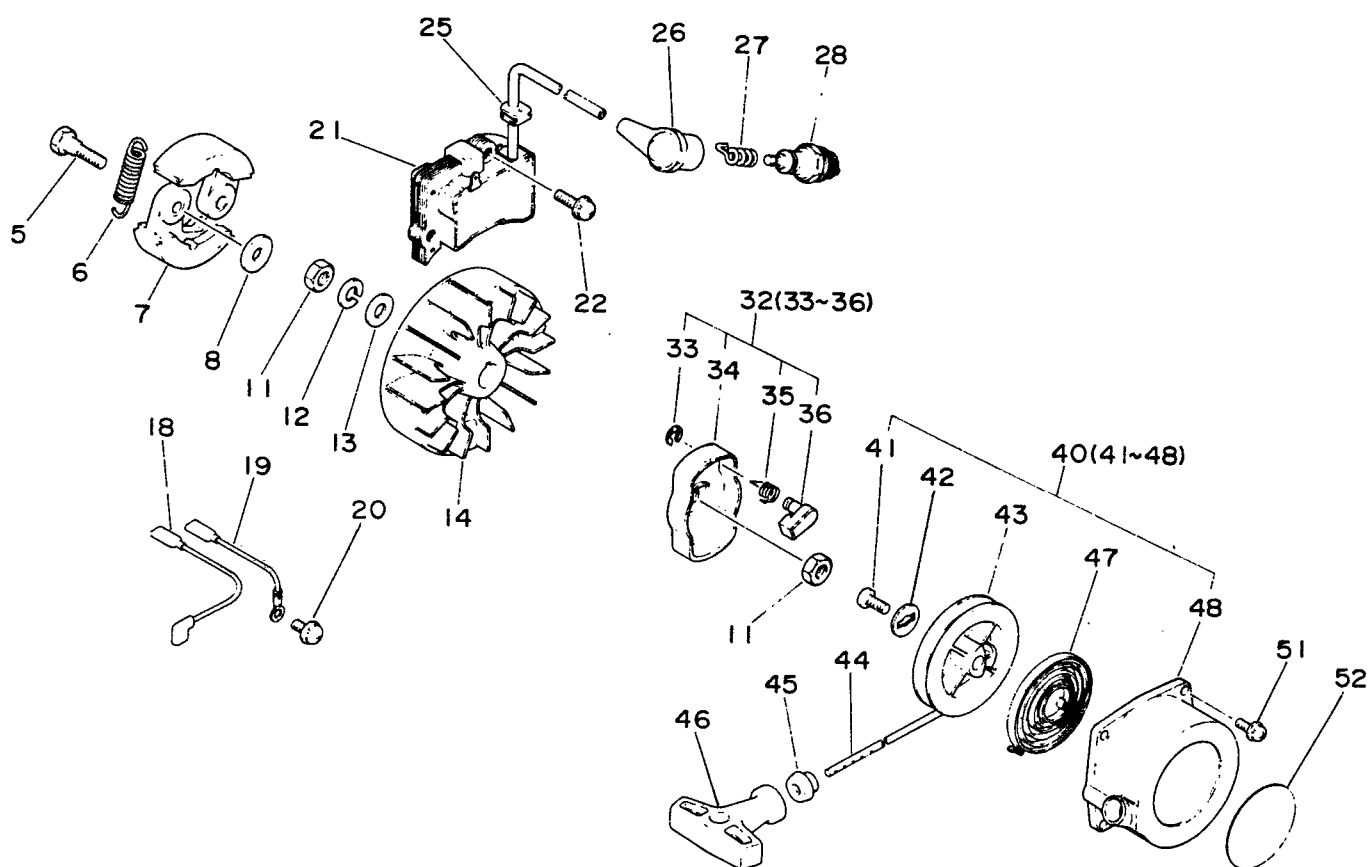


Key No.	Part Number	Q'ty	Description	Key No.	Part Number	Q'ty	Description
2- 5	175 046-2233 2	2	Bolt	2- 35	-177 234-4063 0	1	Spring, pawl
6	175 018-0553 5	1	Spring, clutch	36	-177 218-4063 0	1	Pawl, starter
7	175 009-0553 1	2	Shoe, clutch	40	177 200-4063 0	1	Starter ass'y
8	175 048-0553 0	2	Spacer	41	-177 236-4063 0	1	Screw
11	900 502-0000 8	2	Nut 8	42	-177 214-4063 0	1	Washer
12	900 605-0000 8	1	Washer, spring 8	43	-177 215-4063 0	1	Reel, starter
13	900 600-0000 8	1	Washer 8	44	-177 226-0393 0	1	Rope, starter
14	156 801-2823 0	1	Flywheel	45	-177 227-0553 0	1	Guide, rope
18	156 630-4063 0	1	Lead	46	-177 228-0653 0	1	Grip, starter
19	156 635-4063 0	1	Lead	47	-177 220-4063 0	1	Spring, rewind
20	900 238-0501 0	1	Screw 5x10	48	-177 232-4063 0	1	Case, starter
21	156 601-4063 0	1	Module, CDI	51	900 238-0401 4	4	Screw 4x14
22	900 238-0502 0	2	Screw 5x20	52	890 112-2673 0	1	Label, ECHO
25	156 112-4063 0	1	Grommet				
26	159 012-0343 3	1	Cap, spark plug				
27	159 011-0343 2	1	Coil, spark plug cap				
28	159 017-1393 0	1	Plug, spark				
32	177 202-4063 0	1	Catcher ass'y, pawl				
33	-900 700-0000 6	1	E-ring 6				
34	-177 210-4063 0	1	Catcher, pawl				

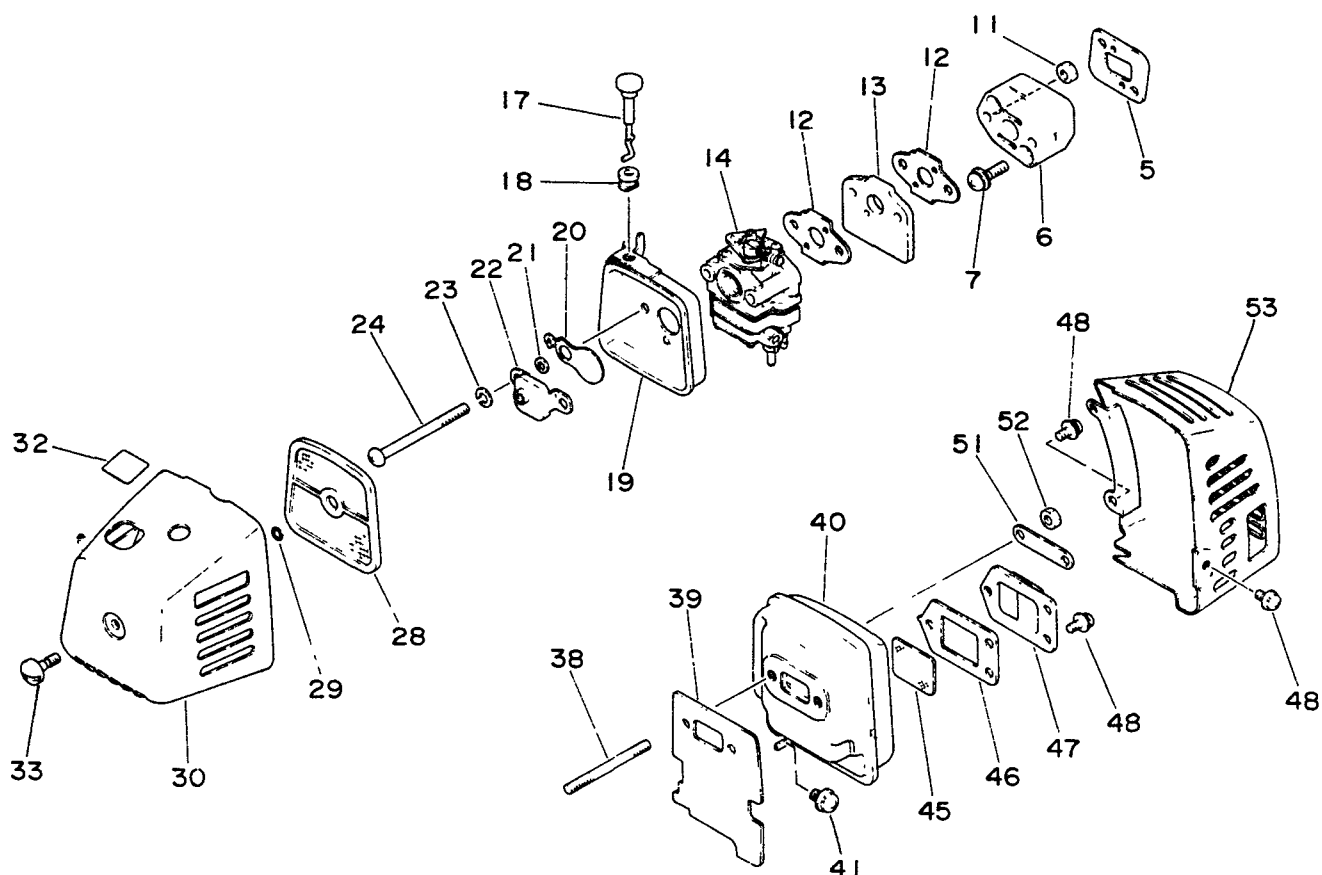


Key No.	Part Number	Q'ty	Description	Key No.	Part Number	Q'ty	Description
3- 5	130 010-2823 0	1	Gasket, insulator	3- 38	101 014-0056 0	2	Stud
6	130 017-4063 0	1	Insulator	39	145 510-4063 0	1	Gasket, muffler
7	900 238-0502 0	2	Screw 5x20	40	145 806-4063 0	1	Muffler
11	900 500-0000 5	2	Nut 5	41	900 238-0501 0	1	Screw 5x10
12	130 016-4063 0	2	Gasket	45	145 862-4063 0	1	Screen
13	130 026-4063 0	1	Spacer	46	145 866-4063 0	1	Gasket
14	123 000-4063 0	1	Carburetor	47	145 809-4063 0	1	Lid, muffler
17	178 510-4103 0	1	Rod, choke	48	900 238-0401 0	6	Screw 4x10
18	178 810-0523 0	1	Grommet	51	145 642-0493 0	1	Washer
19	130 314-4063 0	1	Body, air cleaner	52	433 020-0083 0	2	Locknut
20	178 515-4063 0	1	Shutter, choke	53	145 871-4063 0	1	Cover, muffler
21	178 516-0083 0	2	Spacer				
22	129 006-4063 0	1	Plate				
23	900 605-0000 5	2	Washer, spring 5				
24	900 220-0506 0	2	Screw 5x60				
28	130 310-4063 0	1	Filter, air				
30	130 302-4063 0	1	Cover, air cleaner				
29	-900 720-0000 4	1	O-ring 4				
33	-130 415-4063 0	1	Fastener				
32	890 121-4063 0	1	Label				

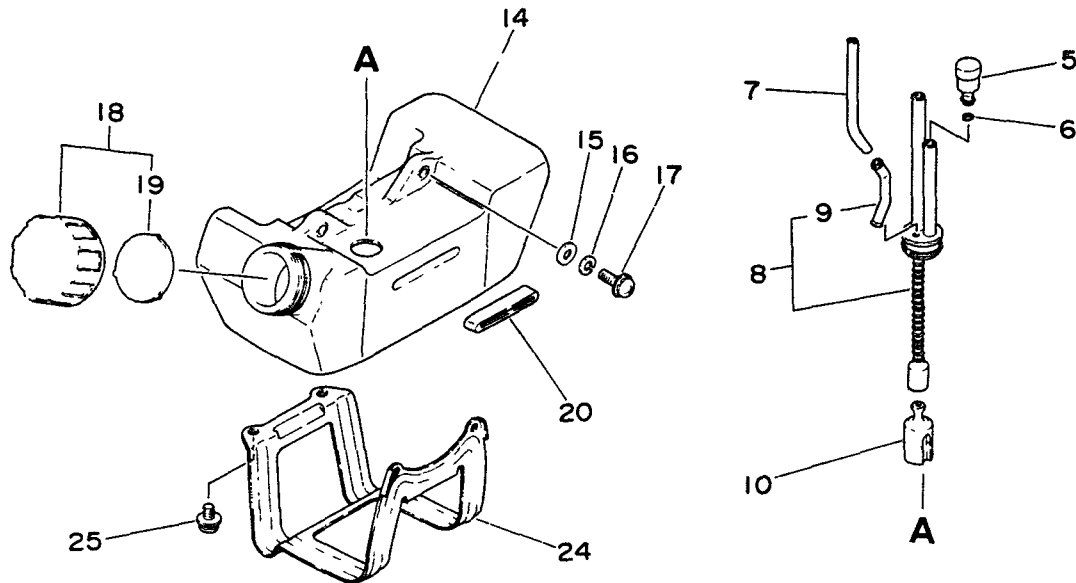


Key No.	Part Number	Q'ty	Description	Key No.	Part Number	Q'ty	Description
4- 5	131 300-4063 0	1	Vent ass'y				
6	130 111-0053 0	1	Clip				
7	129 028-4063 0	1	Pipe				
8	132 002-4063 0	1	Pipe				
9	-132 021-4063 0	1	Connector, pipe				
10	131 205-0732 0	1	Strainer, fuel				
14	131 005-4063 0	1	Tank, fuel				
15	900 603-0000 5	2	Washer 5				
16	900 605-0000 5	2	Washer, spring 5				
17	900 220-0501 6	2	Screw 5x16				
18	131 004-4063 0	1	Cap, fuel				
19	-131 016-4063 0	1	Gasket				
20	131 920-4063 0	1	Cushion				
24	305 110-4063 0	1	Stand				
25	900 238-0501 0	2	Screw 5x10				

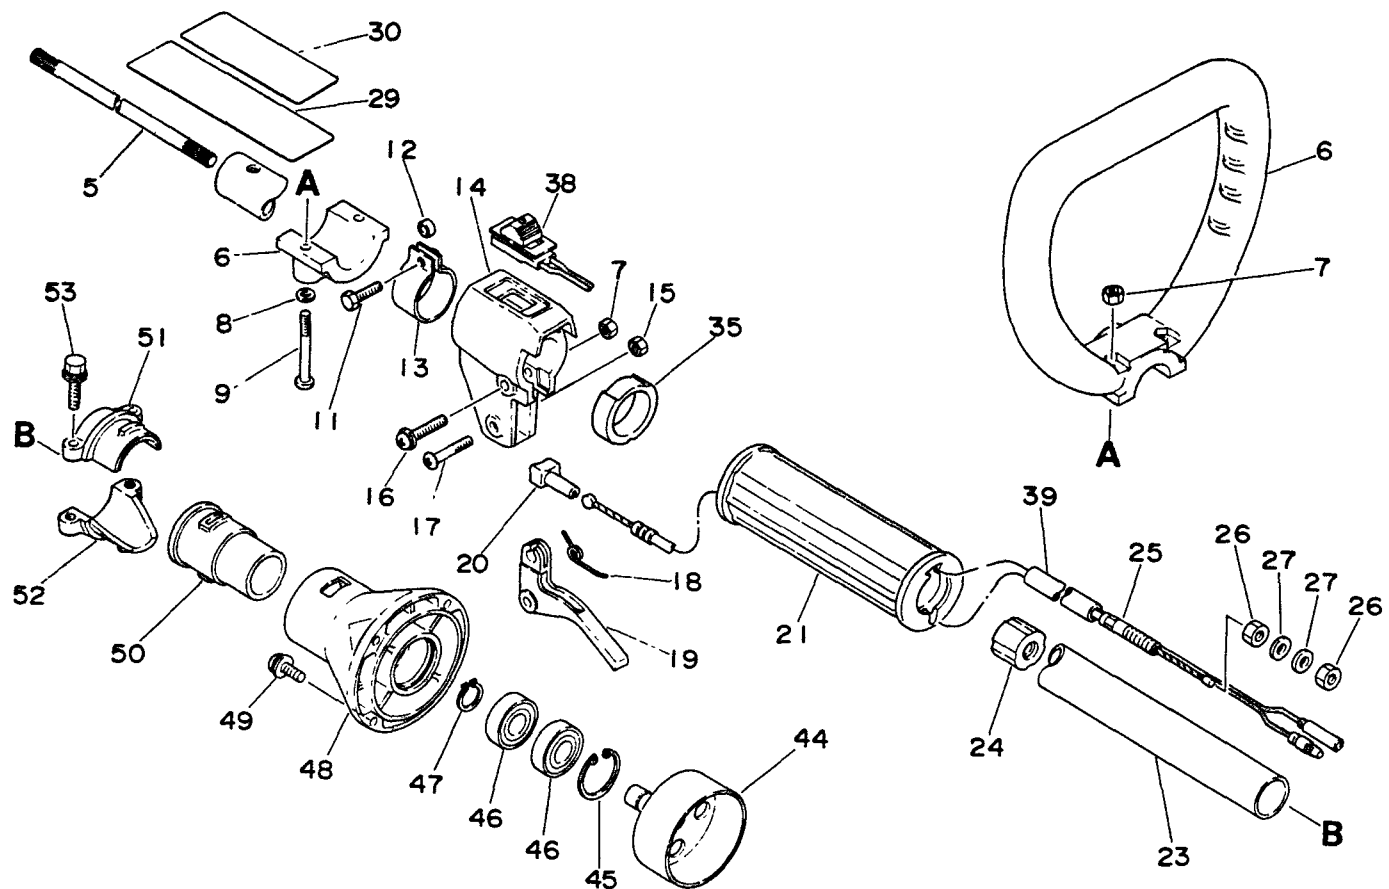SRM-2200 5


Key No.	Part Number	Q'ty	Description	Key No.	Part Number	Q'ty	Description
5- 5	610 018-2783 0	1	Shaft, drive	5- 27	900 600-0000 6	2	Washer 5
6	351 201-0893 0	1	Handle, loop	29	890 160-2423 0	1	Label
7	900 500-0000 5	3	Nut 5	30	890 177-0913 0	1	Label
8	900 600-0000 5	2	Washer 5	35	178 076-2723 0	1	Spacer
9	900 220-0504 0	2	Screw 5x40	38	163 400-4063 0	1	Switch, ignition
11	900 100-0501 8	1	Bolt 5x18	39	178 127-4063 0	1	Tube
12	699 012-0333 0	1	Spacer	44	175 005-4083 0	1	Drum, clutch
13	301 207-0893 0	1	Hook	45	900 702-0002 8	1	Circlip 28
14	178 024-2433 0	1	Bracket	46	900 808-0600 1	2	Bearing, ball 6001
15	433 020-0083 0	1	Locknut 5	47	900 701-0001 2	1	Circlip 12
16	900 242-0503 0	1	Screw 5x30	48	610 205-4083 0	1	Flange, drive shaft
17	178 110-0533 0	1	Screw	49	900 242-0501 6	4	Screw 5x16
18	178 043-0693 0	1	Spring	50	610 910-2783 2	1	Cushion
19	178 010-0563 0	1	Control, throttle	51	610 922-2743 2	1	Holder, housing
20	178 048-0563 0	1	Spacer	52	610 923-2743 2	1	Holder, housing
21	351 012-2433 0	1	Grip, handle	53	900 142-0502 5	2	Bolt 5x25
23	610 206-2303 0	1	Housing, drive shaft				
24	610 105-2783 0	5	Bushing				
25	178 001-4063 0	1	Wire, throttle				
26	900 502-0000 6	2	Nut 5				

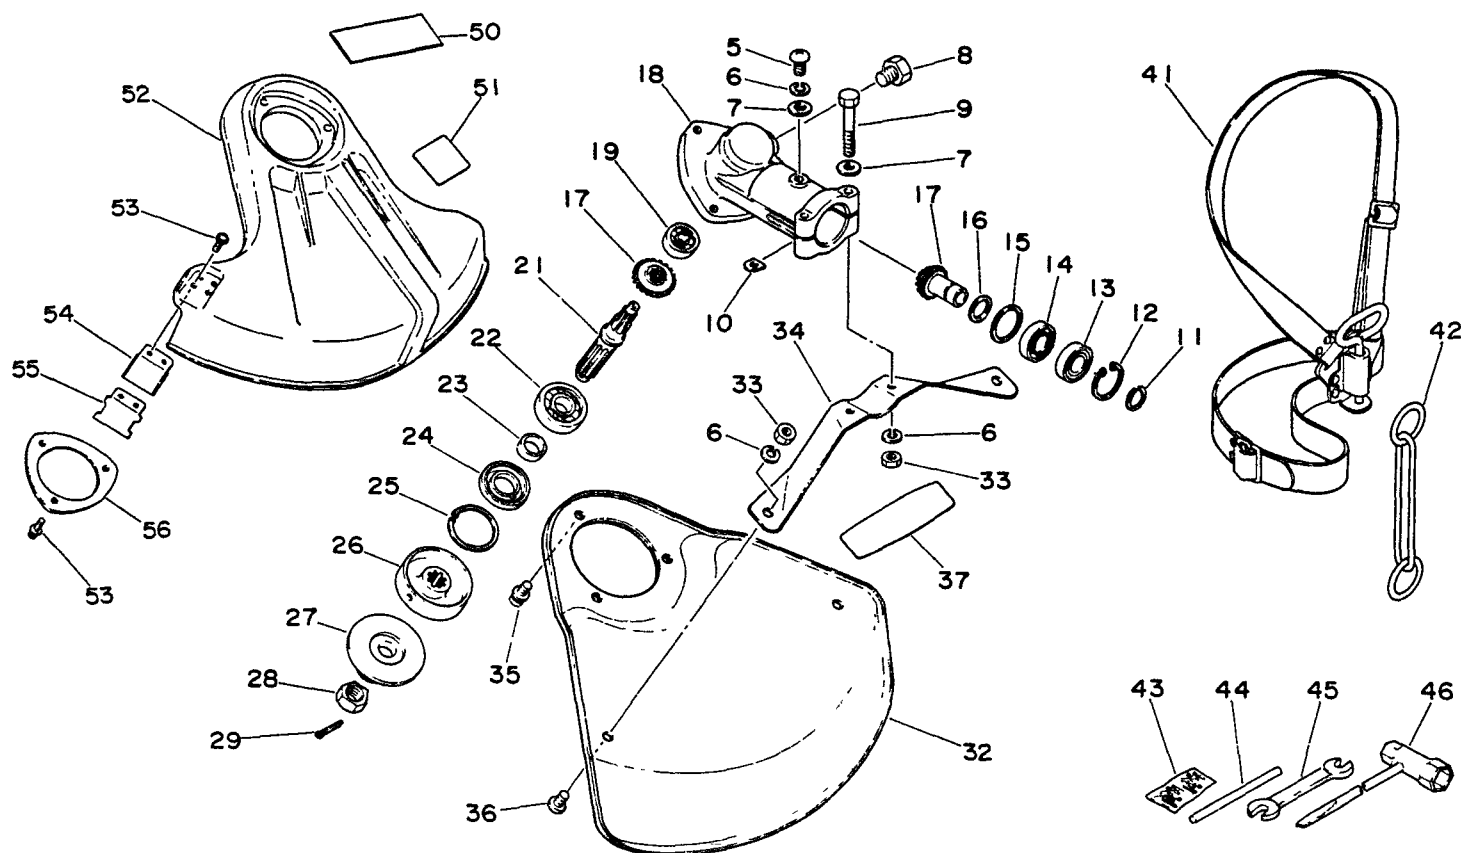

Key No.	Part Number	Q'ty	Description	Key No.	Part Number	Q'ty	Description
6-	610 400-4083 0	1	Housing ass'y, gear	6- 26	-610 313-4083 0	1	Plate, adapter
				27	-610 314-0603 0	1	Plate, adapter
				28	-900 511-0001 0	1	Nut 10 L-H
				29	-900 300-2002 2	1	Pin, split 2x22
				32	699 010-0913 0	1	Shield
5	-900 220-0501 0	1	Screw 5x10	33	900 500-0000 5	4	Nut 5
6	-900 605-0000 5	5	Washer, spring 5	34	699 015-4083 0	1	Bracket, shield
7	-900 600-0000 5	3	Washer 5	35	900 242-0501 0	3	Screw 5x10 w/w,SW
8	-900 100-0800 8	1	Bolt 8x8	36	900 220-0500 8	2	Screw 5x8
9	-900 100-0503 5	2	Bolt 5x35	37	890 138-2403 0	1	Label
10	-610 239-0413 0	2	Washer	41	301 000-0753 0	1	Strap
11	-610 337-2283 0	1	Circlip	42	301 305-2433 0	1	Link
12	-900 702-0002 2	1	Circlip	43	898 502-0113 0	1	Pin, split 2x22 10 pcs.
13	-900 858-0690 0	1	Ball bearing 6900	44	897 518-0113 1	1	Rod, locking
14	-900 855-0690 0	1	Ball bearing 6900	45	895 112-0033 0	1	Spanner
15	-610 316-2283 0	1	Washer	46	895 410-0803 0	1	Wrench w/screwdriver
16	-610 317-2283 0	1	Washer	50	890 138-4063 0	1	Label, ECHO
17	-610 300-4083 0	1	Gear set	51	890 177-4073 0	1	Label
18	-610 410-4083 0	1	Housing, gear	52	699 000-4083 0	1	Shield ass'y
19	-900 810-0062 6	1	Bearing, ball 626	53	-699 016-2323 1	1	Cutter
21	-610 310-4083 0	1	Shaft, P.T.O.	54	-699 212-2323 0	1	Protector
22	-900 800-0600 0	1	Bearing, ball 6000	55	-900 242-0501 6	5	Screw 5x16
23	-610 315-2283 0	1	Spacer	56	-699 018-4083 0	1	Plate
24	-610 413-2283 0	1	Oilseal				
25	-900 702-0002 6	1	Circlip 26				

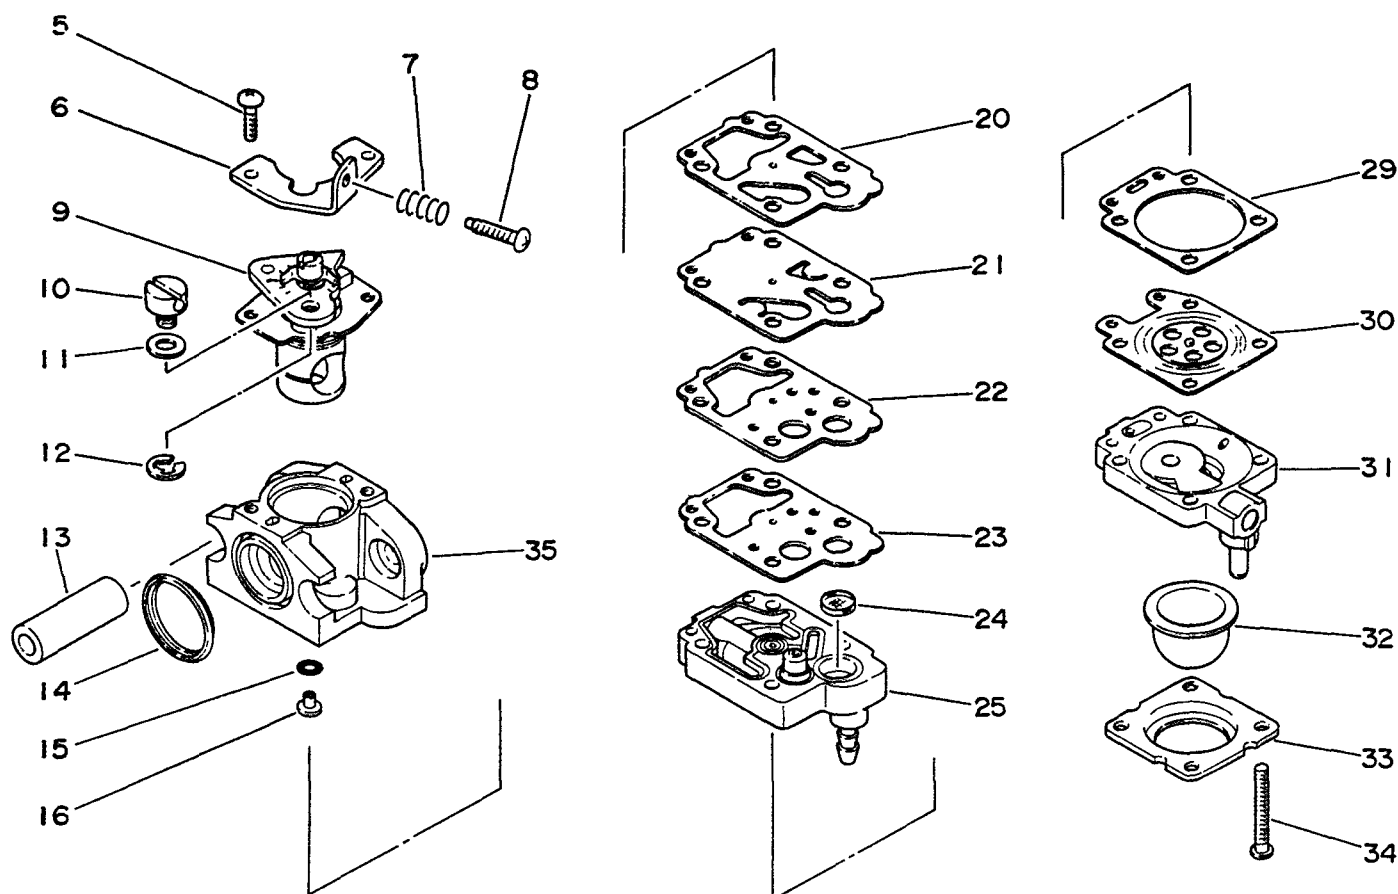

Key No.	Part Number	Q'ty	Description	Key No.	Part Number	Q'ty	Description
7-	123 000-4063 0	1	Carburetor ass'y WY-18	7- 15	- (A)	1	O-ring
				16	- (A)	1	Jet
				20	- (A) (B)	1	Gasket, pump
				21	- (A) (B)	1	Diaphragm, pump
				22	-123 160-4063 0	1	Plate, pump
5	-123 114-4063 0	2	Screw	23	- (A) (B)	1	Gasket, plate
6	-123 128-4063 0	1	Bracket, idle adjust.	24	- (A)	1	Screen, inlet
7	-123 133-2603 0	1	Spring, idle screw	25	- (A)	1	Body ass'y, pump
8	-123 134-4003 0	1	Screw, idle speed	29	- (A) (B)	1	Gasket, metering diaphragm
9	-123 116-4063 0	1	Valve, throttle	30	- (A) (B)	1	Diaphragm, metering
10	-123 172-2603 0	1	Swivel	31	-123 180-4063 0	1	Body ass'y, air purge
11	-123 149-2603 0	1	Washer	32	-123 181-4063 0	1	Pump, primer
12	-123 173-0793 0	1	Clip	33	-123 142-0296 0	1	Cover, metering diaphragm
13	-123 158-4063 0	2	Sleeve, mounting	34	-123 110-4063 0	4	Screw
14	- (A) (B)	1	Ring, packing	35	-Notavailable	1	Body, carburetor

(A) Use 123 100-4063 0 Carburetor repair kit

(B) Use 123 101-4063 0 Carburetor diaphragm/gasket kit