

⚠ WARNING

Failure to follow these safety instructions when performing maintenance repair could result in severe personal injury or property damage.

- If you are not comfortable performing any of the functions described in these instructions, take your unit to an authorized servicing dealer
- Always stop engine, disconnect spark plug, and make sure all moving parts have come to a complete stop and allow unit to cool before servicing unit. Wear gloves to protect hands from sharp edges and hot surfaces.
- Work in a well-ventilated area, away from open flames or sparks.
- Drain fuel from tank and store in an approved container a minimum of 10 feet away from the work area.
- See operator's manual for complete maintenance schedule and procedures.

⚠ WARNING

To reduce the risk of injury, read and understand the operator's manual for your unit, and this instruction sheet. Always wear eye protection that complies with ANSI Z87.1. Ensure compatibility and fit before using this accessory. Do not use this accessory if a part is damaged or missing.

2. Be sure spool with line stays properly assembled on hub in spool housing.
3. Install new cover assembly onto spool housing.

NOTICE:

Locking tabs on both sides of Speed-Feed® head must be fully seated in Cover assembly to properly secure cover. Trimmer head halves will snap tightly together only if parts are properly assembled. Do not pre-install line on cap and spring kit.

Installing New Cover Assembly

1. Press locking tabs (A) on both sides of Speed-Feed® head to remove old cover assembly from spool housing.



NOTE:

Make sure "L" mark on line spool is facing up for counter-clockwise rotation (straight shaft models), and "R" mark on line spool is facing up for clockwise rotation (curved shaft models).

