

OPERATOR'S MANUAL

ECHO TRIMMER/ BRUSHCUTTER SRM-3800 SRM-4600

CAUTION

Read Rules for Safe Operation
and Instructions Carefully



898 610-4313 1

INTRODUCTION

The ECHO Trimmer/Brushcutter, model SRM-3800 and SRM-4600 are lightweight, high performance gasoline powered rotary trimmer which is designed for brushcutting, weed control and grass trimming in areas which are difficult to control by any other means. The trimmer is equipped with a safety shoulder harness, and the excellent balance characteristics plus the available power, ensures comfortable operation.

A heavy duty nylon line trimmer head is supplied as standard equipment, and special metal blades for heavy weed and brush clearing are available as optional accessories.

This manual provides the information necessary for assembly, adjustment, operation and maintenance of your unit.

CONTENTS

	page		Page
Rules for Safe Operation	2	Nylon Line	7
Nomenclature of Parts	3	Steel Blade (Optional)	10
Technical Data	3	Maintenance and Care	13
Assembling	4	Trouble Shooting	15
Operation	5	Long Term Storage	16
Fuel, Starting, Stopping	5~6		
Operating instructions	7		

SAFETY INSTRUCTIONS

1. Do Not operate the unit when you are fatigued.
2. Do Not operate if other people or animals are in the work area.
3. Do Not operate the unit without the shield correctly in position.
4. Do Not operate in a confined area. Carbon monoxide exhaust gas is highly poisonous.
5. Do Not operate the unit while you are smoking.
6. Always wear eye protection goggles when operating the unit.
7. Always hold the unit firmly with both hands and with fingers and thumbs encircling the handles.
8. Always obey local ordinances regulating the use of internal combustion engines in your area.
9. Always use the cutting attachments as approved and supplied by ECHO Inc. for your unit.
10. Always remain alert when operating the unit to avoid possible injury to yourself and other people.
11. Always wear the shoulder harness when operating the unit.
12. Do not operate the unit while under the influence of drugs or alcohol.

WARNING-DANGER

1. Do Not smoke while handling gasoline.
2. Do Not refuel a hot engine. Wait until it cools.
3. Do Not overfill the tank. Spilled fuel must be wiped up.
4. Always stop the engine when refueling.
5. Always remove the fuel cap slowly in order to relieve any pressure build up in the tank.
6. Always restart the engine at least 10 feet away from the refueling point.
7. Always store gasoline in an approved container.

ATTENTION

For your protection when operating this unit, comply with all Safety Rules as listed in the Operator's Manual. (Replacement manuals are available from your Echo dealer.)


1. Do not operate unless the debris shield and safety harness are in good condition and properly installed.
2. Do not operate if other persons or animals are in the work area.
3. Do not operate without eye protection goggles available from your Echo dealer.

WARNING-DANGER

Serious injury may result from the improper use of steel blades. Comply with all Safety Instructions listed in the Operator's Manual and supplied with the blades.

1. The Echo saw tooth blade is designed to cut brush and small trees.
2. The Echo 8 tooth rotary knife blade is designed to cut heavy weeds and grass.
TO AVOID INJURY DUE TO KICKBACK OR BLADE FRACTURE, DO NOT USE THIS BLADE TO CUT BRUSH OR TREES.
3. ECHO INC. will not be responsible for the failure of cutting devices which have not been tested and approved by ECHO for use with this unit.

NOMENCLATURE OF PARTS

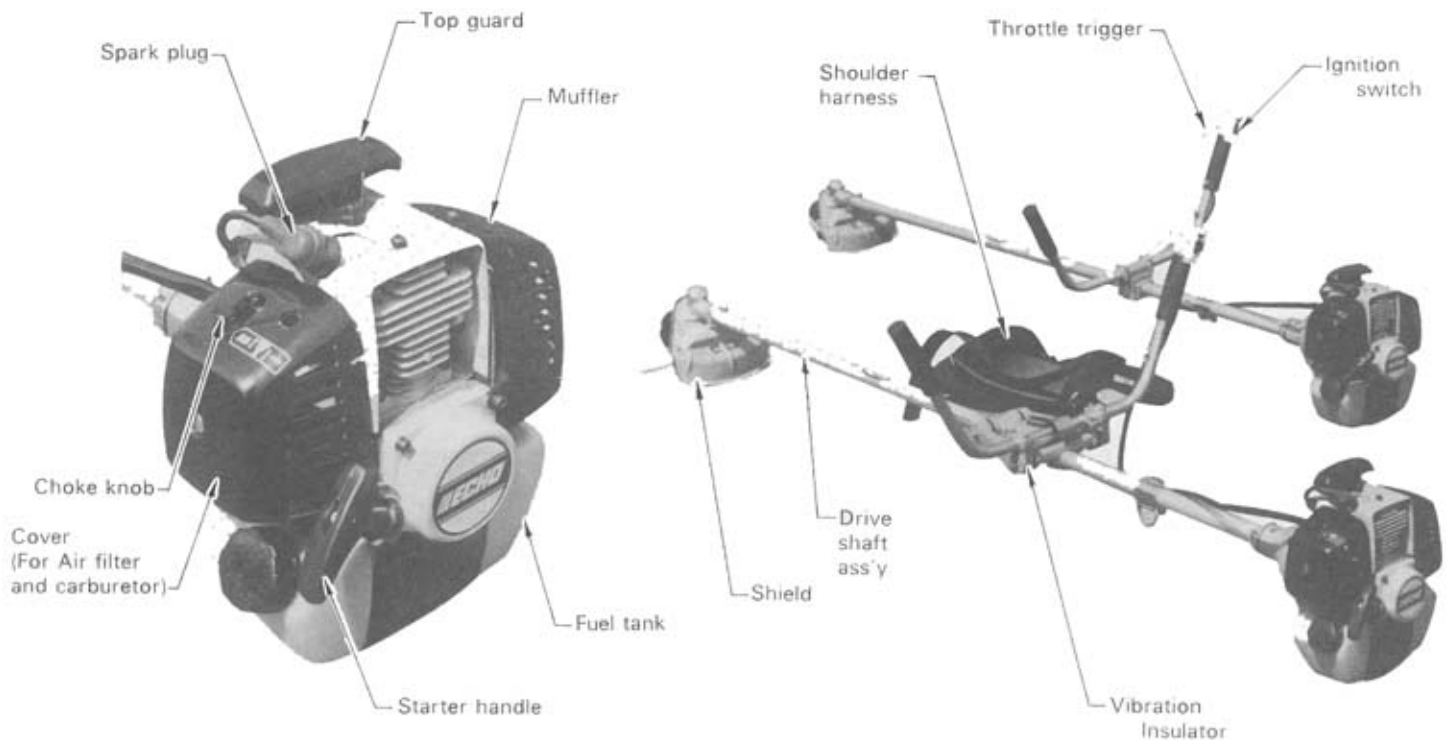

TECHNICAL DATA

			SRM-3800	SRM-4600
Dimension	L x W x H	cm(in.)	181.5 x 60 x 40 (71.5 x 23.6 x 15.7)	181.5 x 60 x 42.5 (71.5 x 23.6 x 16.7)
Weight		kg(lbs)	7.6(16.7); w/o shoulder harness and cutter head	8.9 (19.4)
Engine	Type		Air cooled two stroke single cylinder	
	Displacement	cc (cu. in.)	37.4 (2.28)	45.7 (2.78)
	Max revolution	rpm	10,000	
	Carburetor		Walbro diaphragm type WT	
	Ignition		Flywheel magneto: CDI (Capacitor Discharge Ignition) system	
	Spark plug		NGK BPM7A or CHAMPION CJ-7Y	
Fuel	Starter		Recoil starter	
	Clutch		Automatic centrifugal clutch	
Fuel	Mixing ratio		Mixture of regular leaded gasoline and air cooled two stroke engine oil. 32 : 1 Ratio or 50 : 1 Ratio with special oil approved by ECHO	
	Tank capacity	liter (FL. OZ. US)	0.95 (32.2)	
Drive shaft ass'y	Cutter		Nylon line cutter head	
	Cutter		Circular saw, 10 in.	
	Cutter (Option)		8 cutter blade, 8 in.	
	Gear housing		60 degree spur bevel gears, ratio 1 : 1.33 (Counter-clockwise)	
	Lubrication		Shell Delpena or good quality lithium grease	
	Drive shaft		High tensile solid steel, 5 bearings	
	Shield		Metal shield mounted on the gear housing for nylon line and metal blade applications.	

Technical data subject to change without notice. Model SRM-4600 is equipped with adjustable U-shaped handle.

ASSEMBLING



DRIVE SHAFT

- Stand engine upright on a level floor.
- Loosen bolts at drive shaft end of the engine.
- Fit drive shaft assembly ensuring that the drive shaft is correctly engaged.
- Tighten four bolts to fasten drive shaft ass'y.



HANDLE (SRM-3800 only)


- The handle bracket is fixed on the drive shaft housing at the time of delivery from the plant.
- Assemble the handle and the handle bracket ass'y loosely.
- Adjust the location of the handle and or handle bracket ass'y to a convenient position.
- Tighten the bolts securely.
- Fit throttle cable on clamp.

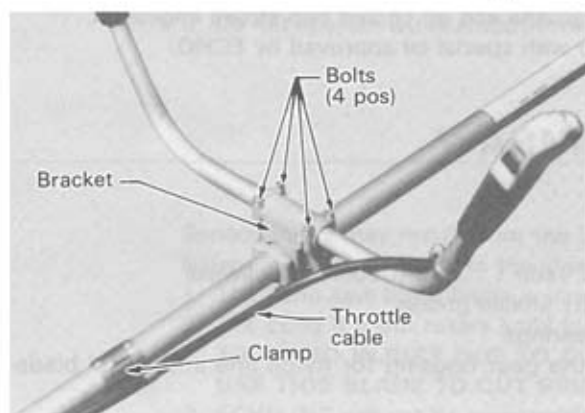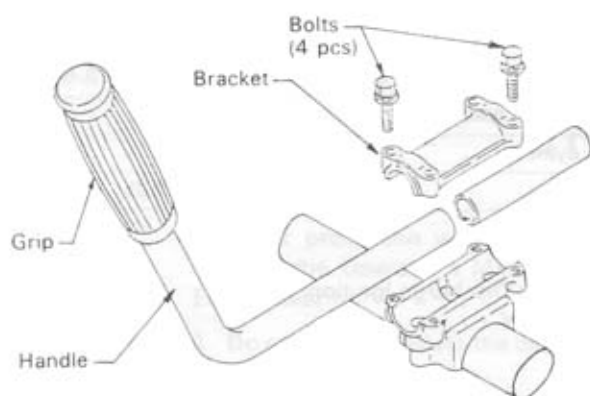

THROTTLE CABLE

The engine is delivered with throttle cable (engine side) separated, assemble the cable to carburetor as follows.

- Remove the cover.
- Remove nut (A) and one washer from throttle cable.
- Insert throttle cable through the hole of fancover as shown.
- Replace washer and nut (A) finger tight, and attach the inner cable to swivel on throttle lever ensuring that the nipple fits into socket provided on one side of slot.
- Tighten nut (A) to secure in this position.
- Check that throttle operates freely and returns to idle position.
- Do not loosen nut (B) unnecessarily, since it has been located properly at the factory.
- Install the cover.

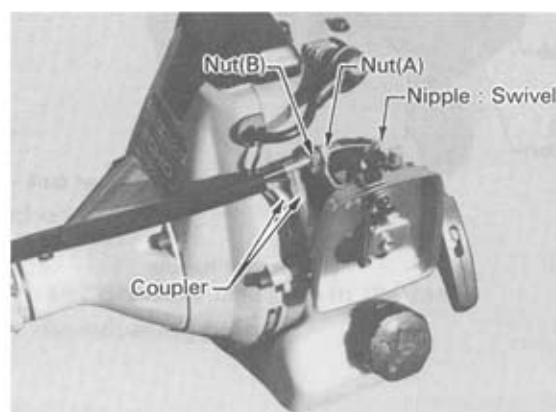

- Connect stop lead and ground lead by couplers.


ADJUSTABLE HANDLE (SRM-4600 only)

Model SRM-4600 is equipped with adjustable handle and vibration insulator.

- Vibration Insulator installation.
 - Remove four bolts from handle retainer.
 - Set the vibration insulator with four (4) bolts as shown. (Reverse side).
- Adjustable Handle installation
 - Install the U handle on handle retainer at convenient angle for operation.
 - You can control each length of both sides of handle as required by loosening bolt (A).
 - After adjusting handle location, Tighten all bolts securely.



WARNING

Never start engine without driveshaft assembly installed. This could result in serious injury.

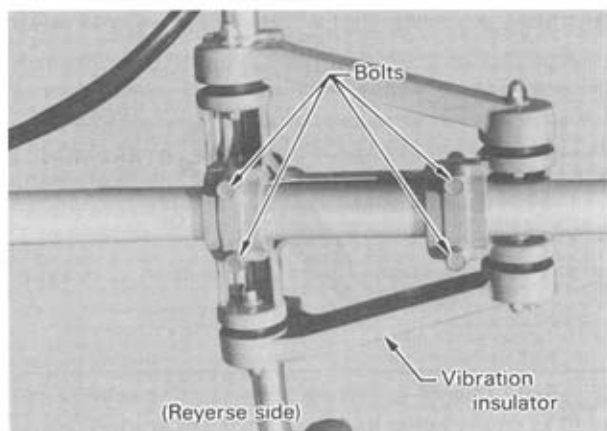


SHIELD

Fit the shield on the gear housing and tighten screws with washers (Seven points) as shown.

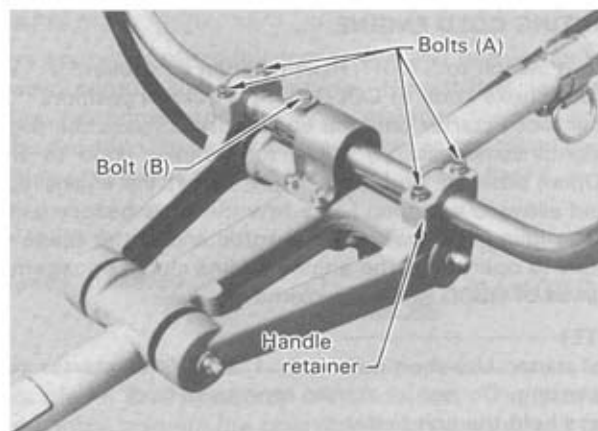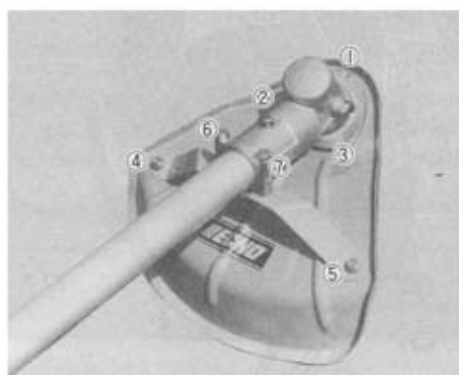

SHOULDER HARNESS

- Fit the shoulder strap to the swivel hook, and adjust the length of strap and or the location of the clamps to maintain the cutter head parallel to the ground.

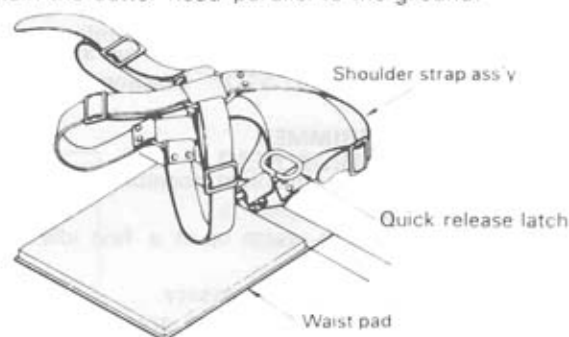


OPERATION

- Check for loose nuts, bolts and screws before using the unit every use.

FUEL

- Fuel used for this model is a mixture of regular leaded grade gasoline and ECHO brand motor oil.
- Mixture ratio is
Gasoline 32 parts: Oil 1 part.
 - Fuel mixture at a rate other than 32 : 1 may cause malfunction of the engine.
 - Pour 1/2 of the gasoline into a safe container, add oil and mix thoroughly.
 - Now add the remainder of gasoline and mix again.
 - Do not use motor oil other than that recommended above.
 - Do not mix directly in engine fuel tank.
- After refueling, secure the fuel tank cap and wipe all spilled fuel with a dry cloth.

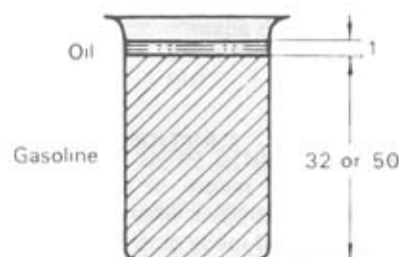

Fuel mix chart

(NOTE)

50:1 Ratio is applicable with special oil approved by ECHO.

Normal Use

Leaded Fuel, Regular Grade

Alternate or Emergency Use

Unleaded Regular Fuel—Min. Octane 87 ($\frac{M+R}{2}$)
Do not Use Gasohol!

(32 : 1)				(50 : 1)			
US		METRIC		US		METRIC	
GAS	OIL	GAS	OIL	GAL	OIL	GAS	OIL
GAL.	FL.OZ.	LITERS	CC	GAL.	FL.OZ.	LITERS	CC
1	4.0	4	160	1	2.6	4	80
2	8.0	8	320	2	5.1	8	160
5	20.0	20	800	5	12.8	20	400

STARTING COLD ENGINE

- Turn switch to START/RUN position as shown.
Turn choke knob to COLD START (Close) position.
- Pull recoil starter until the engine fires. (Squeeze the trigger slightly as necessary.) Now, turn choke knob to RUN (Open) position, and if necessary, restart the engine again and allow to warm up for a few minutes before using.
- After idling, gradually open throttle and cutter blade will start to operate as the engine attains clutch engagement speed of 3500 RPM approximately.

(NOTE)

Recoil starter: Use short pulls—only 1/2–2/3 of starter rope for starting. Do not let starter rope snap back in. Always hold the unit firmly.

STARTING WARM ENGINE

- When engine is warm, start it by pulling recoil starter rope with switch positioned at START/RUN. (Keep choke lever in RUN (Open) position)
- If engine does not start in a few tries, follow same procedures as starting a cold.

STOPPING ENGINE

- Release throttle trigger and allow to run at an idle speed.
- Turn ignition switch to "STOP" position.

OPERATING THE TRIMMER




- Adjust handle to a convenient position for cutting as instructed on page 3.
- Allow the engine to warm up at a fast idle for a few minutes.
- Increase engine speed as necessary.
- When mowing shrubs, weeds, or grass, swing the cutter head from right to left as you move forward.
 - Avoid striking any obstruction such as rocks, stones or tree stumps which can damage the cutter head. Do not cut into the ground.
 - To avoid damage to the engine, do not run the engine unloaded at full throttle.
- In the event that the cutter strikes an obstruction or is otherwise prevented from rotating in normal operation, the clutch will slip to prevent possible engine damage. In this case, stop the engine, free the cutter and then start the operation again.

CAUTION

Do not allow either people or animals into the work area. Always wear safety goggles when cutting. Dress properly—Avoid loose clothing.

When grass or weeds have clogged the cutter head affecting normal operation, first, stop the engine and then remove the debris.

- Before starting up the engine, make sure that the cutter blade is not contacting anything.
- When two or more operators are working together, ensure that a safe distance is kept between them.

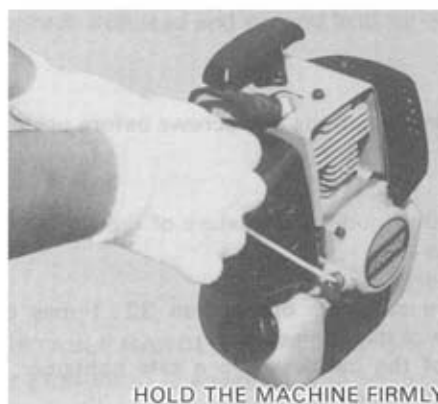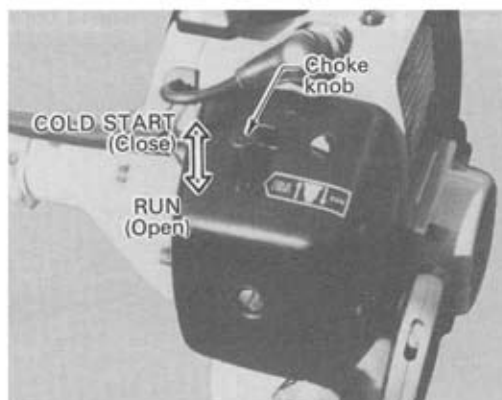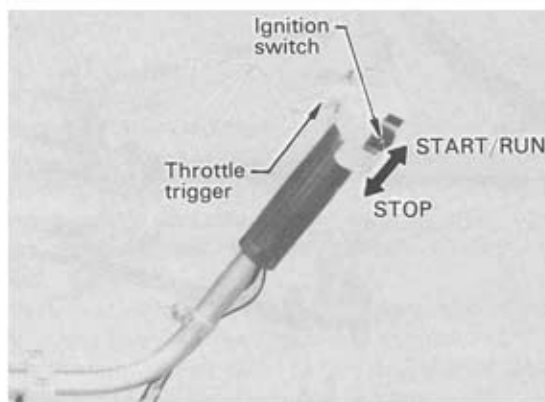

WARNING

Never start engine without driveshaft assembly installed. This could result in serious injury.

OPERATING INSTRUCTIONS (NYLON LINE-METAL BLADES)

Your brushcutter/trimmer, has been designed and constructed to give you years of trouble-free service and relieve you of the many back-aching tasks normally associated with grass trimming, weed control and brushcutting. Nevertheless, in common with all other power operated tools, the Owner and/or Operator has a definite responsibility to maintain the safe working condition of the unit as provided by the manufacturer, and to ensure also the safe operating procedures as prescribed by common sense and this manual. Please, therefore, read and understand the instructions as listed hereunder, and on Page 2, in order to prevent accidents and possible injury.


ECHO 2-LINE MANUAL TRIMMER HEAD Part Number 21560060



DANGER


Grass/Weed Trimmers can throw gravel, stone, wood chips, glass, and plastic or metal objects. The debris shield behind the trimmer head stops much of the debris, but cannot prevent the operator from being struck by some debris. Read the Rules for Safe Operation in the Operator's Manual that you received with your ECHO Trimmer. Also, follow all instructions in this instruction sheet.

1. Read the Operator's Manual carefully. Be thoroughly familiar with the controls and proper use of the trimmer. Know how to stop the unit and disengage the controls.
2. Never allow children to operate the trimmer.
3. Never allow adults to use the trimmer unless they have received proper instructions. Be sure the operator is properly attired and wears the type of foot, leg, head, eye and ear protection recommended both in your ECHO Operator's Manual and by your ECHO Servicing Dealer.
4. Always wear eye protection that conforms to A.N.S.I. Z87.1-1979.

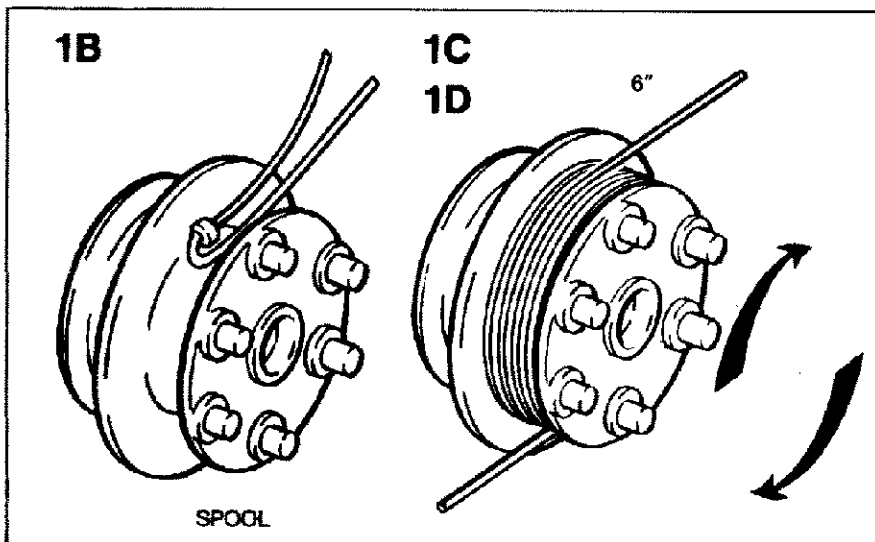

1. REPLACING LINE

- A. Remove spool by turning knob clockwise, "right," and separating parts.
- B. Thread a 20' length of .095" or .105" Echo line through hole in spool so that ends are the same length.
- C. Wind both ends of line tightly and evenly clockwise (see arrows on spool), and wind from side to side without twisting the lines.
- D. Secure ends of line temporarily with about 6" extending out.

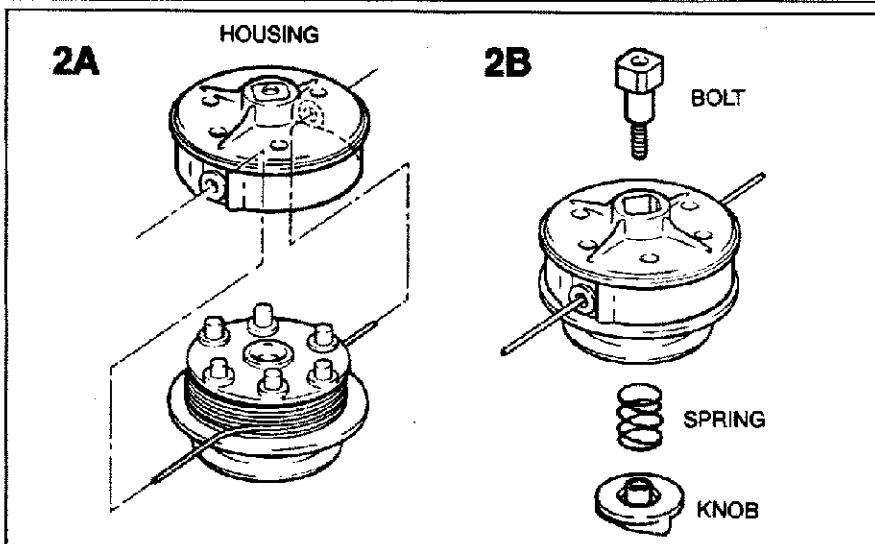

2. REPLACING SPOOL

NOTE: Keep line tight on spool.


- A. Snap spool into housing while pulling line through eyelets with about 6" extending out.

CAUTION: Knob tightens counterclockwise, "left."

- B. Fasten spool to housing with shaft bolt, spring, and knob.

INSTALLATION of NYLON LINE HEAD

Set the nylon line head to the drive shaft and tighten by turning as shown.

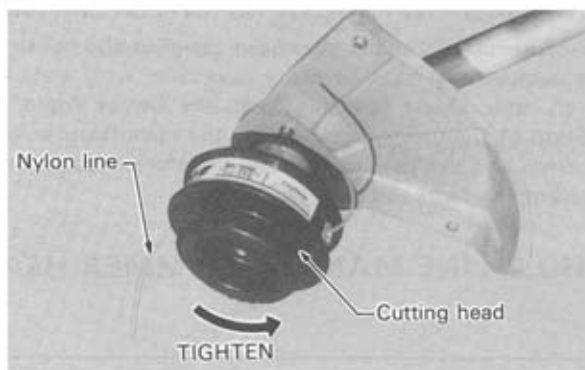

OPERATING INSTRUCTIONS nylon line

1. Always use the end of the line for cutting. Forcing the cutter head too close to the work will result in reduced efficiency and broken line.
2. Maintain the line at the recommended length of 5 to 6 inches. A longer line will reduce engine speed, a shorter line may result in engine damage.
3. The trimmer head rotates counterclockwise. Always cut with the head tilted to the right to deflect debris away from the operator.
4. Always observe the SAFETY RULES on Page 2 when using the unit.

SHOULDER HARNESS See Fig. 4

- Install the harness over the both shoulders and adjust shoulder straps so that the quick release latch rests low on the right hand side.
- Attach the trimmer/brushcutter to the harness by means of the quick release latch.
- Make some practice sweeps as with a trimmer and readjust the harness as necessary for comfort and to maintain the cutter parallel to the ground.

CUTTING PROCEDURES

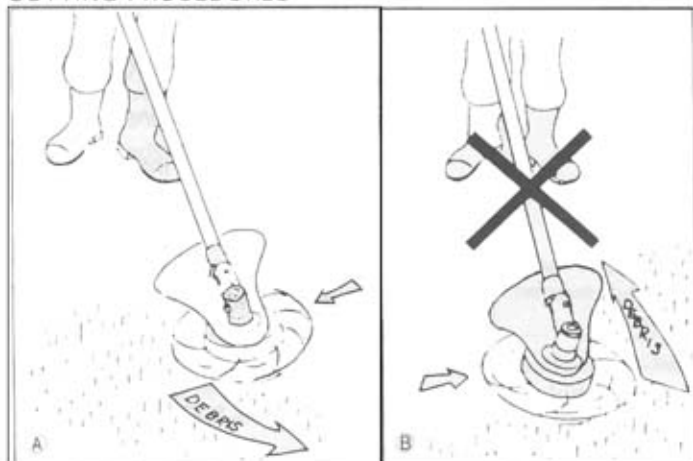


Fig. 4

ATTENTION

IN CASE OF EMERGENCY, PULL THE QUICK RELEASE LATCH TO DISCONNECT THE TRIMMER FROM THE HARNESS.

TRIMMING

The nylon line will allow you to trim along walls and fence lines. Always try to trim from right to left, walking behind the unit and parallel to the wall or fence, thus deflecting debris away from the operator. See Fig. 5

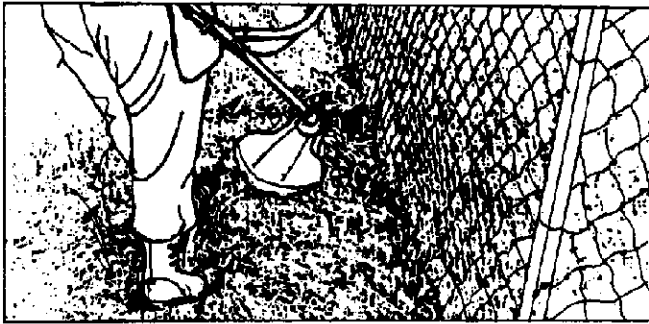


Fig. 5

EDGING

1. The nylon line is intended only to cut grass and should not be used to cut a normal edging trench along stone or concrete driveways etc.
2. Tilt the unit vertically as illustrated and use only the line tip to remove unwanted growth. See Fig. 6

EDGING

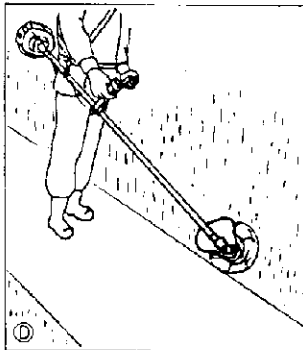


Fig. 6

MOWING

- The nylon line will effectively mow large areas of heavy grass and/or weeds. Use the standard 5–6 inches of line and operate at full throttle.
- When mowing cultivated areas such as lawns hold the cutter head parallel to the ground to avoid scalping. See Fig. 7

MOWING



Fig. 7

SCALPING

1. The cleaning of weeds and grass right down to the earth can be accomplished very easily with the nylon line.
2. Scalping around trees and bushes is particularly effective, but care should be exercised not to bruise the bark of young and sensitive growth.
3. In flower beds, always remember that the nylon line will cut in a complete circle to avoid cutting flowers instead of weeds. See Fig. 8

SCALPING

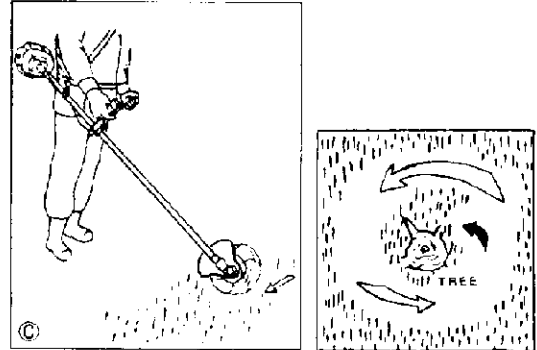


Fig. 8

SWEEPING

1. Sweeping grass and other debris from a hard surface can be done very quickly. See Fig. 9

SWEEPING

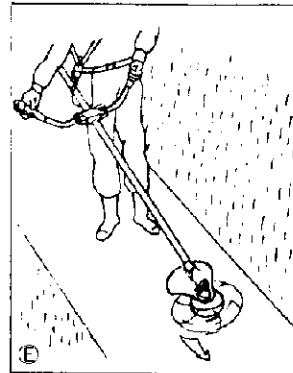


Fig. 9

STEEL BLADE OPERATIONS (Model SRM-3800/SRM-4600)

Your Echo Trimmer/Brushcutter is designed for fast, efficient weed and brush control in areas which are otherwise inaccessible to power equipment. Standard configuration includes a handle bar and nylon line head for light trimming and weed clearing. Two special steel blades are available as options and recommended for use in extended heavy weed and brush clearing operations: —

1. Blade: weed and grass	8 tooth	8" diameter	Part No. 696 001-2143 0
2. Blade: brush	80 tooth	10" diameter	Part No. 695 001-2143 0

WARNING

1. Serious injury may result from the improper use of steel blades. Read and comply with all safety instructions listed in this manual.
2. The eight tooth blade is designed specially to cut weed and grass. To avoid injury due to kickback or blade fracture, **DO NOT** use this blade to cut brush or trees.
3. ECHO Inc. will not be responsible for the failure of cutting devices which have not been tested and approved by ECHO for use with this unit.

SAFETY PRECAUTIONS

1. Always use the correct blade for the job as recommended.
2. Be careful not to hit rocks, stones, tree stumps or any foreign object which may damage the blade.
3. Do not cut into the ground to avoid dulling the blade.
4. Always stop the engine and examine the blade after striking an obstruction. Do not operate with a blade which is blunt, bent, fractured, or discolored due to overheat.
5. In the event, that the blade strikes an obstruction, or is otherwise prevented from rotating in normal operation, the centrifugal clutch will slip to prevent engine damage. In this case, stop the engine, free and examine the blade and if in good order, resume operation.
6. Should the brushcutter be operated for an extended period of high temperatures, the gear box may become very hot. If too hot to touch, allow the unit to cool down, check the lubrication as per 'Maintenance' and continue to operate if in order.
7. To avoid engine damage, do not run on full throttle without load.
8. Do not operate the brushcutter without the harness and debris shield correctly fitted.
9. Always inspect the work area and remove any foreign objects.

SHOULDER HARNESS See Fig. 10

- Install the harness over the both shoulders and adjust shoulder straps so that the quick release latch rests low on the right hand side.
- Attach the trimmer/brushcutter to the harness by means of the quick release latch.
- Make some practice sweeps as with a scythe and readjust the harness as necessary for comfort and to maintain the cutter parallel to the ground.

ATTENTION

IN CASE OF EMERGENCY, PULL THE QUICK RELEASE LATCH TO DISCONNECT THE TRIMMER FROM THE HARNESS.



SHIELD

When using a metal blade, Use same shield as Nylon line.

INSTALLING THE BLADE

1. The installation of the 8 tooth weed/grass blade and the 80 tooth brush blade is exactly the same. See Fig. 11

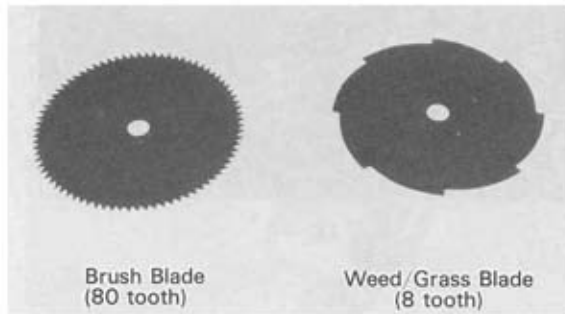


Fig. 11

2. Rotate the drive shaft until the holes in the upper fixing plate and the gear box are aligned. Insert the locking tool. See Fig. 12

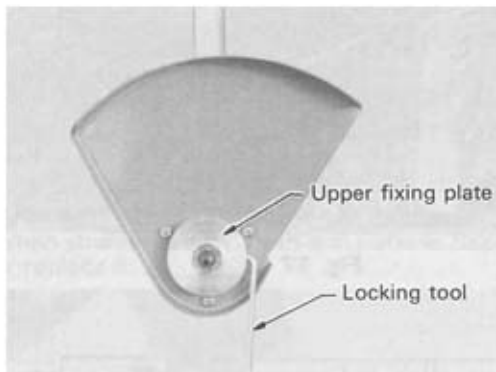


Fig. 12

3. Remove the nylon line head, if fitted, by turning in a clockwise direction.
4. Install the blade ensuring that it is centered correctly on the fixing plate. See Fig. 13

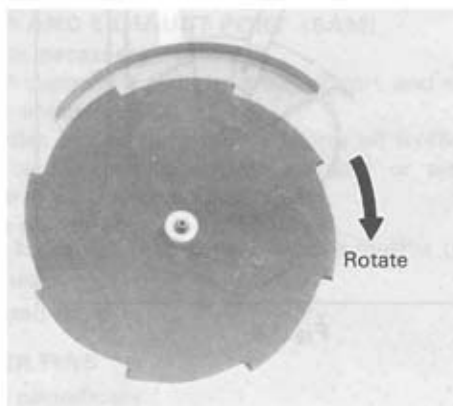


Fig. 13

5. Fit the lower fixing plate and tighten the locking nut using the box wrench supplied in the tool kit. See Fig. 14

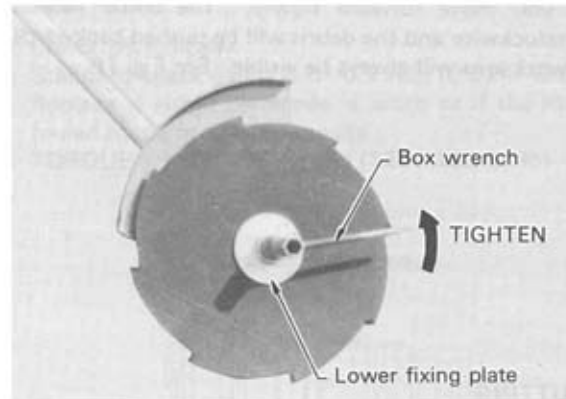


Fig. 14

6. Fit a new split pin as supplied in the tool kit to secure the locking nut.

NOTE

- The drive shaft is fitted with left hand threads, therefore turn counterclockwise to tighten as illustrated. See Fig. 14
- Always use a new split pin to secure the locking nut.
Split pin 2 x 22 mm
Part No. 898502 01130. See Fig. 15


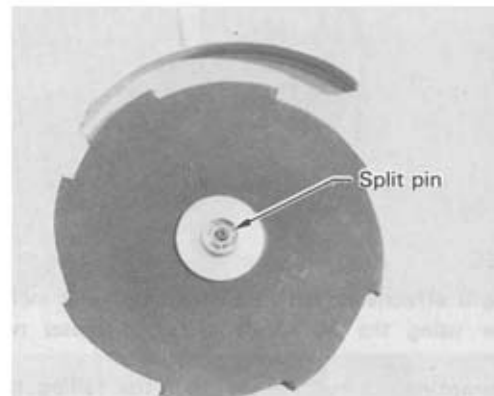


Fig. 15

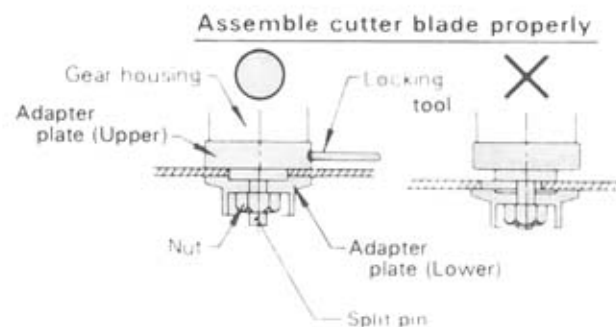

HEAVY WEED CUTTING

- Install the eight (8) tooth 8" blade.
- Observing all precautions as listed in this manual, start the engine and using full throttle, swing the blade in an arc as you move forward slowly. The cutter rotates counterclockwise and the debris will be pushed backwards so the work area will always be visible. See Fig. 16



Fig. 16

BRUSHCUTTING

- Install the 80 tooth blade.
- Proceed exactly as for weed and grass cutting. See Fig. 17



Fig. 17

SMALL TREES

- The unit will effectively cut small trees up to 3 inches in diameter using the 80 tooth 10 inch diameter new blade.
- Before attempting to cut, ensure that the falling tree will fall away from you, and if necessary, tie a rope to the tree and have an assistant pull it in a safe direction.
- Do not attempt to "plunge cut", i.e. using the brushcutter like an axe. It is not necessary and may cause serious damage to the brushcutter. See Fig. 18
- Brace your feet firmly on the ground and cut with the left hand side of the blade.

CAUTION

1. Always cut on full throttle.
2. Never try cutting with a blunt blade.

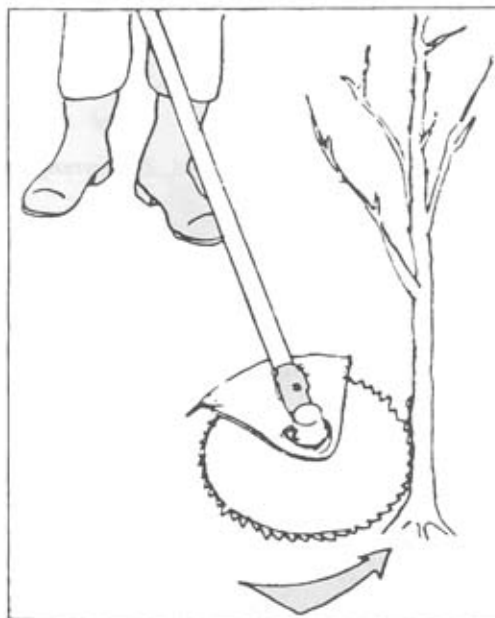



Fig. 18

MAINTENANCE AND CARE

ALWAYS KEEP THE UNIT CLEAN

AIR FILTER

- Clean before using the unit.
 - Remove the cover. (for air filter and carburetor)
 - Take off the air filter.
 - Brush off dust lightly or wash it in suitable cleaning fluid.
 - When you wash it in a solvent, dry it completely before putting back in place.

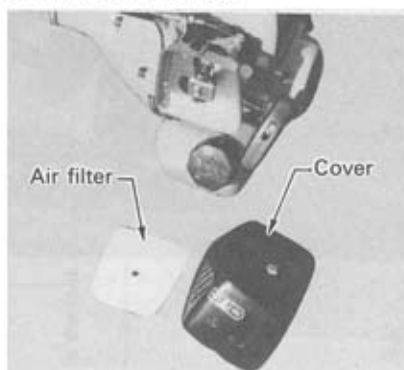

SPARK PLUG


- Check periodically.
- Standard spark gap is 0.6–0.7 mm (0.024–0.028 in).
- Replace if either electrode is worn or if the insulator is fouled by oil or other deposits.
- TORQUE : 145–155 kg-cm (125–135 in. lb)

CAUTION
Do not over torque.




FUEL STRAINER

- Check periodically.
 - Do not allow dust to enter into fuel tank.
 - Clogged strainer will cause difficulty in starting engine or abnormalities in engine performances.
 - Pick up fuel strainer through fuel inlet port with a piece of steel wire or the like.
 - When strainer is dirty, wash it in suitable cleaning fluid or replace it.

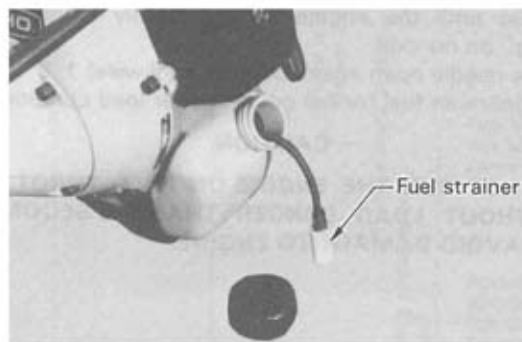


GEAR HOUSING

- Remove the bolt every 50 hours and check.
- Replenish as necessary, but do not overfill.
 - Shell delpena or good quality lithium multi grease is recommendable.

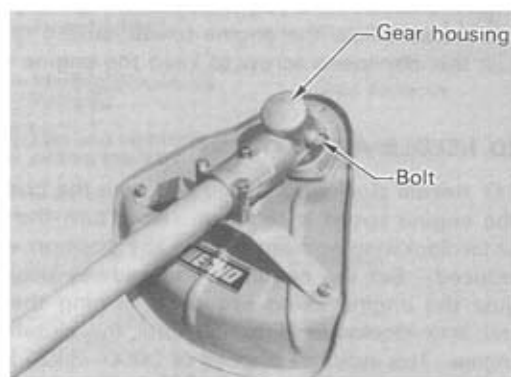

MUFFLER AND EXHAUST PORT (SAM)

- Clean as necessary.
- Carbon deposits in cylinder exhaust port and muffler will reduce engine output.
 - Muffler can be removed by taking off muffler cover.
 - Be careful not to scratch cylinder or piston when cleaning cylinder exhaust port.
 - Use non-ferrous plastic or wood.
- Check loose nuts and screws on the muffler part before every use.
 - Retighten them firmly if necessary.

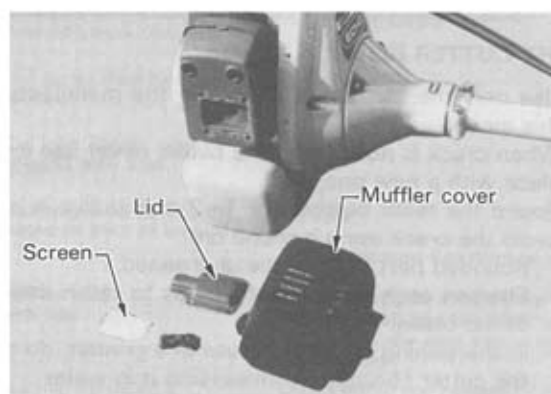

CYLINDER FINS

- Check periodically.
- Clogged fins will result in poor engine cooling.
- Remove dirt and dust from between fins to let cooling air pass easily.

CARBURETOR

- Carburetor is set at the factory. So normally, further adjustment is unnecessary. If readjustment is required, refer to the following instructions.

The diaphragm carburetor has three external adjustments, and to some extent, the adjustment of each will affect the other two. It will be necessary, therefore, to readjust each until satisfactory performance is achieved.

1. Idle speed adjusting screw.

This adjustment controls the throttle opening in the idle position.

2. Low (LO) speed needle.

The low speed needle controls the volume of fuel/oil mixture at low engine speed. It also controls the supplementary fuel required to obtain smooth progression from idling to high speed.

3. High (HI) speed needle.

The high speed needle controls the volume of fuel/oil mixture at full throttle opening.

Turn both 'HI' and 'LO' needles clockwise until fully closed.



ADJUSTING THE CARBURETOR

INITIAL SETTING HI AND LO NEEDLES

Turn both HI and LO needles clockwise to seat lightly in the carburetor body.

CAUTION

The needle screws have a sharp point. To avoid carburetor damage, do not use excessive force.

Unscrew the 'LO' needle one complete turn.

Turn the idle speed adjustment screw clockwise until the throttle is slightly open.

Start the engine and run for a few minutes on high idle until the engine is warm. Allow the engine to idle, and if necessary, readjust the idle speed screw to keep the engine from stalling.

'LO' SPEED NEEDLE ADJUSTMENT

Turn the 'LO' needle clockwise slowly and note the position at which the engine speed is reduced. Now turn the 'LO' needle counterclockwise and again note the position when speed is reduced. Set the needle in the midway position. Finally, adjust the engine idling speed by turning the idle speed screw in a clockwise direction until the clutch just begins to engage. This indicates a speed of 3000–3400 RPM. Now reduce engine speed by turning the screw counterclockwise half a turn.

'HI' SPEED NEEDLE ADJUSTMENT

Engine must be at normal operating temperature.

Turn the 'HI' needle counterclockwise 1-1/4 turns.

Run the engine at full throttle and turn the 'HI' needle slowly clockwise until the engine runs smoothly without "four stroking" on no load.


Turn the needle open again (counterclockwise) 1/8" turn to obtain optimum fuel for full power under load conditions.

CAUTION

DO NOT RUN THE ENGINE ON FULL THROTTLE WITHOUT LOAD LONGER THAN 5-6 SECONDS TO AVOID DAMAGE TO ENGINE.

EIGHT CUTTER BLADE

- Use only the blade designated by the manufacturer for this model.
- When crack is noticed on the blade, never use it, but replace with a new one.
- Round the teeth bottom for 1–2 mm radius in order to avoid the crack using a round file.
 - Rounded part is not to be sharpened.
 - Sharpen each cutter equally so as to retain the balance of the blade.
 - In sharpening the edge by use of a grinder, do not cool the cutter abruptly by immersing it in water.

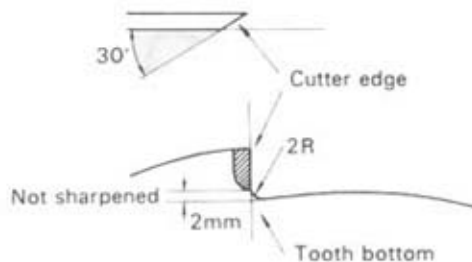

MAGNETO

The unit is incorporated with a CDI (Capacitor Discharge Ignition) system, which does not require adjustment of ignition timing and the contact breaker point gap. Ensure wire connections and couplers assembling.

TROUBLE SHOOTING

Poor performance of the engine and/or trimming mechanism can normally be prevented by carefully following instructions. Poor performances can easily be corrected even by a beginner.

When the engine does not function properly check the following three (3) points first.

- Is engine compression adequate?
- Is fuel system in good condition and is enough fuel being supplied?
- Is electrical system in good condition and is a spark plug operating normally?

When there is serious trouble with the unit, donot try to repair it yourself but have your distributor or dealer do it for you.

For detailed **TROUBLE SHOOTING** refer to tables 1 and 2. Locate the problem on the following charts and repair as necessary.

Table 1


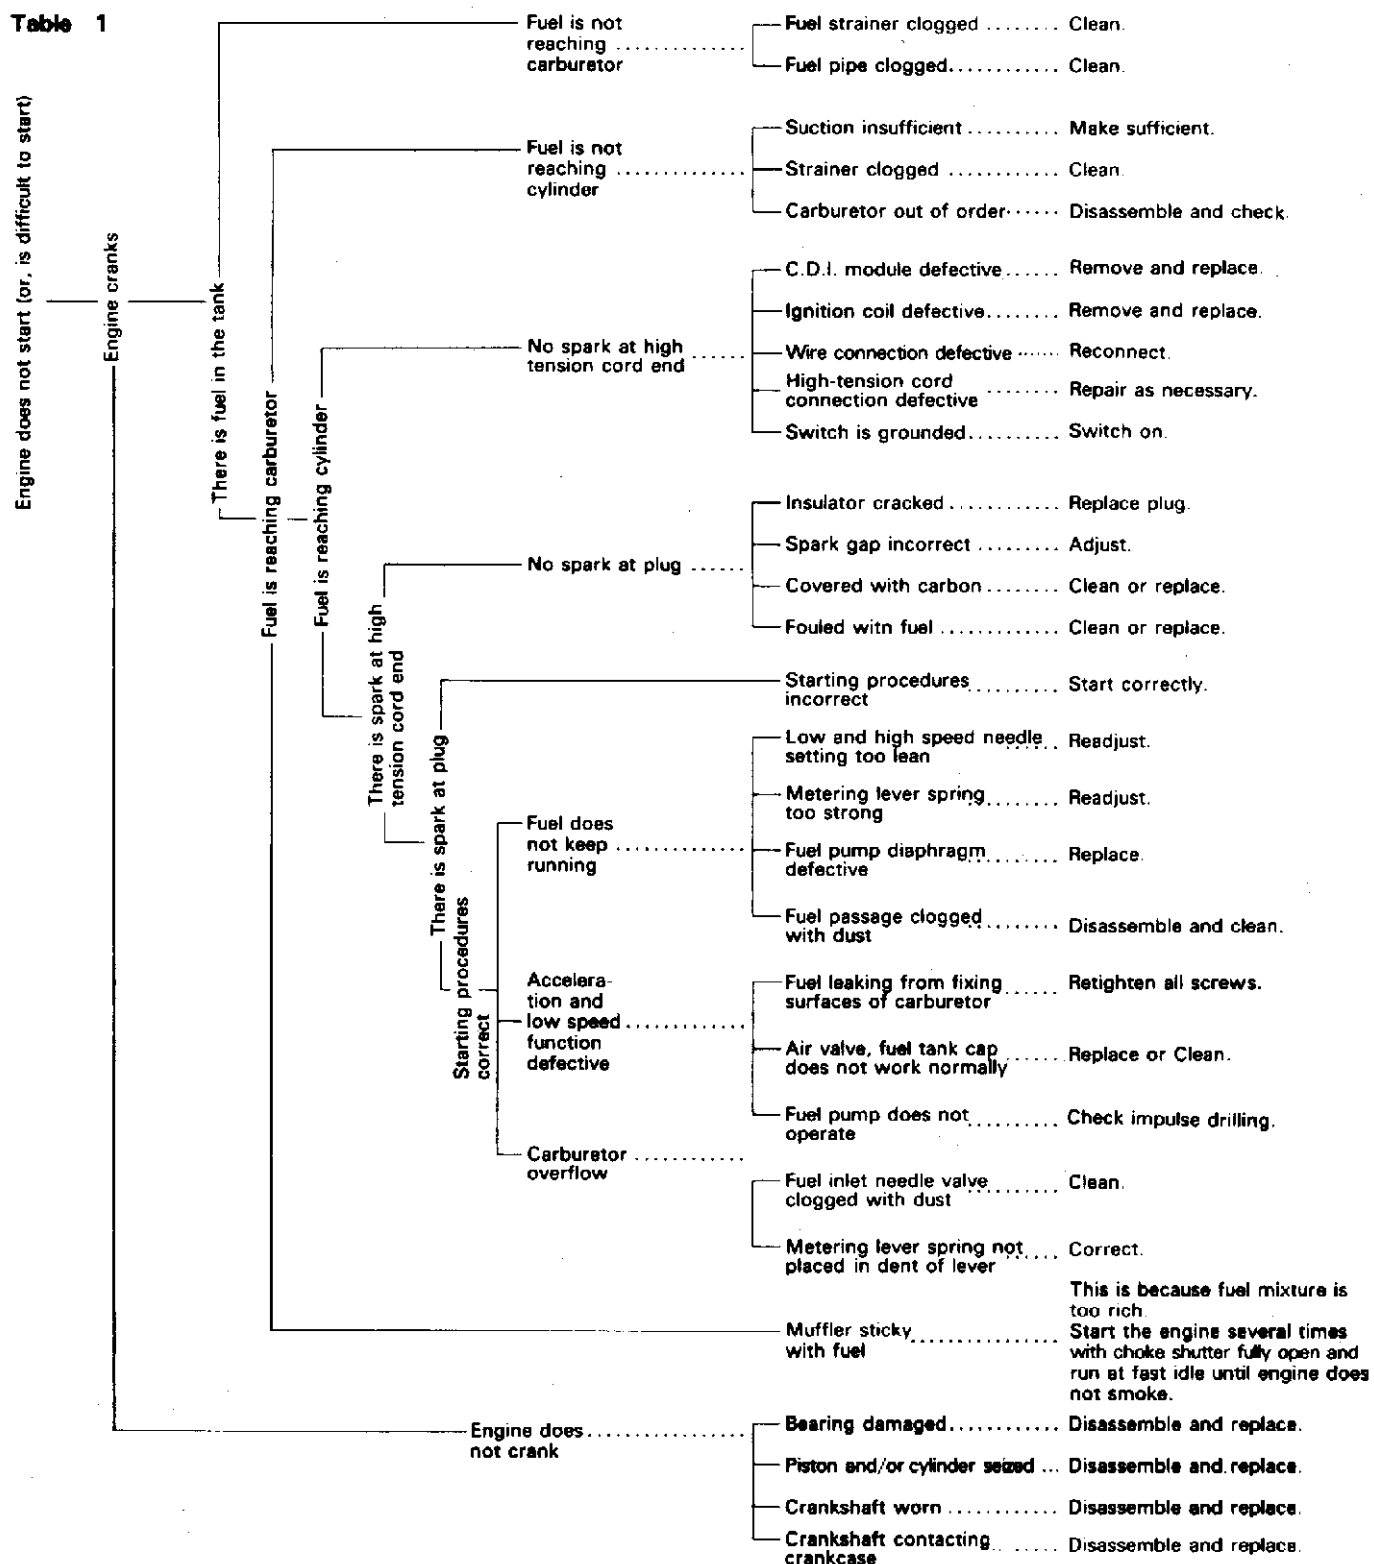


Table 2

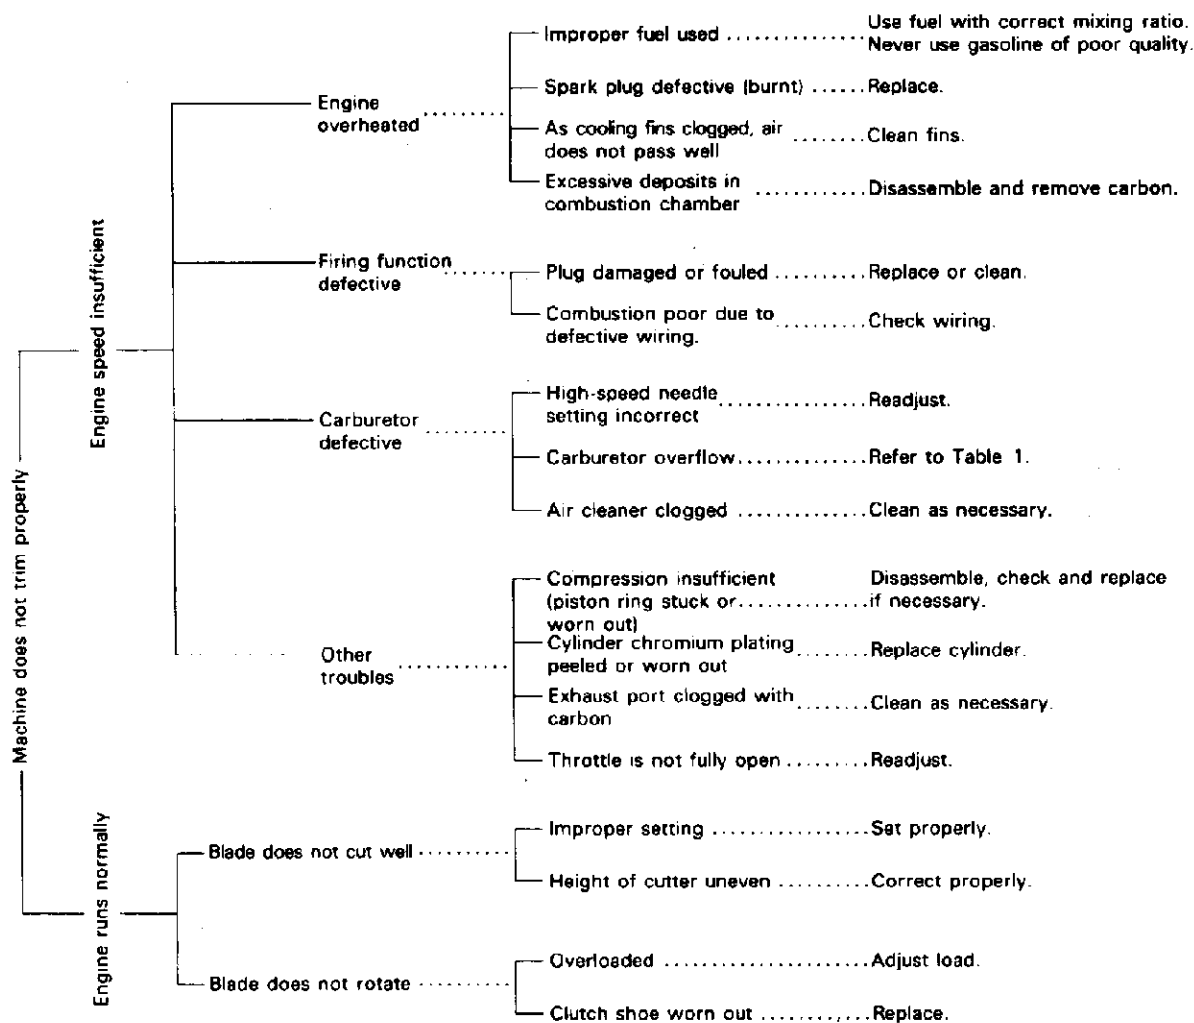

LONG TERM STORAGE

- Inspect and adjust every part of the unit.
 - Completely clean every part, and repair, if necessary.
 - Apply thin coating of oil on metal parts to prevent rust.
 - Remove the cutter head, apply sufficient oil coating and wrap up in plastic.
- Drain fuel tank, pull starter handle slowly a few times to drain fuel from carburetor.
- Pour a small amount of clean motor oil into spark plug hole, pull starter handle and then crank the engine until TOP DEAD CENTER.
- Store in a dry area, from dust.