



Operator's Manual

GT-225, GT-225i, GT-225SF, GT-225L Grass Trimmers



WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.



WARNING

Read and understand all provided literature before use. Failure to do so could result in serious injury.



Note: This product complies with CAN ICES-2/NMB-2.

TABLE OF CONTENTS

Introduction.....	3
Servicing Information.....	4
Parts and Serial Number.....	4
Service	4
ECHO Consumer Product Support	4
Product Registration.....	4
Additional Literature	4
Safety	5
Manual Safety Symbols and Important Information	5
International Symbols.....	6
Personal Condition and Safety Equipment	8
Equipment	12
Emissions Control	14
CARB and EPA Emission Control Information	14
Description	15
Contents	17
Assembly	18
Shield Installation	18
Support Handle	18
Nylon Line Installation	19
Operation.....	20
Fuel	21
Starting Cold Engine	24
Starting Warm Engine	26
Stopping Engine	28
Applications	29
Operating Techniques - Nylon Line Head	29
Maintenance.....	30
Skill Levels	30
Maintenance Intervals	31
Air Filter	32
Fuel Filter	33
Spark Plug.....	34
Cooling System	35
Exhaust System	36
Carburetor Adjustment	38
Lubrication.....	40
Nylon Line Replacement: GT-225SF and GT-225.....	40
Nylon Line Head Disassembly Instructions	42
Troubleshooting.....	43
Storage.....	45
Transportation	45
Short-Term Storage	45
Long-Term Storage (Over 30 Days)	45
Specifications	47
Product Registration	65

INTRODUCTION

Specifications, descriptions, and illustrative material in this literature are as accurate as possible. Specifications are subject to change without notice. Illustrations might include optional equipment and accessories, and might not include all standard equipment. Your equipment might appear slightly different than pictured equipment.



Read and understand all provided literature. Literature contains specifications and information for safety, operation, maintenance, storage, and assembly specific to this product. Scan QR codes for more information.



For additional literature, including safety manuals where applicable, or questions regarding terms used in this manual, visit:

<https://www.echo-usa.com/manuals>



OR


<https://www.shindaiwa-usa.com/manuals>



SERVICING INFORMATION

Parts and Serial Number

Genuine ECHO parts and assemblies for your ECHO products are available only from an Concessionnaire de Service Agréé. When you do need to buy parts, always have the model number and serial number of the unit with you. Image shows serial number location. For future reference write them in the space provided below.

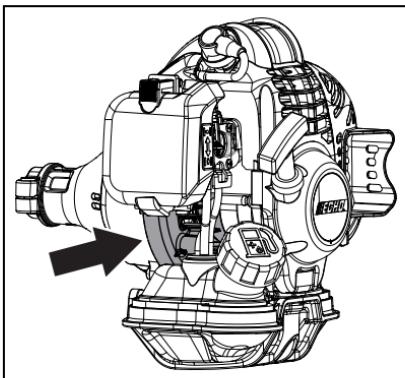

Model No. _____ Serial No. _____

Service

Service of this product during the warranty period must be performed by an Authorized Service Dealer. For the name and address of the Authorized Service Dealer, nearest you, ask your retailer or call 1-800-432-ECHO (3246). Authorized Service Dealer information is also available on our website <https://www.echo-usa.com>. When presenting your unit for warranty service/repairs, proof of purchase is required.

ECHO Consumer Product Support

If you require assistance or have questions concerning the application, operation, or maintenance of this product, call the ECHO Consumer Product Support Department at 1-800-432-ECHO (3246) from 8:00 a.m. to 5:00 p.m. (Central Standard Time) Monday through Friday. Before calling, please know the model and serial number of your unit.

Product Registration

Register your ECHO equipment online at <https://www.echo-usa.com> or by filling out the product registration sheet included in this manual. Registering your product confirms warranty coverage and provides a direct link to ECHO if we find it necessary to contact you.

Additional Literature

In addition to finding information online, information is available from your Concessionnaire de Service Agréé, or by contacting ECHO Incorporated, 400 Oakwood Road, Lake Zurich, IL 60047, 1-800-432-ECHO (3246).

SAFETY

Manual Safety Symbols and Important Information

Throughout this manual and on the product itself, you will find safety alerts and helpful, informational messages preceded by symbols or key words. The following is an explanation of those symbols and key words and what they mean to you.

DANGER

*The safety alert symbol accompanied by the word “DANGER” calls attention to an act or condition which **WILL** lead to serious personal injury or death if not avoided.*

WARNING

*The safety alert symbol accompanied by the word “WARNING” calls attention to an act or condition which **COULD** lead to serious personal injury or death if not avoided.*

CAUTION

*The safety alert symbol accompanied by the word “CAUTION” calls attention to an act or condition which **might** lead to minor or moderate personal injury if not avoided.*

NOTICE

The enclosed message provides information necessary for the protection of the unit.


Note: This enclosed message provides tips for use, care and maintenance of the unit.



CIRCLE AND SLASH SYMBOL

This symbol means the specific action shown is prohibited. Ignoring these prohibitions can result in serious or fatal injury.

International Symbols

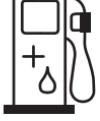Symbol	Description	Symbol	Description
	Warning, see operator's manual.	H	Carburetor Adjustment - high speed mixture
	Wear eye, ear and head protection.	T	Carburetor Adjustment - idle speed
	Wear hand and foot protection.	L	Carburetor Adjustment - low speed mixture
	Safety/Alert		STOP switch
	Hot surface		Fuel and oil mixture
	Do not allow flames or sparks near fuel.		Ignition ON / OFF
	Do not smoke near fuel.		Purge bulb
	Choke control run position (choke open)		Choke Control COLD START position (choke closed)
	Keep feet away from blade.		Rotating cutting attachment

Symbol	Description	Symbol	Description
	Thrown objects		Direction of blade
	Do not use line heads - Blades only		Do not use blades - Line heads only
 	<p>Avoid kickout Keep bystanders at least 15 m (50 ft.) Away</p> <p>Beware thrown objects. Wear eye protection</p>		
	Keep bystanders and helpers away 15 m (50 ft.)		

Note: Not all symbols will appear on your unit.



Personal Condition and Safety Equipment

WARNING

Cancer and Reproductive Harm

<https://www.P65Warnings.ca.gov>

WARNING

The muffler or catalytic muffler and surrounding cover may become extremely hot. If unit is equipped with muffler, always keep clear of exhaust and muffler area, otherwise serious personal injury might occur.

WARNING

Users of this product risk injury to themselves and others if the unit is used improperly and/or safety precautions are not followed. Proper clothing and safety gear must be worn when operating unit.

Physical Condition

Your judgment and physical dexterity may not be good:

- If you are tired or sick
- If you are taking medication
- If you have taken alcohol or drugs

Operate unit only if you are physically and mentally well.

Eye Protection

WARNING

- Eye protection that meets ANSI Z87.1 or CE requirements must be worn whenever you operate the unit.
- For additional safety, a full-face shield (not included) can be worn over safety glasses or goggles to provide protection from sharp branches or flying debris.

Hand Protection

Wear sturdy, no-slip, rubber work gloves to improve your grip on the handles. Gloves also provide protection against cuts and scratches, cold environments, and reduce the transmission of machine vibration to your hands.

Hearing and Ear Protection

ECHO recommends wearing personal protective equipment whenever unit is used.

Breathing Protection

Operators who are sensitive to dust or other common airborne allergens may need to wear a dust mask to prevent inhaling these materials while operating unit. Dust masks can provide protection against dust, plant debris, and other plant matter such as pollen. Make sure the mask does not impair your vision, and replace the mask as needed to prevent air restrictions.

Proper Clothing

Wear snug-fitting, durable clothing:

- Pants should have long legs, shirts should have long sleeves.
- Do not wear shorts.
- Do not wear ties, scarves, jewelry, or clothing with loose or hanging items that could become entangled in moving parts or surrounding growth.
- Keep clothing buttoned or zipped, and keep shirt tails tucked in.
- Wear sturdy work shoes with nonskid rubber soles.
- Do not wear open toed shoes.
- Do not operate unit with bare feet.
- Keep long hair away from engine and air intake. Retain hair with cap or net.

Heavy protective clothing can increase operator fatigue, which may lead to heat stroke. Schedule heavy work for early morning or late afternoon hours when temperatures are cooler.

WARNING

The components of this machine generate an electromagnetic field during operation, which can interfere with some pacemakers. To reduce the risk of serious or fatal injury, persons with pacemakers should consult with their physician and the pacemaker manufacturer before operating this machine. In the absence of such information, ECHO does not recommend the use of this machine by anyone who has a pacemaker.

Extended Operation and Extreme Conditions

CAUTION

Prolonged exposure to cold and/or vibration can result in injury. Read and follow all safety and operation instructions to minimize risk of injury. Failure to follow instructions can result in painful wrist/hand/arm injuries.

It is believed that a condition called Raynaud's Phenomenon, which affects the fingers of certain individuals, may be brought about by exposure to vibration and cold. Exposure to vibration and cold may cause tingling and burning sensations, followed by loss of color and numbness in the fingers. The following precautions are strongly recommended, because the minimum exposure which might trigger the ailment is unknown.

- Keep your body warm, especially the head, neck, feet, ankles, hands, and wrists.
- Maintain good blood circulation by performing vigorous arm exercises during frequent work breaks, and also by not smoking.
- Limit the hours of operation. Try to fill each day with jobs where operating the unit or other hand-held power equipment is not required.
- If you experience discomfort, redness, and swelling of the fingers followed by whitening and loss of feeling, consult your physician before further exposing yourself to cold and vibration.

Repetitive Stress Injuries (RSI)

It is believed that overusing the muscles and tendons of the fingers, hands, arms, and shoulders may cause soreness, swelling, numbness, weakness, and extreme pain in those areas. Certain repetitive hand activities may put you at a high risk for developing a Repetitive Stress Injury (RSI). An extreme RSI condition is Carpal Tunnel Syndrome (CTS), which could occur when your wrist swells and squeezes a vital nerve that runs through the area. Some believe that prolonged exposure to vibration may contribute to CTS. CTS can cause severe pain for months or even years.

To reduce the risk of RSI/CTS, do the following:

- Avoid using your wrist in a bent, extended, or twisted position. Instead try to maintain a straight wrist position. Also, when grasping, use your whole hand, not just the thumb and index finger.
- Take periodic breaks to minimize repetition and rest your hands.
- Reduce the speed and force with which you do the repetitive movement.
- Do exercises to strengthen the hand and arm muscles.
- Immediately stop using all power equipment and consult a doctor if you feel tingling, numbness, or pain in the fingers, hands, wrists, or arms. The sooner RSI/CTS is diagnosed, the more likely permanent nerve and muscle damage can be prevented.



DANGER

All overhead electrical conductors and communications wires can have electricity flow with high voltages. This unit is not insulated against electrical current. Never touch wires directly or indirectly, otherwise serious injury or death can result.

DANGER

Do not operate gas-powered products indoors or in inadequately ventilated areas. Engine exhaust contains poisonous emissions and can cause serious injury or death.

Read the Manuals

- Provide all users of this equipment with literature for instructions on Safe Operation.

Clear the Work Area

- Always clear the work area of foreign objects such as rocks, broken glass, nails, wire, or string, and check for any hidden hazards. Spectators and fellow workers must be warned, and children and animals prevented from coming nearer than 15 m (50 ft.) while the unit is in use.
- Outside the 15 m (50 ft.) zone, there is still a risk of injury from thrown objects.
- Bystanders should be encouraged to wear eye protection.
- If you are approached, stop the engine and cutting attachment.

Keep a Firm Grip

- Always hold throttle handle and support handle with thumbs and fingers tightly encircling the handles.

Keep a Solid Stance

- Maintain footing and balance at all times. Do not stand on slippery, uneven or unstable surfaces. Do not work in odd positions or on ladders. Do not over reach.
- Keep cutting attachment below waist.
- Keep all body parts away from rotating cutting attachment

Avoid Hot Surfaces

- Keep exhaust area clear of flammable debris. Avoid contact during and immediately after operation.



Equipment

WARNING

Use only approved attachments. Serious injury may result from the use of a non-approved attachment combination. ECHO Incorporated will not be responsible for the failure of cutting devices, attachments or accessories which have not been tested and approved by ECHO Incorporated. Read and comply with all safety instructions.

- Do not attempt to modify this product. Serious injury can result from the use of any modified product.

- Check unit for loose or missing nuts, bolts, and screws. Tighten or replace as needed.
- Inspect shield for damage and ensure that shield is properly installed, and that the cut-off knife is securely in place. Replace if either is damaged or missing.
- Check that the cutting attachment is firmly attached and in safe operating condition.
- Ensure that manufacturer recommended flexible non-metallic line is installed in the trimmer head.
- Ensure that throttle trigger, throttle trigger lockout, and stop switch all work properly.
- Check that handle and harness (if included) are installed and adjusted for safe, comfortable operation. See Assembly Section for proper adjustment.

WARNING

Moving parts can amputate fingers or cause severe injuries.

Keep hands, clothing and loose objects away from all openings.

- Always stop engine, disconnect spark plug, and make sure all moving parts have come to a complete stop before disassembling unit, removing obstructions, clearing debris, or servicing unit.
- Do not connect spark plug lead to spark plug until unit is ready for use.
- Do not start or operate unit unless all guards and protective covers are properly assembled to unit.
- Never reach into any opening while the engine is running. Moving parts may not be visible through openings.
- Position wiring safely to prevent snagging, separation of connectors, or breakage during operation. Gather excess wire, and secure with wiring clamp if provided on equipment, or tuck behind the air filter area. Do not place wiring directly against hot engine components.
- Check wiring and connectors for nicks, cuts, exposed wire, or other damage, and repair or replace as needed. Exposed wire or connectors can cause shocks, sparks, and risk of fire or explosion, resulting in serious injury.
- Check wire terminals for secure connections.

WARNING

Periodically check fuel system (fuel lines, vent, grommet, fuel tank, and fuel cap) for leaks especially if the unit is dropped. If damage or leaks are found, do not use unit, otherwise serious personal injury or property damage may occur. Have unit repaired by an Authorized Service Dealer before using.

EMISSIONS CONTROL

CARB and EPA Emission Control Information

The emission control system for the engine is EM (engine modification) and, if the second to last character of the Engine Family on the Emission Control Information label (sample below) is "B", "C", "K", or "T", the emission control system is EM and TWC (3-way catalyst). The fuel tank/fuel line emission control system is EVAP (evaporative emissions). Evaporative emissions for California models are only applicable to fuel tanks and fuel feed lines.

An **Emission Control Label** is located on the engine. (This is an EXAMPLE ONLY, information on label varies by engine FAMILY).

EMISSION CONTROL INFORMATION
ENGINE FAMILY: ECHXS.0214EQ DISPLACEMENT: 21.2cc
EMISSION COMPLIANCE PERIOD: 50Hours
THIS ENGINE MEETS 2013 U.S. EPA EXH/EVP & CALIFORNIA EXH/EVP EMISSION REGULATIONS FOR S.O.R.E. REFER TO OWNER'S MANUAL FOR MAINTENANCE SPECIFICATIONS AND ADJUSTMENTS.

YAMABIKO CORP. MMM/YYYY 

EMISSION CONTROL INFORMATION
ENGINE FAMILY: ECHXS.0214KL DISPLACEMENT: 21.2cc
EMISSION COMPLIANCE PERIOD: 300Hours
THIS ENGINE MEETS 2012 U.S. EPA EXH/EVP & CALIFORNIA EXH/EVP EMISSION REGULATIONS FOR S.O.R.E. REFER TO OWNER'S MANUAL FOR MAINTENANCE SPECIFICATIONS AND ADJUSTMENTS.

YAMABIKO CORP. MMM/YYYY 


Product Emission Durability (Emission Compliance Period)


The 50 or 300 hour emission compliance period is the time span selected by the manufacturer certifying the engine emissions output meets applicable emissions regulations, provided that approved maintenance procedures are followed as listed in the Maintenance Section of this manual.

DESCRIPTION

Locate the safety decal(s) or etching(s) on your unit. Make sure they are legible, and that you understand and follow the instructions. If any cannot be read, replacements can be ordered from your ECHO dealer.

Images shown here and throughout the manual are for example only. Your unit might appear slightly different.

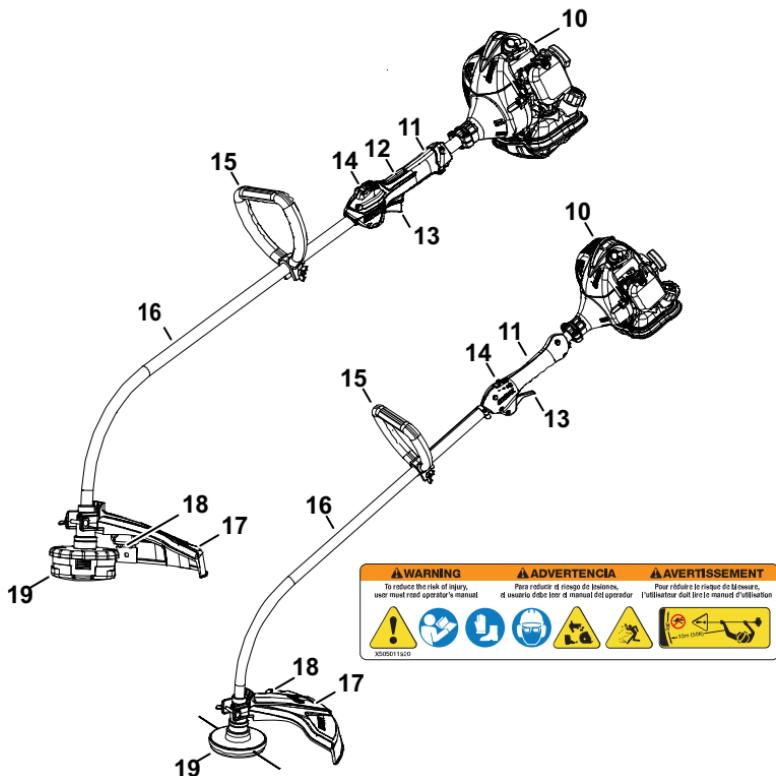

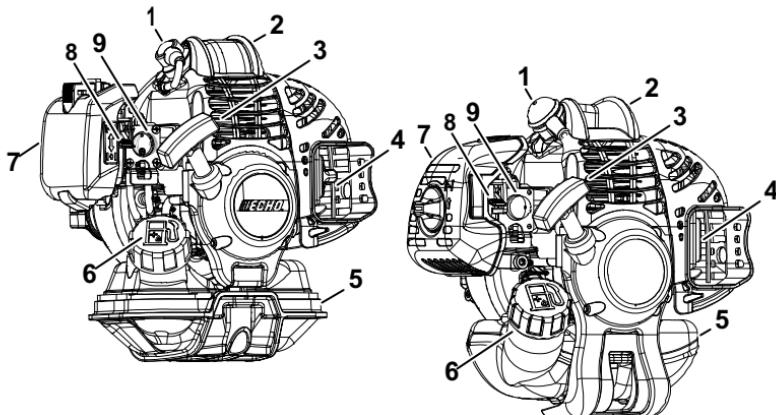

1. Spark plug
2. Top guard
3. Recoil starter/handle
4. Spark arrester muffler or spark arrester muffler with catalyst
5. Fuel tank
6. Fuel tank cap
7. Air filter
8. Choke lever
9. Purge bulb
10. Power head
11. Throttle handle - for right hand
12. Throttle trigger lockout*
13. Throttle trigger
14. Stop switch
15. Support handle - for left hand
16. Drive shaft assembly
17. Debris shield with cut-off knife
18. Cut-off knife
19. Nylon line head

* Not all units include throttle trigger lockout.

CONTENTS

The ECHO product you purchased has been factory pre-assembled for your convenience. Due to packaging restrictions, some assembly may be necessary.

After opening the carton, check for damage. Immediately notify your retailer or ECHO Dealer of damaged or missing parts. Use the contents list to check for missing parts.

- 1 Power head / Drive shaft assembly
- 1 Quick start guide
- 1 Warranty statement
- 12 Pieces of pre-cut line*
- 1 Shield assembly**

*Not included with SF or L models.

**Some models might be factory pre-assembled.

ASSEMBLY

Shield Installation

Parts required: Shield assembly.

Note: Shield is pre-installed on some units.

⚠ WARNING


Cut-off knife on debris shield has sharp edges. Avoid contact or serious injury can occur.

⚠ CAUTION

Wear gloves or personal injury may result:

- ***Cut-off knife is sharp.***
- ***Gear case and surrounding area may be hot.***


1. Remove wing nut (A), washer (B), and bolt (C).
2. Snap the shield over the bearing housing.
3. Install bolt (C), washer (B), and wing nut (A).

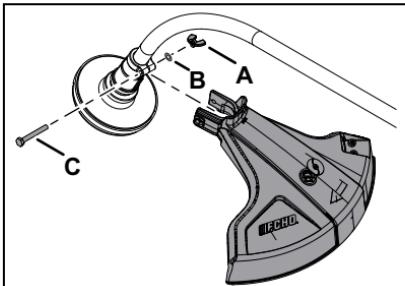

Support Handle

The support handle is pre-installed. Reposition and tighten as required.

1. Position support handle (A) in comfortable operating position. Label (B) shows minimum spacing for support handle location.
2. Tighten wing nut (C).

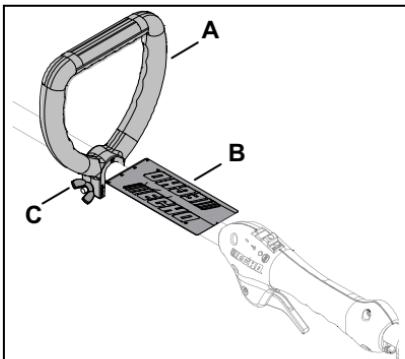


Nylon Line Installation

⚠️ WARNING

Never use wire or wire-rope that can break off and become a dangerous projectile. Serious injury can occur.

GT-225 and GT-225i models only.
For GT-225SF and GT-225L
models, see Maintenance section
for line replacement.

1. Shut engine off. Lay unit on the ground with head assembly up.
2. Insert one piece of trimmer line (A) through eyelet (B) on each side of head. Route line as shown.

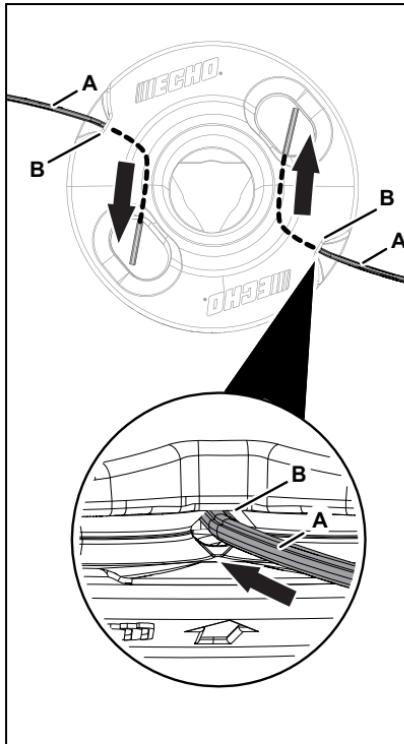

OPERATION

WARNING

Moving parts can amputate fingers or cause severe injuries. Keep hands, clothing and loose objects away from all openings. Always stop engine, disconnect spark plug, and make sure all moving parts have come to a complete stop before removing obstructions, clearing debris, or servicing unit.

WARNING

Engine exhaust is hot, and contains Carbon Monoxide (CO), a poison gas. Breathing CO can cause unconsciousness, serious injury, or death. Exhaust can cause serious burns. Always position unit so that exhaust is directed away from your face and body.

WARNING

Operation of this equipment may create sparks that can start fires around dry vegetation. This unit is equipped with a spark arrester to prevent discharge of hot particles from the engine. Metal cutters can also create sparks if the cutter strikes rocks, metal, or other hard objects. Contact local fire authorities for laws or regulations regarding fire prevention requirements.

Fuel

WARNING

Diesel fuels and alternative fuels, such as E15 (15% ethanol), E85 (85% ethanol) or any fuels not meeting ECHO requirements are not approved for use in ECHO two-stroke or hybrid four-stroke gasoline engines. Use of diesel or alternative fuels may cause performance problems, loss of power, overheating, fuel vapor lock, and unintended machine operation, including, but not limited to, improper clutch engagement. Diesel or alternative fuels may also cause premature deterioration of fuel lines, gaskets, carburetors and other engine components.

Fuel Requirements

Gasoline - Use fresh (purchased within the last 30 days from the pump) 89 Octane [R+M/2] (mid grade or higher) gasoline known to be good quality. Gasoline may contain up to 10% Ethanol (grain alcohol) or 15% MTBE (methyl tertiary-butyl ether). Gasoline containing methanol (wood alcohol) is not approved. Use of ECHO branded fuel is recommended to extend engine life in all air-cooled two-stroke and two or four-stroke hybrid engines.

Two-Stroke Oil - A two-stroke engine oil, such as ECHO branded two-stroke oils, meeting ISO-L-EGD (ISO/CD 13738) and J.A.S.O. FD Standards must be used. ECHO branded two-stroke oils meet these standards. Engine problems due to inadequate lubrication caused by failure to use an ISO-L-EGD (ISO/CD 13738) and J.A.S.O. M345-FD certified oil will void the two-stroke engine warranty.

WARNING

Two-stroke engine oil contains petroleum distillates and other additives that may be harmful if swallowed. Heated oil can release vapors that can cause flash fire, or ignite with explosive force. Read and follow the oil manufacturer's instructions, and observe all safety warnings and precautions for handling flammable liquids. For more detailed safety and first aid information, visit <https://www.echo-usa.com> for a copy of the Material Safety Data Sheet.

- Keep out of reach of children.
- If swallowed, do not induce vomiting. Call physician or a poison control center immediately.
- Wear safety glasses when mixing or handling.

- Avoid repeated or prolonged skin contact.
- Avoid inhaling oil mists or vapors.

NOTICE

ECHO branded two-stroke oils may be mixed at 50:1 ratio for application in all ECHO engines sold in the past, regardless of ratio specified in those manuals.

Handling Fuel

⚠ DANGER

Fuel is flammable. Use extreme care when mixing, storing or handling, or serious personal injury may result.

- Use an approved fuel container.
- Do not smoke near fuel.
- Do not allow flames or sparks near fuel.
- Fuel tanks/cans may be under pressure. Always loosen fuel caps slowly allowing pressure to equalize.
- Never refuel a unit when the engine is hot or running.
- Do not fill fuel tanks indoors. Always fill fuel tanks outdoors over bare ground.
- Do not overfill fuel tank. Wipe up spills immediately.
- Securely tighten fuel tank cap and close fuel container after refueling.
- Inspect for fuel leakage. If fuel leakage is found, do not start or operate unit until leakage is repaired.
- Use caution when handling fuel. Mix and pour fuel outdoors where there are no sparks and flames. Slowly remove the fuel cap only after stopping the engine and allowing the unit to cool. Do not smoke while fueling or mixing fuel. Move the unit at least 3 m (10 ft.) from the fueling point before starting the engine.

⚠ DANGER

Gasoline vapor is heavier than air, and can travel along the ground to nearby sources of ignition such as electrical motors, pilot lights, and hot or running engines. Vapors ignited by an ignition source can flash back to the fuel container, resulting in an explosion, fire, serious or fatal injuries, and extensive property damage.

Mixing Instructions

1. Fill an approved fuel container with half of the required amount of gasoline.
2. Add the proper amount of engine oil to gasoline.
3. Close container and shake to mix oil with gasoline.
4. Add remaining gasoline, close fuel container, and remix.

FUEL TO OIL MIX – 50:1 RATIO			
US		Metric	
Gas	Oil	Gas	Oil
gal.	fl. oz.	L	cc
1	2.6	5	100
2	5.2	10	200
5	13	25	500

NOTICE

Spilled fuel is a leading cause of hydrocarbon emissions. Some states may require the use of automatic fuel shut-off containers to reduce fuel spillage.

After use - Empty the fuel tank prior to storing the unit. Return unused fuel to an approved fuel storage container.

Storage - Fuel storage laws vary by locality. Contact your local government for the laws affecting your area. As a precaution, store fuel in an approved, airtight container. Store in a well-ventilated, unoccupied building, away from sparks and flames.

NOTICE

Stored fuel ages. Do not mix more fuel than you expect to use in thirty days or ninety days when a fuel stabilizer is added.

NOTICE

Stored two-stroke fuel may separate. Always shake fuel container thoroughly before each use.

NOTICE

Used oil and gasoline, and soiled towels are hazardous waste materials. Disposal laws vary by locality.


Starting Cold Engine

⚠ WARNING


The attachment will operate immediately when the engine starts, and could result in possible serious injury. Keep movable parts of the attachment away from objects that could become entangled or thrown, and surfaces that could cause loss of control.

All Units

1. Move stop switch (A) forward, away from the STOP position.

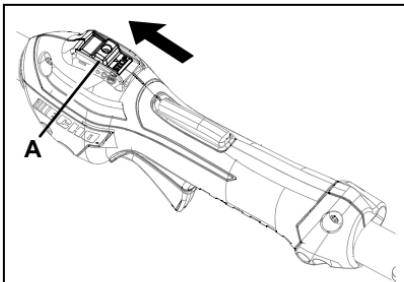

2. Move choke lever (B) to COLD START position.
3. Pump purge bulb (C) until fuel is visible and flows freely in the clear fuel tank return line. Pump bulb an additional four or five times.

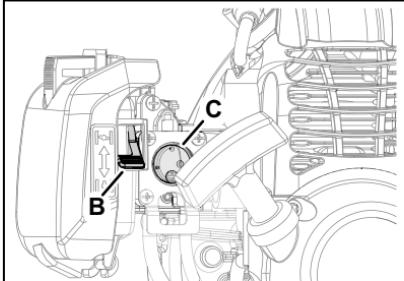


GT-225i Model Only

NOTICE

Energy is stored in the starter spring each time the handle/rope is pulled. Generally two to six pulls, using light pulling force, will store enough energy to engage the starter and spin the engine. Do not pull the rope out to end stop.

1. Lay the unit on a flat area and keep movable attachment parts clear of all obstacles. Firmly grasp throttle handle and throttle trigger lockout (if equipped) with left hand and fully depress throttle trigger to wide open position. Gently pull recoil starter handle/rope (D) until engine starts or two to three engine engagements.
2. After engine starts, or two to three engine engagements, move choke (B) to the RUN (open) position. Firmly grasp throttle handle and throttle trigger lockout (if equipped) with left hand and fully depress throttle trigger to wide open position. Gently pull starter handle/rope until engine starts and runs. Release throttle trigger and allow unit to warm up at idle for several minutes.

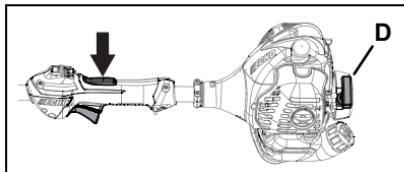

Note: If engine does not start with choke in RUN position after two to three engine engagements, repeat procedure.

All Other Units

1. Lay the unit on a flat area and keep movable attachment parts clear of all obstacles. Firmly grasp throttle handle and throttle trigger lockout (if equipped) with left hand and fully depress throttle trigger to wide open position. Rapidly pull recoil starter handle/rope (D) until engine starts (or maximum five pulls).
2. After engine starts (or five pulls), move choke to the RUN (open) position. Firmly grasp throttle handle and throttle trigger lockout (if equipped) with left hand and fully depress throttle trigger to wide open position. Pull starter handle/rope until engine starts and runs. Release throttle trigger and allow unit to warm up at idle for several minutes.

Note: If engine does not start with choke in RUN position after five pulls, repeat procedure.

All Units

After engine warm-up, grip throttle handle and support handle. Depress the throttle trigger lockout (if equipped), and gradually depress throttle trigger to increase engine RPM to operating speed.

Starting Warm Engine

The starting procedure is the same as Cold Start instructions except do not close the choke, and do not hold throttle trigger fully depressed.


WARNING

The attachment should not move at idle, otherwise serious personal injury might result.


Note: If attachment moves, readjust carburetor according to Carburetor Adjustment instructions in this manual or see your ECHO dealer.

All Units

1. Move stop switch (A) forward, away from the STOP position.

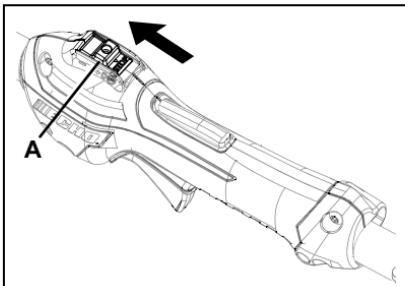

2. Pump purge bulb (B) until fuel is visible in the clear fuel return line. Pump bulb an additional four or five times.

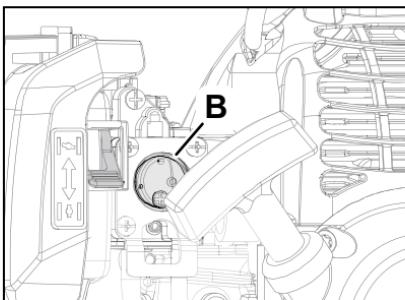


GT-225i Model Only

NOTICE

Energy is stored in the starter spring each time the handle/rope is pulled. Generally two to six pulls, using light pulling force, will store enough energy to engage the starter and spin the engine. Do not pull the rope out to end stop.

Lay the unit on a flat area and keep movable attachment parts clear of all obstacles. Firmly grasp throttle handle and throttle trigger lockout (if equipped) with left hand and fully depress throttle trigger to wide open position. Gently pull recoil starter handle/rope (D) until engine starts or two to three engine engagements.

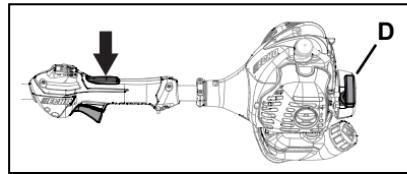

Note: If engine does not start after two to three engine engagements, use cold start Procedure.

All Other Units

Lay the unit on a flat area and keep movable attachment parts clear of all obstacles. Firmly grip throttle handle and throttle trigger lockout (if equipped) with left hand. Rapidly pull recoil starter handle/rope (D) until engine starts.


Note: If engine does not start after five pulls, use Cold Start Procedure.

Stopping Engine

⚠ WARNING

If engine does not stop when stop switch is moved to STOP position, close choke - COLD START position - to stall engine. Have your ECHO dealer repair stop switch before using unit again.

1. Release throttle trigger and allow engine to return to idle before shutting off engine.
2. Move stop switch button (A) back to STOP position.

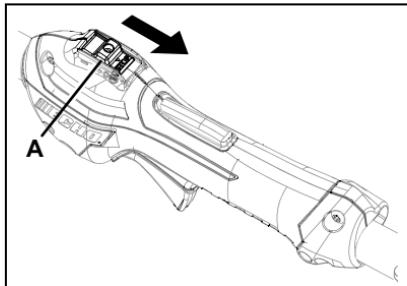

Applications

WARNING

Do not install blades on GT (Curved Shaft) trimmers.

Operating Techniques - Nylon Line Head

Nylon line heads may be used for trimming, scything, edging, and scalping of grass and light weeds.

Note: Units with Speed-Feed[®] line heads only: To advance trimmer line, tap trimmer head against the ground while the head is turning at normal operating speed.

Trimming

Feed the spinning line into the material to be cut. Tilt cutting head to the left while cutting to direct debris away from the operator.

Scything

Scything - Swing the cutting head in a level arc, gradually feeding the line into the material being cut. Move forward with each arc to cut a swath.

Width of cutting swath depends on arc. Use a larger arc for a wider swath, or a smaller arc for a narrow swath. Keep line head tilted to direct cutting debris forward or away from you.

Edging and Scalping

Both of these are done with the nylon line cutting head tilted at a steep angle. Scalping is removing top growth, leaving the earth bare. Edging is trimming the grass back where it has spread over a pavement or driveway. During both edging and scalping, hold the unit at a steep angle in a position where the debris, and any dislodged dirt and stone, will not come back towards you even if it ricochets off the hard surface.

General

- Debris flows in direction of line head rotation. Change line head position to assure debris flow is directed away from operator.
- Keep cutting line away from wire fences to avoid entanglement.
- Operate trimmer only with cutting head below knee height.

MAINTENANCE

WARNING

Moving parts can amputate fingers or cause severe injuries. Keep hands, clothing and loose objects away from all openings. Always stop unit, disconnect spark plug or remove battery, and make sure all moving parts have come to a complete stop before removing obstructions, clearing debris, or servicing unit. Allow the unit to cool before performing maintenance or adjustments. Wear gloves to protect hands from sharp edges and hot surfaces.

WARNING

Operating a poorly maintained unit can result in serious injuries to operator or bystanders. Always follow all maintenance instructions as written, otherwise serious personal injury can result.

Your unit is designed to provide of trouble-free service. Perform regular scheduled maintenance. If you are unsure about the task, or are not equipped with the necessary tools, we recommend that you take your unit to an Authorized Service Dealer for maintenance. To help you decide whether you want to do it yourself or have the Authorized Service Dealer do it, each maintenance task has been graded. If a task is not listed, see your Authorized Service Dealer for repairs.

NOTICE

The use of emission control components other than those specifically designed for this unit is a violation of federal law.

Skill Levels

Level 1 = Easy to do. Common tools may be required.

Level 2 = Moderate difficulty. Some specialized tools may be required.

Level 3 = See your Authorized Service Dealer.

Click [HERE](#) or go to <https://www.echo-usa.com/products/maintenance-kit>

or

<https://www.shindaiwa-usa.com/you-can.aspx>

Maintenance Intervals

COMPONENT/SYSTEM	MAINTENANCE PROCEDURE	REQUIRED SKILL LEVEL	
Daily or Before Use			
Air Filter	Inspect/Clean *	1	
Choke Shutter			
Fuel System			
Cooling System	Inspect/Clean	2	
Recoil Starter Rope	Inspect/Clean *	1	
Screws/Nuts/Bolts	Inspect/Tighten/Replace *		
Every Refuel			
Fuel System	Inspect *	1	
3 Months			
Air Filter	Replace *	1	
Fuel Filter	Inspect *		
Fuel Cap Gasket			
Spark Plug	Inspect/Clean/Replace *	2	
Muffler Spark Arrester			
Cylinder Exhaust Port			
Drive Shaft (flex cable models)	Grease ¹	–	
Gear Housing	None		
Yearly			
Fuel Filter	Inspect/Replace *	1	
Fuel Cap Gasket	Replace *		

Note: Time intervals shown are maximum. Actual use and your experience will determine the frequency of required maintenance.

Maintenance Procedure Notes:

¹ Apply lithium-based grease every 25 hours of use.


* Replacement is recommended based on the finding of damage or wear during inspection.

Air Filter

Level 1.

Parts required: Tune-up kit.

1. Move stop switch to STOP position.
2. Allow unit to cool (if required).
3. Remove spark plug lead from spark plug.
4. Close choke (COLD START position) to prevent dirt from entering the carburetor throat when the air filter is removed. Brush accumulated dirt from air cleaner area.
5. Remove air filter cover (A).
Brush dirt from inside cover.
6. Lightly brush debris from air filter (B).
7. Soak heavily soiled air filters in water/detergent solution to loosen dirt, then brush lightly.
8. Rinse with clean water and allow to dry completely before reuse.

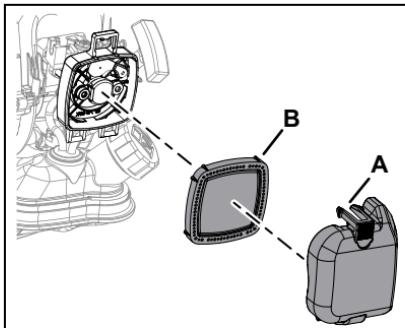

Note: Replace air filter (B) if it is damaged, fuel soaked, very dirty, or the rubber sealing edges are deformed.

9. Install air filter in air filter case.
10. Install air filter cover.

Fuel Filter

Level 1

Parts required: Tune-up kit.

DANGER


Fuel is flammable. Use extreme care when mixing, storing or handling, or serious personal injury may result.

1. Move stop switch to STOP position.
2. Allow unit to cool (if required).
3. Remove spark plug lead from spark plug.
4. Use a clean cloth to remove loose dirt from around fuel cap and empty fuel tank.

NOTICE

Do not damage fuel line while removing fuel filter from tank or line.

5. Pull the fuel filter (A) from the tank.
6. Do not remove the wire coil clamp to remove the fuel filter. Pinch the fuel filter with the fingers on one hand and the fuel line with the other hand.
7. Pull and twist slightly to separate.
8. Install the new filter in reverse order.

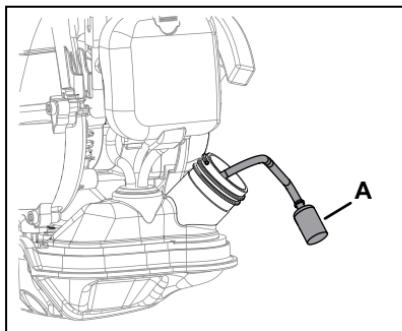

Note: Federal EPA regulations require all model year 2012 and later gasoline powered engines produced for sale in the United States to be equipped with a special low permeation fuel supply hose between the carburetor and fuel tank. When servicing model year 2012 and later equipment, only fuel supply hoses certified by EPA can be used to replace the original equipment supply hose. Fines up to \$37,500 may be enforced for using a non-certified replacement part.

Spark Plug


Level 2.

Parts required: Tune-up kit.

NOTICE

Use only NGK BPM8Y spark plug (BPMR8Y in Canada) otherwise severe engine damage may occur.

1. Move stop switch to STOP position.
2. Allow unit to cool (if required).
3. Remove spark plug lead from spark plug.
4. Remove spark plug and check for fouling, worn and rounded center electrode.
5. Clean the plug or replace with a new one. Do not sandblast to clean.
6. Adjust spark plug gap to 0.65 mm (0.026 in.).
7. Tighten spark plug to 130-170 kgf•cm (112-150 lbf•in.).

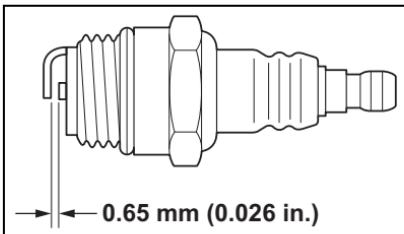

Cooling System

Level 2.

NOTICE


To maintain proper engine operating temperatures, cooling air must pass freely through the cylinder fin area. This flow of air carries combustion heat away from the engine.

Overheating and engine seizure can occur when:


- Air intakes are blocked, preventing cooling air from reaching the cylinder.
- Dust and grass build up on the outside of the cylinder. This build up insulates the engine and prevents the heat from leaving.

Removal of cooling passage blockages or cleaning of cooling fins is considered normal maintenance.

Any failure attributed to lack of maintenance is not warranted.

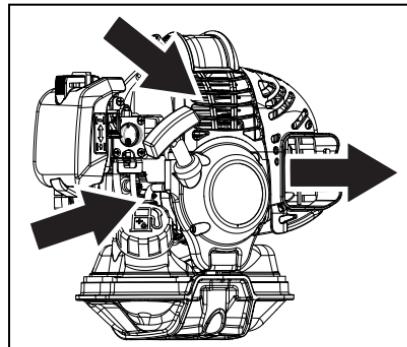


1. Move stop switch to STOP position.
2. Allow unit to cool (if required).
3. Remove spark plug lead from spark plug.
4. Close choke (COLD START position) to prevent dirt from entering the carburetor throat when the air filter is removed.
5. Remove air filter cover (A).
6. Remove engine cover (B).

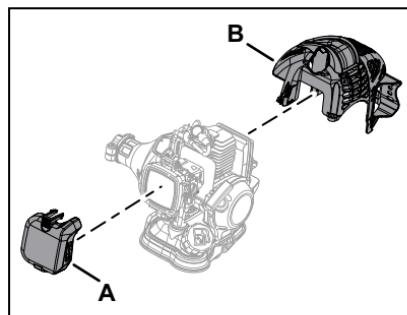


NOTICE

Do not use a metal scraper to remove dirt from the cylinder fins.

7. Use a nylon or plastic bristle brush to remove dirt from the cylinder fins (C).
8. Remove ignition wires from clip for cleaning.

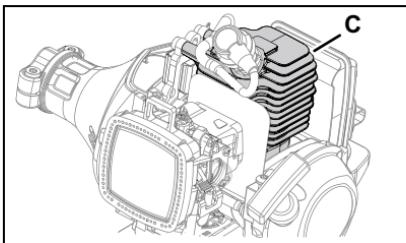

9. Remove grass and leaves from the grid between the recoil starter and fuel tank.
10. Assemble components in reverse order.

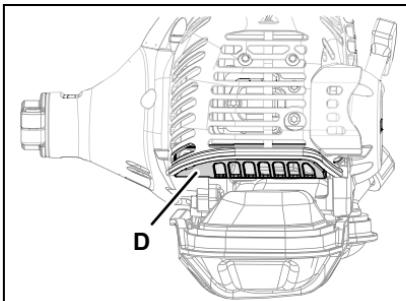


Exhaust System

Spark Arrester Screen

Level 2.

Parts required: Spark arrester screen, gasket.

1. Move stop switch to STOP position.
2. Allow unit to cool (if required).
3. Remove spark plug lead.
4. Remove engine cover.
5. Place piston at Top Dead Center (TDC) to prevent carbon/dirt from entering cylinder.
6. Remove spark arrester screen cover (A), gasket(s) (B), and screen (C), from muffler body.

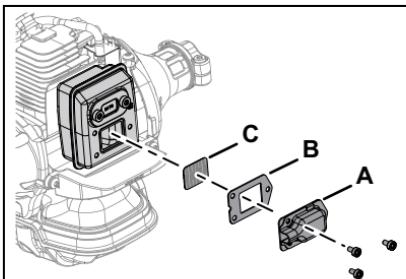

NOTICE

When cleaning carbon deposits, be careful not to damage the catalytic element inside muffler.


7. Clean carbon deposits from muffler components.
8. Replace screen if it is cracked, plugged, or has holes burned through.
9. Assemble components in reverse order.

Exhaust Port Cleaning

Level 2.

Parts required: Heat shield (as needed).


1. Move stop switch to STOP position.
2. Allow unit to cool (if required).
3. Remove spark plug lead from spark plug
4. Remove engine cover (A).
5. Place piston at top dead center.
Remove muffler (B) and heat shield (C).

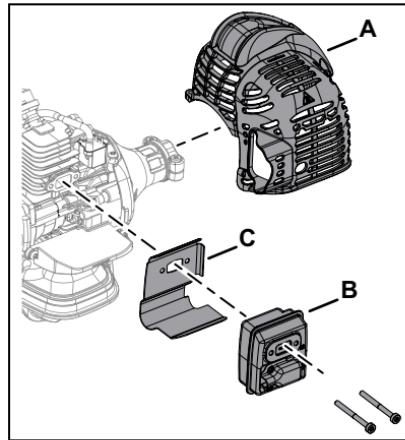

NOTICE

Never use a metal tool to scrape carbon from the exhaust port. Do not scratch the cylinder or piston when cleaning the exhaust port. Do not allow carbon particles to enter the cylinder.

6. Use a wood or plastic scraping tool to clean deposits from cylinder exhaust port (D).
7. Inspect heat shield, and replace if damaged.
8. Install heat shield and muffler.
9. Tighten muffler mounting bolts (or nuts) to 90-110 kgf·cm (80-95 lbf·in).
10. Install engine cover and attach spark plug lead.
11. Start engine and warm to operating temperature.
12. Stop engine and re-tighten mounting bolts (or nuts) if required.

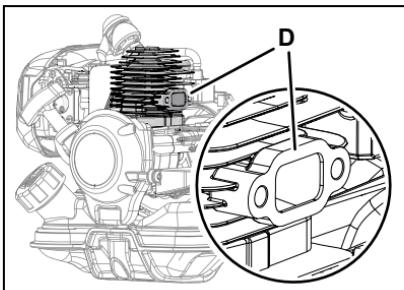

Carburetor Adjustment

Level 2.

Engine Break-In

New engines must be operated a minimum duration of two tanks of fuel break-in before carburetor adjustments can be made. During the break-in period your engine performance will increase and exhaust emissions will stabilize. Idle speed can be adjusted as required.

High Altitude Operation

This engine has been factory adjusted to maintain satisfactory starting and durability performance up to 335 m (1,100 ft.) above sea level (ASL) (96.0 kPa). To maintain proper engine operation and emission compliance above 335 m (1,100 ft.) ASL the carburetor may need to be adjusted by an authorized service dealer.

NOTICE

If the engine is adjusted for operation above 335 m (1,100 ft.) ASL, the carburetor must be re-adjusted when operating the engine below 335 m (1,100 ft.) ASL, otherwise severe engine damage may result.


Note: Every unit is run at the factory and the carburetor is set in compliance with emission regulations. Carburetor adjustments, other than idle speed, must be performed by an authorized dealer.

⚠ WARNING

- The cutting attachment may be moving during carburetor adjustments.
- Wear your protective equipment and observe all safety instructions.
- For units equipped with a clutch, be sure the cutting attachment stops moving when the engine idles.
- When the unit is turned off, make sure the cutting attachment has stopped before the unit is set down.

1. Check idle speed and reset if necessary. If a tachometer is available, idle speed screw (A) should be set to the specifications found on the Specifications page of this manual. Turn idle speed screw (A):

- Clockwise to increase idle speed.
- Counterclockwise to decrease idle speed.

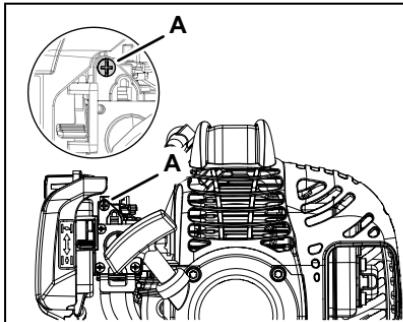

⚠ WARNING


When carburetor adjustment is completed, the cutting attachment should not move at idle, otherwise serious personal injury may result.

Lubrication

Level 1.

Parts required: Lithium-based grease.

1. Remove shield.
2. Loosen bearing housing locating screw (A), at the top of the housing, loosen mounting screw (B) and remove gear case from drive housing.
3. Pull the flexible drive shaft (C) from the drive housing, wipe clean and apply 15 ml (0.5 oz.) of grease.
4. Slide the flexible drive shaft back in the drive housing being careful not to get dirt on the flexible drive shaft.
5. Install the bearing housing and shield.

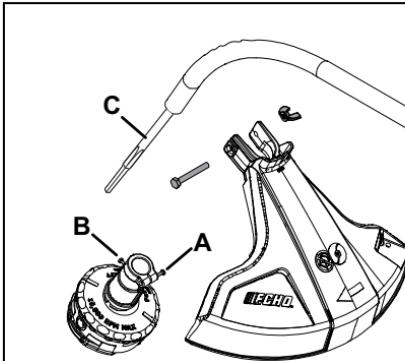

Nylon Line Replacement: GT-225SF and GT-225L


⚠️ WARNING

Never use wire or rope, it can break off and become a dangerous projectile. Serious injury can occur.


⚠️ CAUTION

Cut-off knife is sharp. Gear case and surrounding area may be hot. Wear gloves or personal injury may result.


1. Cut one piece of line to 6 m (20 ft.) length. Use 2.4 mm (0.095 in.) or 2.0 mm (0.080 in.) diameter.
2. Align arrows on top of knob with openings in eyelets.

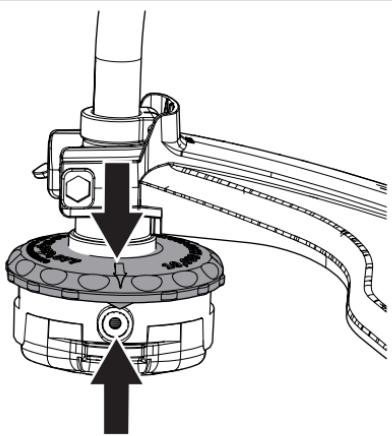

3. Insert one end of trimmer line into an eyelet, and push line equal distance through trimmer head.

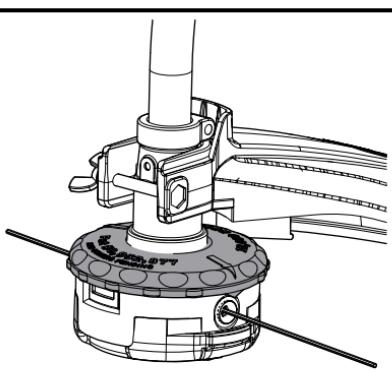


4. Hold trimmer head while turning knob clockwise to wind line onto spool until about 13 cm (5 in.) of each line remains exposed.

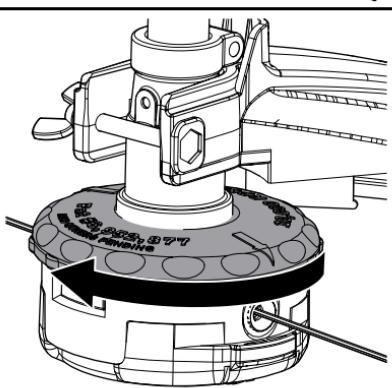

NOTICE


When the wear indicators located at the bottom of the Speed-Feed® head are worn smooth, or if holes appear, replacement of the cover or the entire Speed-Feed® head is required.

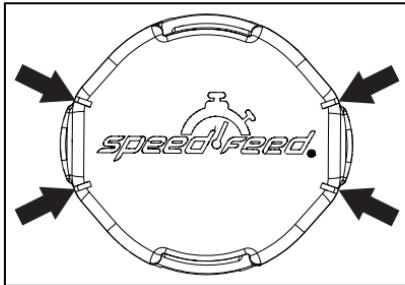

Nylon Line Head Disassembly Instructions

Note: For normal use, Speed-Feed® head disassembly is not necessary. However, if circumstances require disassembly, follow these instructions:

1. Press top of locking tabs (A) on both sides of Speed-Feed® head to release cover (B) from knob (C).
2. Remove cover from knob.

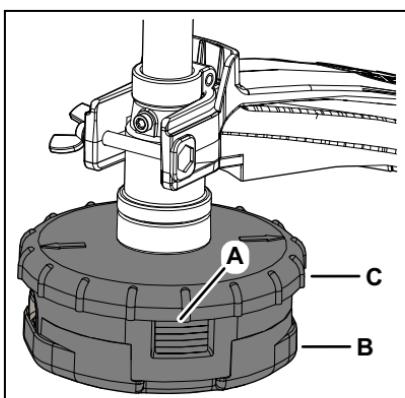

TROUBLESHOOTING

DANGER

Fuel vapors are flammable and can cause fire and/or explosion. Never test for ignition spark by grounding spark plug near cylinder plug hole, otherwise serious personal injury can result.

ENGINE PROBLEM TROUBLESHOOTING CHART				
Problem	Check	Status	Cause	Remedy
Engine starts hard. or Engine does not start.	Fuel at carburetor.	No fuel at carburetor.	Fuel filter or fuel line obstructed.	Clean or replace. See your Authorized Service Dealer.
		No fuel at cylinder.	Carburetor	See your Authorized Service Dealer.
		Muffler wet with fuel.	Fuel mixture too rich.	Open choke. Clean or replace air filter. Adjust carburetor. See your Authorized Service Dealer.
	Spark at end of plug wire.		Stop switch OFF.	Turn switch to ON.
			Electrical problem.	See your Authorized Service Dealer.
	Spark at plug.	No spark.	Interlock switch.	
			Incorrect gap.	Adjust to 0.65 mm (0.026 in.).
			Covered with carbon.	Clean or replace spark plug.
			Fouled with fuel.	
			Spark plug defective.	

ENGINE PROBLEM TROUBLESHOOTING CHART				
Problem	Check	Status	Cause	Remedy
Engine runs, but dies. or Engine does not accelerate properly.	Air filter	Air filter dirty.	Normal wear.	Clean or replace.
	Fuel filter	Fuel filter dirty.	Contaminants or residue in fuel.	Replace filter or replace fuel.
	Fuel vent	Fuel vent plugged.	Contaminated fuel.	Clean or replace.
	Spark plug	Plug dirty or worn.	Normal wear.	Clean and adjust or replace.
	Carburetor	Improper adjustment.	Vibration	Adjust
	Cooling system	Cooling system dirty or plugged.	Extended operation in dirty or dusty locations.	Clean
	Spark arrester screen	Spark arrester screen plugged.	Normal wear.	Replace
Engine does not crank.	N/A		Internal engine problem.	See your Authorized Service Dealer.

STORAGE

Transportation

- Shut engine off before transporting.
- Secure unit to prevent fuel spillage and damage.

Short-Term Storage

- Shut engine off.
- Store unit in a dry, dust-free place, out of the reach of children.

Long-Term Storage (Over 30 Days)

DANGER

Explosion hazard. Fuel fumes can accumulate and explode if exposed to an open flame or spark. Store in a well ventilated area.

Do not store your unit for a prolonged period of time (30 days or longer) without performing protective storage maintenance.

1. Move stop switch to STOP position.
2. Allow engine to cool.
3. Clean exterior of unit.
4. Perform required maintenance.
5. Tighten all fasteners.

DANGER

Fire hazard. Fuel is flammable. Burning fuel will cause bodily injury or death. Wear protective equipment. Use care when mixing, storing or handling.

WARNING

Burn hazard. During operation the muffler or catalytic muffler and surrounding cover become hot. Always keep exhaust area clear of flammable debris during transportation or when storing, otherwise serious property damage or personal injury may result.

6. Drain fuel tank completely.

7. Press purge bulb six to seven times to remove remaining fuel from carburetor then drain tank again.
8. Close choke, start and run the engine until it stops due to lack of fuel.
9. Allow engine to cool.
10. Remove spark plug lead from spark plug.
11. Remove spark plug from cylinder.
12. Pour 7 mL (0.25 fl. oz.) of two-stroke engine oil into cylinder through spark plug hole.
13. Pull recoil starter handle two to three times to distribute oil inside engine.
14. Observe piston location through the spark plug hole. Pull the recoil handle slowly until the piston reaches the top of its travel and leave it there.
15. Install spark plug.
16. Connect spark plug lead to spark plug.
17. Store unit in a dry, dust-free place, out of the reach of children.

Hedge trimmers only** WARNING**

Hedge trimmer blades are sharp. Avoid touching blades whenever possible, and always wear gloves to protect hands. Touching blades could lead to severe personal injury.

 NOTICE

Always store and transport hedge trimmers in a stable, horizontal position. Support gear case and cutting blades to prevent excessive flexing, which may cause damage to these components. Always install blade cover when transporting or storing unit.

1. Apply clean oil to the entire length of the blade. Be certain the blade bolts are lubricated.
2. Install blade guard on blades.

Power Pruners® Only** NOTICE**

Some tree sap and resins are corrosive and can damage guide bars, saw chains and sprockets.

1. Wash the guide bar and sprocket areas after each use, then coat metal parts with oil.

SPECIFICATIONS

MODEL	GT-225/SF (S/NU35914, T98514, T98414, U00913, U01013, U35813)
Length	1,370 mm (53.9 in.)
Width	315 mm (12.4 in.)
Height	540 mm (21.3 in.)
Weight (dry) without cutter head	4.1 kg (9.04 lb.)
Engine Type	Air-cooled, two-stroke, single-cylinder gasoline engine
Bore	32.2 mm (1.27 in.)
Stroke	26.0 mm (1.02 in.)
Displacement	21.2 cm ³ (1.29 in. ³)
Exhaust	Spark arrester muffler or spark arrester muffler with catalyst
Carburetor	Diaphragm with purge pump
Ignition System	Flywheel magneto, capacitor discharge ignition type
Spark Plug	NGK BPM8Y (BPMR8Y in Canada) Gap 0.65 mm (0.026 in.)
Fuel	Mixed (gasoline and two-stroke oil)
Gasoline / Oil Ratio	50:1
Gasoline	Use 89 Octane unleaded. Do not use fuel containing methyl alcohol, more than 10% ethyl alcohol or 15% MTBE. Do not use alternative fuels such as E-15 or E-85.
Oil	ISO-L-EGD (ISO/CD 13738) and J.A.S.O. M345- FD, two-stroke, air-cooled engine oil.
Fuel Tank Capacity	0.42 L (14.2 US fl. oz.)
Starter System	Automatic rewind starter
Clutch	Centrifugal type
Drive Shaft	6.0 mm (0.24 in.) flexible shaft
Rotating Direction	Clockwise (viewed from top)
Cutter Head	2-Line Rapid-Loader® head (nylon lines) or Speed or Speed-Feed® nylon line head, Line capacity 6.0 m (20 ft.)

MODEL	GT-225/SF (S/NU35914, T98514, T98414, U00913, U01013, U35813)
Handles	Front - D-Loop type with plastic grip Rear - Plastic grip with throttle trigger and switch
Idle Speed	3,000 RPM
Clutch Engagement Speed	4,300 RPM
Wide Open Throttle Speed	7,500 RPM

MODEL	GT-225/SF (S/NU66714, U66914, U74314, U66813, U67013, U74213, U78012)
Length	1,361 mm (53.6 in.)
Width	318 mm (12.5 in.)
Height	540 mm (21.3 in.)
Weight (dry) without cutter head	4.2 kg (9.2 lb.)
Engine Type	Air-cooled, two-stroke, single-cylinder gasoline engine
Bore	32.2 mm (1.27 in.)
Stroke	26.0 mm (1.02 in.)
Displacement	21.2 cm ³ (1.29 in. ³)
Exhaust	Spark arrester muffler or spark arrester muffler with catalyst
Carburetor	Diaphragm with purge pump
Ignition System	Flywheel magneto, capacitor discharge ignition type
Spark Plug	NGK BPM8Y (BPMR8Y in Canada) Gap 0.65 mm (0.026 in.)
Fuel	Mixed (gasoline and two-stroke oil)
Gasoline / Oil Ratio	50:1
Gasoline	Use 89 Octane unleaded. Do not use fuel containing methyl alcohol, more than 10% ethyl alcohol or 15% MTBE. Do not use alternative fuels such as E-15 or E-85.
Oil	ISO-L-EGD (ISO/CD 13738) and J.A.S.O. M345-FD, two-stroke, air-cooled engine oil.
Fuel Tank Capacity	0.38 L (12.8 US fl. oz.)
Starter System	Automatic rewind starter
Clutch	Centrifugal type
Drive Shaft	6.0 mm (0.24 in.) flexible shaft
Rotating Direction	Clockwise (viewed from top)
Cutter Head	2-Line Rapid-Loader® head (nylon lines) or Speed or Speed-Feed® nylon line head, Line capacity 6.0 m (20 ft.)

SPECIFICATIONS

GT-225

MODEL	GT-225/SF (S/NU66714, U66914, U74314, U66813, U67013, U74213, U78012)
Handles	Front - D-Loop type with plastic grip Rear - Plastic grip with throttle trigger and switch
Idle Speed	3,000 RPM
Clutch Engagement Speed	4,300 RPM
Wide Open Throttle Speed	7,500 RPM

MODEL	GT-225/SF (S/N U94312, U94413, U99114)
Length (without cutter head)	1,425 mm (56.1 in.)
Width	319 mm (12.6 in.)
Height	544 mm (21.4 in.)
Weight (without cutter head, harness, fuel, or guard)	4.3 kg (9.5 lb.)
Engine Type	Air-cooled, two-stroke, single cylinder gasoline engine
Bore	32.2 mm (1.27 in.)
Stroke	26.0 mm (1.02 in.)
Displacement	21.2 cm ³ (1.29 in. ³)
Exhaust	Spark arrester muffler or spark arrester muffler with catalyst
Carburetor	Diaphragm with purge pump
Ignition System	Flywheel magneto, capacitor discharge ignition type
Spark Plug	NGK BPM8Y (BPMR8Y in Canada) Gap 0.65 mm (0.026 in.)
Fuel	Mixed (gasoline and two-stroke oil)
Gasoline / Oil Ratio	50:1
Gasoline	Use 89 Octane unleaded. Do not use fuel containing methyl alcohol, more than 10% ethyl alcohol or 15% MTBE. Do not use alternative fuels such as E-15 or E-85.
Oil	ISO-L-EGD (ISO/CD 13738) and J.A.S.O. M345-FD, two-stroke, air-cooled engine oil
Fuel Tank Capacity	0.45 L (15.2 US fl. oz.)
Starter System	Automatic rewind starter
Clutch	Centrifugal type
Drive Shaft	6.0 mm (0.24 in.) flexible shaft
Rotating Direction	Clockwise (viewed from top)
Cutter Head	2-Line Rapid-Loader® head (nylon lines) or Speed or Speed-Fee® nylon line head, Line capacity 6.0 m (20 ft.)

SPECIFICATIONS

GT-225

MODEL	GT-225/SF (S/N U94312, U94413, U99114)
Handles	Front - D-Loop type with plastic grip Rear - Plastic grip with throttle trigger and switch
Idle Speed	3,000 RPM
Clutch Engagement Speed	4,300 RPM
Wide Open Throttle Speed	7,500 RPM

MODEL	GT-225L (S/N U67614, U67713, U78212)
Length (without cutter head)	1,539 mm (60.6 in.)
Width	318 mm (12.5 in.)
Height	595 mm (23.4 in.)
Weight - dry (without cutter head)	4.5 kg (9.9 lb.)
Engine Type	Air-cooled, two-stroke, single cylinder gasoline engine
Bore	32.2 mm (1.27 in.)
Stroke	26.0 mm (1.02 in.)
Displacement	21.2 cc (1.29 in.3)
Exhaust	Spark arrester muffler or spark arrester muffler with catalyst
Carburetor	Diaphragm with purge bulb
Ignition System	Flywheel magneto, capacitor discharge ignition type
Spark Plug	NGK BPM8Y (BPMR8Y in Canada) Gap 0.65 mm (0.026 in.)
Fuel	Mixed (gasoline and two-stroke oil)
Fuel/Oil Ratio	50:1
Gasoline	Use 89 Octane unleaded. Do not use fuel containing methyl alcohol, more than 10% ethyl alcohol or 15% MTBE. Do not use alternative fuels such as E15 or E85.
Oil	ISO-L-EGD (ISO/CD 13738) and J.A.S.O. M345- FD, two-stroke, air-cooled engine oil
Fuel Tank Capacity	0.38 L (12.8 US fl. oz.)
Starter System	Automatic rewind starter
Clutch	Centrifugal type
Drive Shaft	6 mm (0.24 in.) flexible shaft
Rotating Direction	Clockwise (viewed from top)
Cutter Head	Speed Feed® RH nylon line head, Line capacity 6.0 m (20 ft.)

SPECIFICATIONS

GT-225

MODEL	GT-225L (S/N U67614, U67713, U78212)
Handle	Front - D-Loop type with plastic grip Rear - Plastic grip with throttle trigger and switch
Shoulder Harness	Optional
Idle Speed	3,000 RPM
Clutch Engagement Speed	4,300 RPM
Wide Open Throttle Speed	7,800 RPM

MODEL	GT-225L (T47114, U57514)
Length (without cutter head)	1,547 mm (60.9 in.)
Width	315 mm (12.4 in.)
Height	594 mm (23.4 in.)
Weight - dry (without cutter head)	4.6 kg (10.2 lb.)
Engine Type	Air-cooled, two-stroke, single cylinder gasoline engine
Bore	32.2 mm (1.27 in.)
Stroke	26.0 mm (1.02 in.)
Displacement	21.2 cc (1.29 in.3)
Exhaust	Spark arrester muffler with catalyst or spark arrester muffler without catalyst
Carburetor	Diaphragm with purge bulb
Ignition System	Flywheel magneto, capacitor discharge ignition type
Spark Plug	NGK BPM8Y (BPMR8Y in Canada) Gap 0.65 mm (0.026 in.)
Fuel	Mixed (gasoline and two-stroke oil)
Fuel/Oil Ratio	50:1
Gasoline	Use 89 Octane unleaded. Do not use fuel containing methyl alcohol, more than 10% ethyl alcohol or 15% MTBE. Do not use alternative fuels such as E15 or E85.
Oil	ISO-L-EGD (ISO/CD 13738) and J.A.S.O. M345- FD, two-stroke, air-cooled engine oil.
Fuel Tank Capacity	0.42 L (14.2 US fl. oz.)
Starter System	Automatic rewind starter
Clutch	Centrifugal type
Drive Shaft	6 mm (0.24 in.) flexible shaft
Rotating Direction	Clockwise (viewed from top)
Cutter Head	Speed Feed® RH nylon line head, Line capacity 6.0 m (20 ft.)
Handles	Front - D-Loop type with plastic grip Rear - Plastic grip with throttle trigger and switch
Shoulder Harness	Optional
Idle Speed	3,000 RPM
Clutch Engagement Speed	4,300 RPM

SPECIFICATIONS

GT-225

MODEL	GT-225L (T47114, U57514)
Wide Open Throttle Speed	7,800 RPM

MODEL	GT-225L (U98412, U98513, U94912, U94913)
Length (without cutter head)	1,589 mm (62.6 in.)
Width	319 mm (12.6 in.)
Height	607 mm (23.9 in.)
Weight - dry (without cutter head)	4.4 kg (9.7 lb.)
Engine Type	Air-cooled, two-stroke, single cylinder gasoline engine
Bore	32.2 mm (1.27 in.)
Stroke	26.0 mm (1.02 in.)
Displacement	21.2 cc (1.29 in.3)
Exhaust	Spark arrester muffler or spark arrester muffler with catalyst
Carburetor	Diaphragm with purge bulb
Ignition System	Flywheel magneto, capacitor discharge ignition type
Spark Plug	NGK BPM8Y (BPMR8Y in Canada) Gap 0.65 mm (0.026 in.)
Fuel	Mixed (gasoline and two-stroke oil)
Fuel/Oil Ratio	50:1
Gasoline	Use 89 Octane unleaded. Do not use fuel containing methyl alcohol, more than 10% ethyl alcohol or 15% MTBE. Do not use alternative fuels such as E15 or E85.
Oil	ISO-L-EGD (ISO/CD 13738) and J.A.S.O. M345- FD, two-stroke, air-cooled engine oil
Fuel Tank Capacity	0.45 L (15.2 US fl. oz.)
Starter System	Automatic rewind starter
Clutch	Centrifugal type
Drive Shaft	6 mm (0.24 in.) flexible shaft
Rotating Direction	Clockwise (viewed from top)
Cutter Head	Speed Feed® RH nylon line head, Line capacity 6.0 m (20 ft.)

MODEL	GT-225L (U98412, U98513, U94912, U94913)
Handle	Front - D-Loop type with plastic grip Rear - Plastic grip with throttle trigger and switch
Shoulder Harness	Optional
Idle Speed	3,000 RPM
Clutch Engagement Speed	4,300 RPM
Wide Open Throttle Speed	7,800 RPM

MODEL	GT-225i (U00114, U00214, U36114, U01313, U01413, U36013)
Length	1,370 mm (53.9 in.)
Width	315 mm (12.4 in.)
Height	540 mm (21.3 in.)
Weight (dry) without Cutter Head	4.3 kg (9.48 lb.)
Engine Type	Air-cooled, two-stroke, single-cylinder gasoline engine
Bore	32.2 mm (1.27 in.)
Stroke	26.0 mm (1.02 in.)
Displacement	21.2 cm ³ (1.29 in. ³)
Exhaust	Spark arrester muffler or spark arrester muffler with catalyst
Carburetor	Diaphragm with purge pump
Ignition System	Flywheel magneto, capacitor discharge ignition type
Spark Plug	NGK BPM8Y (BPMR8Y in Canada) Gap 0.65 mm (0.026 in.)
Fuel	Mixed (gasoline and two-stroke oil)
Gasoline/Oil Ratio	50:1
Gasoline	Use 89 Octane unleaded. Do not use fuel containing methyl alcohol, more than 10% ethyl alcohol or 15% MTBE. Do not use alternative fuels such as E-15 or E-85.
Oil	ISO-L-EGD (ISO/CD 13738) and J.A.S.O. M345-FD, two-stroke, air-cooled engine oil.
Fuel Tank Capacity	0.42 L (14.9 US fl. oz.)
Starter System	Automatic rewind starter with power spring assist
Clutch	Centrifugal Type
Drive Shaft	6.0 mm (0.25 in.) flexible shaft
Rotating Direction	Clockwise (viewed from top)
Cutter Head	2-Line Rapid-Loader® Head (nylon lines)
Handle	Front - D-loop type with plastic grip Rear - Plastic grip with throttle trigger and switch

MODEL	GT-225i (U00114, U00214, U36114, U01313, U01413, U36013)
Idle Speed	3,000 RPM
Clutch Engagement Speed	4,300 RPM
Wide Open Throttle Speed	7,500 RPM

MODEL	GT-225i (U67214, U67414, U74614, U67313, U67513, U74513, U78112)
Length	1,371 mm (53.9 in.)
Width	318 mm (12.5 in.)
Height	540 mm (21.3 in.)
Weight (dry) without cutter head	4.4 kg (9.7 lb.)
Engine Type	Air-cooled, two-stroke, single-cylinder gasoline engine
Bore	32.2 mm (1.27 in.)
Stroke	26.0 mm (1.02 in.)
Displacement	21.2 cm ³ (1.29 in. ³)
Exhaust	Spark arrester muffler or spark arrester muffler with catalyst
Carburetor	Diaphragm with purge pump
Ignition System	Flywheel magneto, capacitor discharge ignition type
Spark Plug	NGK BPM8Y (BPMR8Y in Canada) Gap 0.65 mm (0.026 in.)
Fuel	Mixed (gasoline and two-stroke oil)
Gasoline/Oil Ratio	50:1
Gasoline	Use 89 Octane unleaded. Do not use fuel containing methyl alcohol, more than 10% ethyl alcohol or 15% MTBE. Do not use alternative fuels such as E-15 or E-85.
Oil	ISO-L-EGD (ISO/CD 13738) and J.A.S.O. M345- <u>FD</u> , two-stroke, air-cooled engine oil.
Fuel Tank Capacity	0.38 L (12.8 US fl. oz.)
Starter System	Automatic rewind starter with power spring assist
Clutch	Centrifugal type
Drive Shaft	6.0 mm (0.25 in.) flexible shaft
Rotating Direction	Clockwise (viewed from top)
Cutter Head	2-Line Rapid-Loader® Head (nylon lines)
Handle	Front - D-loop type with plastic grip Rear - Plastic grip with throttle trigger and switch

MODEL	GT-225i (U67214, U67414, U74614, U67313, U67513, U74513, U78112)
Idle Speed	3,000 RPM
Clutch Engagement Sped	4,300 RPM
Wide Open Throttle Speed	7,500 RPM

MODEL	GT-225i (U94612, U94713)
Length (without cutter head)	1,433 mm (56.4 in.)
Width	319 mm (12.6 in.)
Height	544 mm (21.4 in.)
Weight (without cutter head, harness, fuel and guard)	4.5 kg (9.9 lb.)
Engine Type	Air-cooled, two-stroke, single cylinder gasoline engine
Bore	32.2 mm (1.27 in.)
Stroke	26.0 mm (1.02 in.)
Displacement	21.2 cm ³ (1.29 in. ³)
Exhaust	Spark arrester muffler or spark arrester muffler with catalyst
Carburetor	Diaphragm with purge pump
Ignition System	Flywheel magneto, capacitor discharge ignition type
Spark Plug	NGK BPM8Y (BPMR8Y in Canada) Gap 0.65 mm (0.026 in.)
Fuel	Mixed (gasoline and two-stroke oil)
Gasoline/Oil Ratio	50:1
Gasoline	Use 89 Octane unleaded. Do not use fuel containing methyl alcohol, more than 10% ethyl alcohol or 15% MTBE. Do not use alternative fuels such as E-15 or E-85.
Oil	ISO-L-EGD (ISO/CD 13738) and J.A.S.O. M345- <u>FD</u> , two-stroke, air-cooled engine oil
Fuel Tank Capacity	0.45 L (12.2 US fl. oz.)
Starter System	Automatic rewind starter with power spring assist
Clutch	Centrifugal type
Drive Shaft	6.0 mm (0.25 in.) flexible shaft
Rotating Direction	Clockwise (viewed from top)
Cutter Head	2-Line Rapid-Loader® head

MODEL	GT-225i (U94612, U94713)
Handle	Front - D-loop type with plastic grip Rear - Plastic grip with throttle trigger and switch
Idle Speed	3,000 RPM
Clutch Engagement Speed	4,300 RPM
Wide Open Throttle Speed	7,500 RPM

PRODUCT REGISTRATION

Thank you for choosing ECHO Power Equipment

Please go to <http://www.echo-usa.com/Warranty/Register-Your-ECHO> to register your new product on-line. It's **FAST** and **EASY!** NOTE: Your information will never be sold or misused by ECHO Incorporated.

Registering your purchase enables us to contact you in the unlikely event of a service update or product recall, and verifies your ownership for warranty consideration.

If you do not have access to the Internet, you can complete the form below and mail to:

***ECHO Incorporated, Product Registration, PO Box 1139,
Lake Zurich, IL 60047.***

U32914001001 - U32914999999	U01413001001 - U01413999999
T98514001001 - T98514999999	U36013001001 - U36013999999
T98414001001 - T98414999999	U67214001001 - U67214999999
U00913001001 - U00913999999	U67414001001 - U67414999999
U01013001001 - U01013999999	U74614001001 - U74614999999
U35813001001 - U35813999999	U67313001001 - U67313999999
U66714001001 - U66714999999	U67513001001 - U67513999999
U66914001001 - U66914999999	U74513001001 - U74513999999
U74314001001 - U74314999999	U78112001001 - U78112999999
U66813001001 - U66813999999	U94612001001 - U94612999999
U67013001001 - U67013999999	U94713001001 - U94713999999
U74213001001 - U74213999999	T47114001001 - T47114999999
U78012001001 - U78012999999	U57514001001 - U57514999999
U94312001001 - U94312999999	U98412001001 - U98412999999
U94413001001 - U94413999999	U98513001001 - U98513999999
U99114001001 - U99114999999	U94912001001 - U94912999999
U67614001001 - U67614999999	U94913001001 - U94913999999
U67713001001 - U67713999999	U00114001001 - U00114999999
U78212001001 - U78212999999	U00214001001 - U00214999999
U36114001001 - U36114999999	U01313001001 - U01313999999



ECHO INCORPORATED

400 Oakwood Road

Lake Zurich, IL 60047

www.echo-usa.com