




**BRUSH CUTTER
PARTS CATALOG
MODEL SRM-3000
MODEL SRM-3010**

SERIAL NUMBER 001001 THRU 021090

**ECHO, INCORPORATED
400 OAKWOOD ROAD
LAKE ZURICH, IL 60047**


**999222 02436
08/93**

SRM-3000 1
SRM-3010

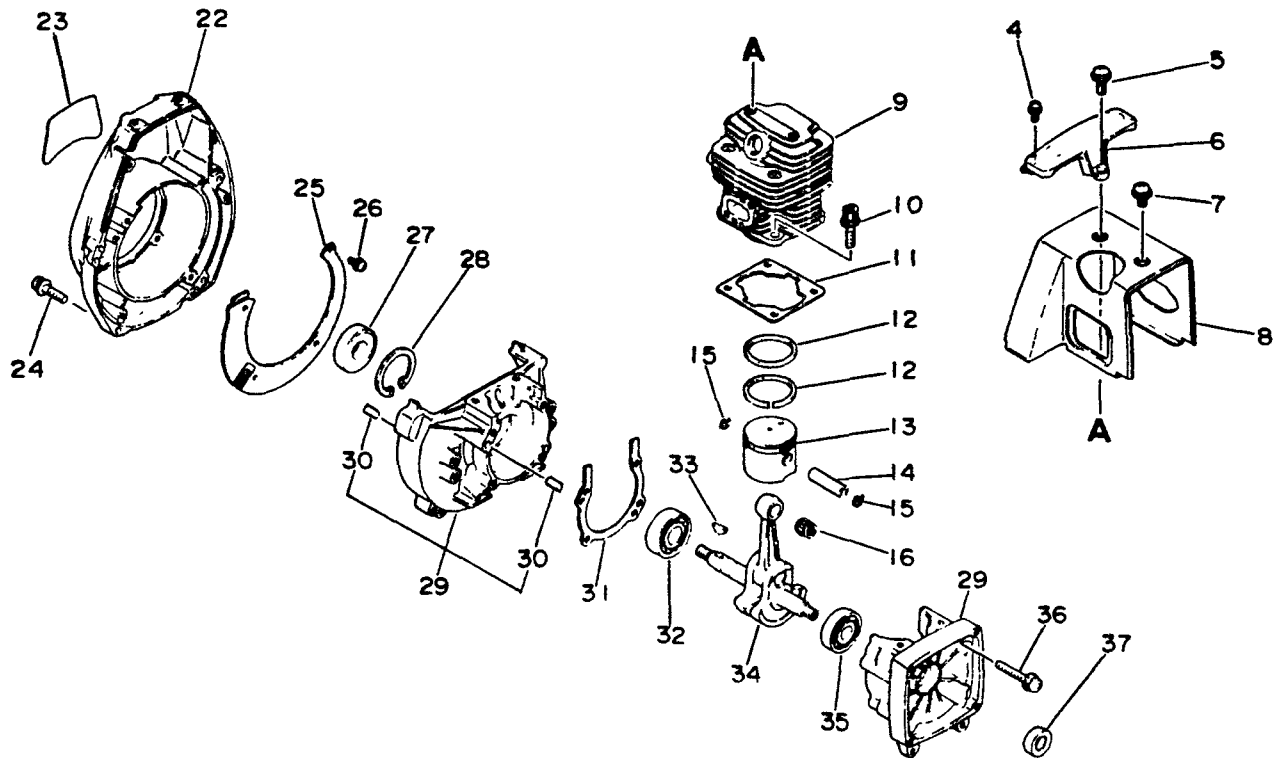


Key No.	Part Number	Q'ty	Description	Key No.	Part Number	Q'ty	Description
1- 4	900 238-0401 4	2	Screw 4x14	29	100 200-2743 0	1	Crankcase set
5	900 238-0501 6	1	Screw 5x16	30	-100 215-0283 0	4	Pin, dowel
6	159 905-4103 0	1	Guard, top	31	100 242-2123 0	1	Gasket, crankcase
7	900 238-0501 0	1	Screw 5x10	32	900 810-3620 2	1	Bearing, ball 6202
8	101 514-4103 0	1	Cover, cylinder	33	100 142-0031 0	1	Key, Woodruff
9	101 011-2753 0	1	Cylinder	34	100 100-2123 0	1	Crankshaft ass'y
10	900 162-0502 0	4	Bolt, h.s.h. 5x20	35	900 810-3620 1	1	Bearing, ball 6201
11	101 010-2123 0	1	Gasket, cylinder base	36	900 238-0503 0	4	Screw 5x30
12	100 011-1613 0	2	Ring, piston	37	100 213-0553 0	1	Oilseal
13	100 010-2743 0	1	Piston				
14	100 013-2743 0	1	Pin, piston				
15	100 015-0393 0	2	Circlip, piston pin				
16	100 012-1613 1	1	Bearing, needle				
22	101 511-4103 0	1	Cover, fan				
23	890 115-4103 0	1	Label				
24	900 238-0502 5	4	Screw 5x25				
25	101 534-2123 0	1	Plate				
26	900 238-0400 8	4	Screw 4x8				
27	100 212-0573 0	1	Oilseal				
28	900 702-0003 5	1	Circlip				

SRM-3000 2
SRM-3010

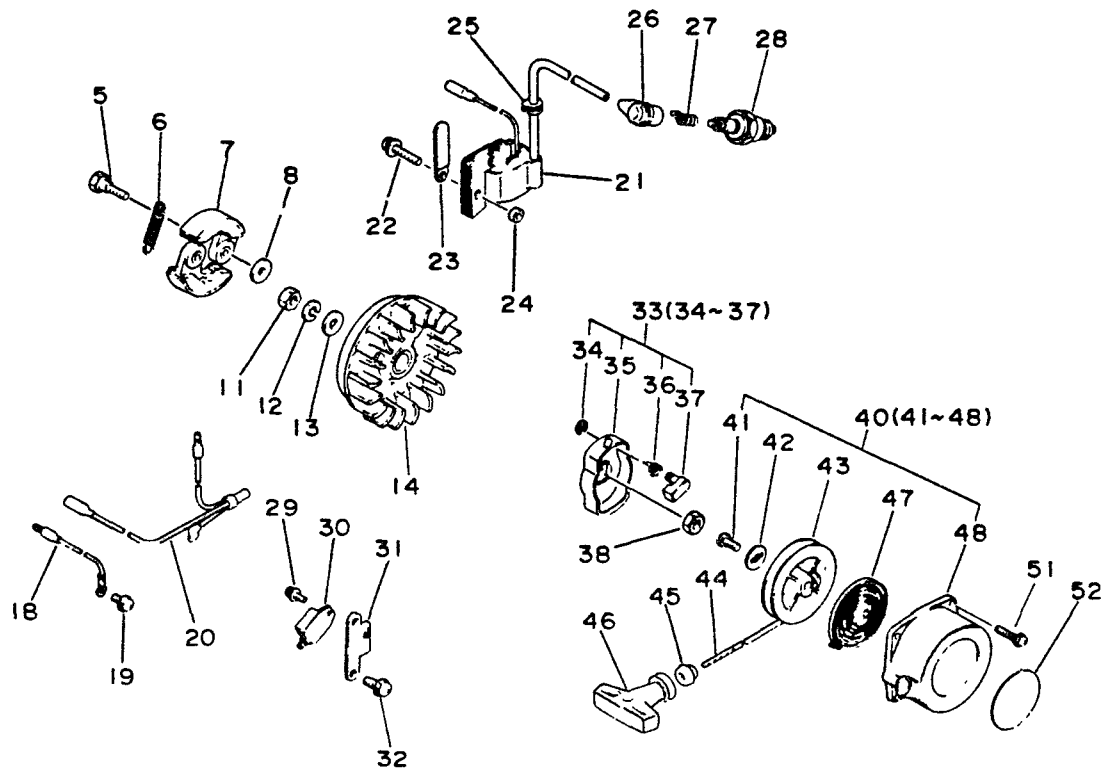



Key No.	Part Number	Q'ty	Description	Key No.	Part Number	Q'ty	Description
2- 5	175 046-2233 2	2	Bolt	30	152 601-1513 0	1	Module, TCI
6	175 018-0573 1	1	Spring, clutch	31	159 310-2743 0	1	Retainer
7	175 009-0573 2	2	Shoe, clutch	32	900 238-0501 2	1	Screw 5x12
8	175 048-0553 0	2	Washer	33	177 202-4103 0	1	Catcher ass'y, pawl
11	900 500-0000 8	1	Nut 8	34	-900 700-0000 6	1	E-ring 6
12	900 605-0000 8	1	Washer, spring 8	35	-177 210-4063 0	1	Catcher, pawl
13	175 049-0392 0	1	Washer	36	-177 234-4063 0	1	Spring, pawl
14	152 801-2743 0	1	Flywheel	37	-177 218-4103 0	1	Pawl, starter
18	162 014-2723 0	1	Lead	38	900 502-0000 8	1	Nut 8
19	900 238-0501 0	1	Screw 5x10	40	177 200-4103 0	1	Starter ass'y
20	162 000-4103 0	1	Lead	41	-177 236-4063 0	1	Screw
21	152 626-2753 0	1	Coil, ignition	42	-177 214-4103 0	1	Washer
22	900 238-0502 5	2	Screw 5x25	43	-177 215-4103 0	1	Reel, starter
23	159 116-2123 1	1	Clip	*44	-177 226-0111 0	1	Rope, starter
24	152 117-0553 0	2	Spacer	45	-177 227-0553 0	1	Guide, rope
25	156 112-4063 0	1	Grommet	46	-177 228-0653 0	1	Grip, starter
26	159 012-0343 3	1	Cap, spark plug	47	-177 220-4063 0	1	Spring, rewind
27	159 011-0343 2	1	Coil, spark plug cap	48	-177 232-4103 0	1	Case, starter
28	159 017-1393 0	1	Plug, spark	51	900 238-0402 0	4	Screw 4x20
29	900 238-0400 8	1	Screw 4x8	52	890 112-1783 0	1	Label

SRM-3000 3
SRM-3010

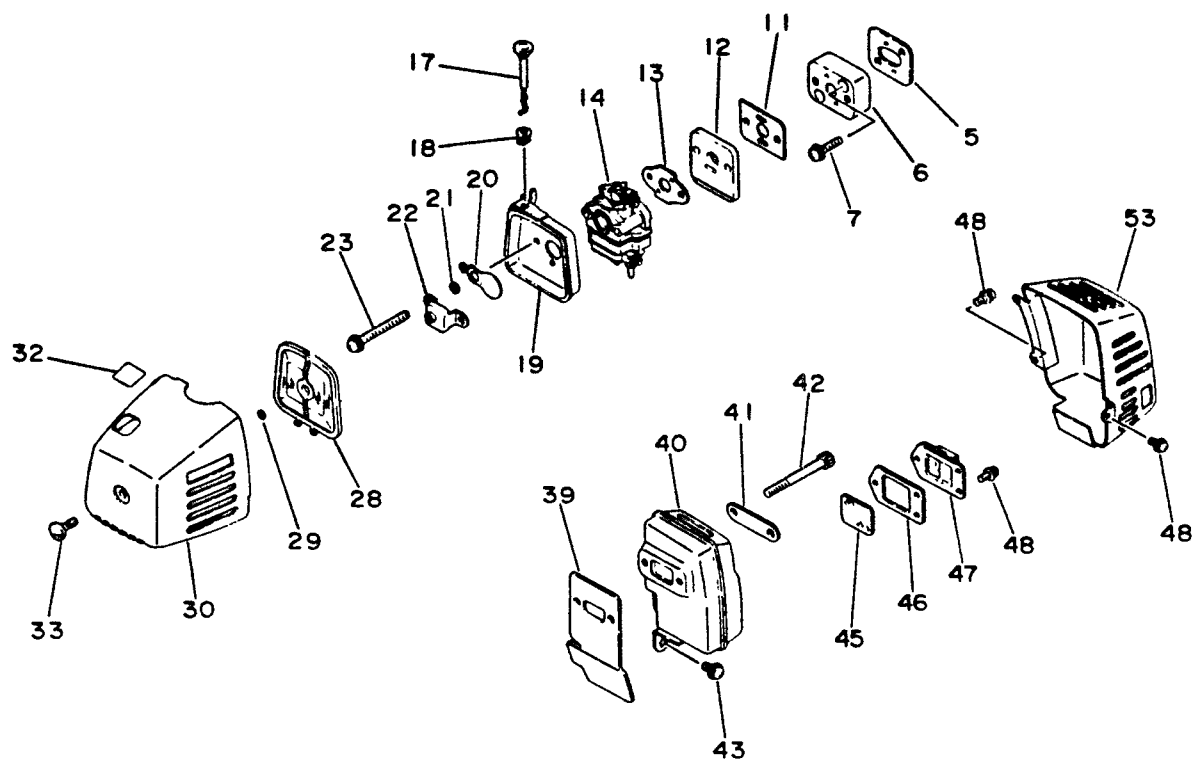


Key No.	Part Number	Q'ty	Description	Key No.	Part Number	Q'ty	Description
3- 5	130 010-2753 0	1	Gasket, insulator	40	145 806-4103 0	1	Muffler
7	130 007-4103 0	1	Insulator	42	900 105-0505 5	2	Bolt, h.s.h. 5x55
6	900 238-0502 2	2	Screw 5x22	43	900 238-0501 0	1	Screw 5x10
11	130 022-4093 0	1	Gasket, insulator	45	145 862-2723 0	1	Screen
12	130 026-4103 0	1	Spacer	46	145 866-2723 0	1	Gasket, muffler lid
13	130 016-4093 0	1	Gasket, carburetor	47	145 809-4093 0	1	Lid, muffler
14	123 000-4103 0	1	Carburetor ass'y	48	900 238-0400 8	5	Screw 4x8
17	178 510-4103 0	1	Rod, choke	53	145 871-4103 0	1	Cover, muffler
18	178 810-0523 0	1	Grommet				
19	130 307-4093 0	1	Body, air cleaner				
20	178 515-4063 0	1	Shutter, choke				
21	178 516-0083 0	2	Spacer				
22	129 006-4093 0	1	Plate				
23	900 238-0505 0	2	Screw 5x50				
28	130 310-4093 0	1	Filter, air				
30	130 302-4103 0	1	Cover, air cleaner				
29	-900 720-0000 4	1	O-ring 4				
33	-130 415-4063 0	1	Fastener				
32	890 121-4063 0	1	Label				
39	145 510-2753 0	1	Gasket, muffler				

SRM-3000 4
SRM-3010

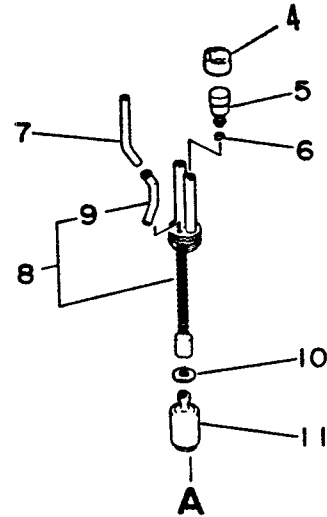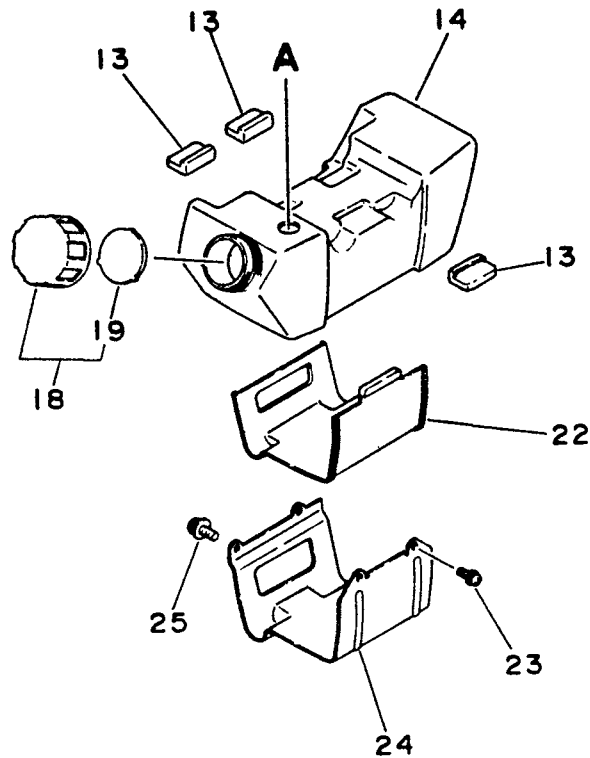


Key No.	Part Number	Q'ty	Description	Key No.	Part Number	Q'ty	Description
4- 5	131 300-4063 0	1	Vent ass'y				
6	130 111-0053 0	1	Clip				
7	129 028-4093 0	1	Pipe				
8	132 002-4093 0	1	Pipe				
9	-132 021-4063 0	1	Connector, pipe				
10	900 603-0000 5	1	Washer 5				
11	131 200-2133 0	1	Strainer, fuel				
13	131 924-0553 0	3	Cushion				
14	131 010-4103 0	1	Tank, fuel				
18	131 004-4063 0	1	Cap, fuel				
19	-131 016-4063 0	1	Gasket				
22	131 924-4103 0	1	Cushion				
23	900 238-0401 0	2	Screw 4x10				
24	131 910-4103 0	1	Bracket, fuel tank				
25	900 238-0501 2	2	Screw 5x12				
4	13132840630	1	Cover Vent				

SRM-3000 5

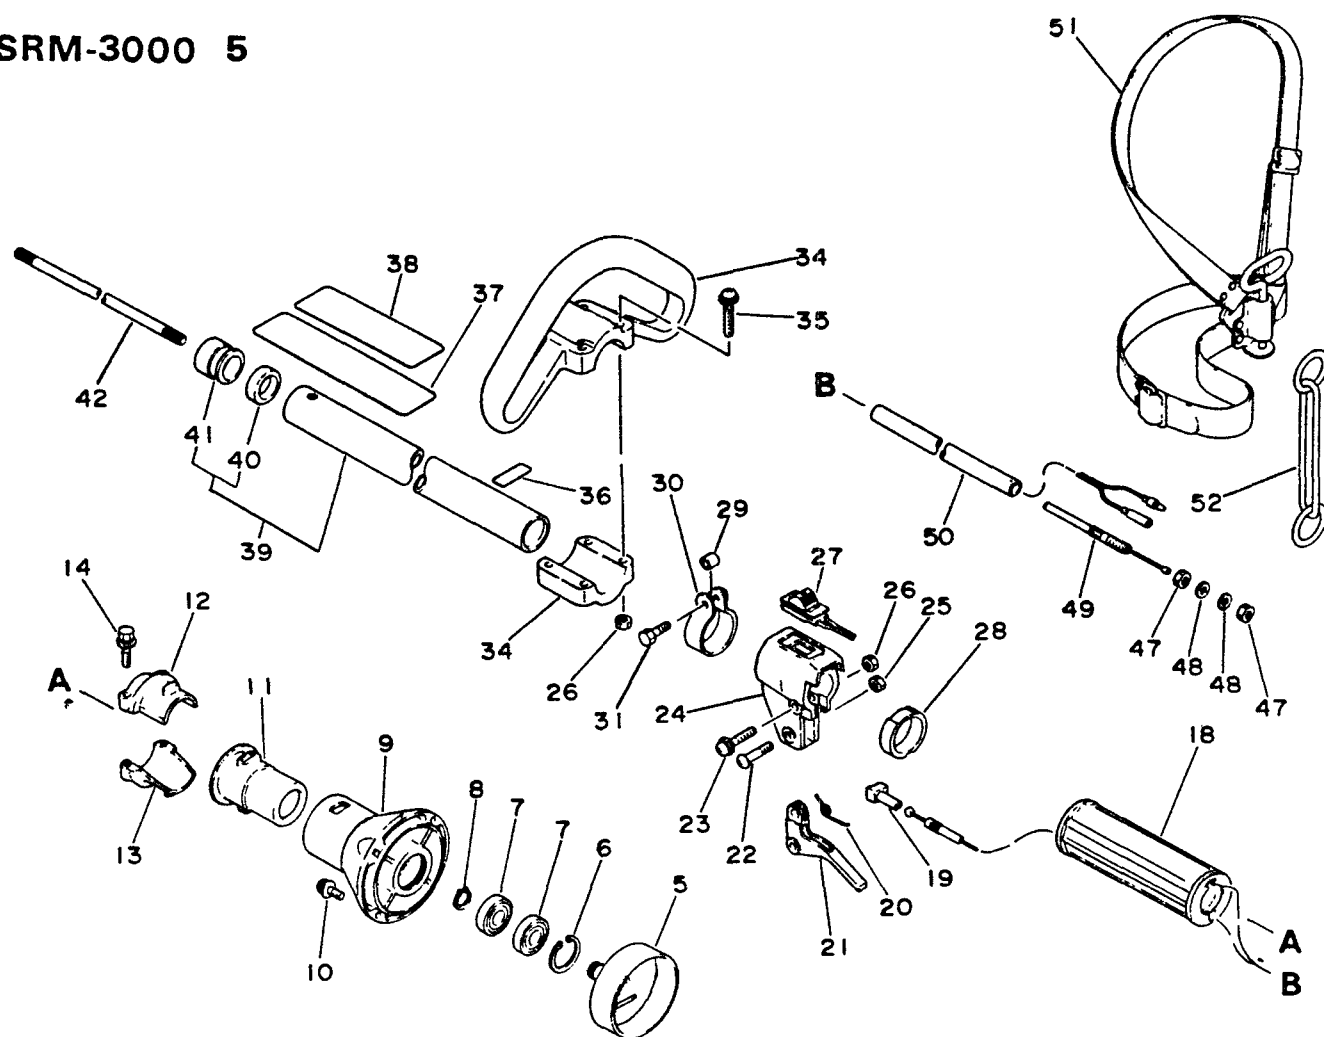


Key No.	Part Number	Q'ty	Description	Key No.	Part Number	Q'ty	Description
5- 5	175 005-4043 0	1	Drum, clutch	28	178 076-4103 0	1	Spacer
6	900 702-0002 8	1	Circlip 28	29	699 012-0333 0	1	Spacer
7	900 808-0600 1	2	Bearing, ball 6001	30	301 207-0753 0	1	Hook
8	900 701-0001 2	1	Circlip 12	31	900 100-0501 8	1	Bolt 5x18
9	610 205-4103 0	1	Case, clutch	34	351 201-0693 0	1	Handle, loop
10	900 242-0501 6	4	Screw 5x16	26	-900 500-0000 5	4	Nut 5
11	610 910-4043 Q	1	Cushion	35	-900 242-0503 5	4	Screw 5x35
12	610 922-4043 0	1	Holder, housing	36	890 152-0493 0	1	Label
13	610 923-4043 0	1	Holder, housing	37	890 160-2423 0	1	Label
14	900 142-0502 5	2	Bolt 5x25	38	890 177-0913 0	1	Label
18	351 012-0753 0	1	Grip	39	610 206-4043 0	1	Housing, drive shaft
19	178 048-0563 0	1	Spacer	40	-610 112-0493 0	5	O-ring
20	178 043-0693 0	1	Spring	41	-610 105-0493 0	5	Bushing
21	178 010-0563 0	1	Control, throttle	42	610 011-0623 0	1	Shaft, drive
22	178 110-0533 0	1	Screw	47	900 502-0000 6	2	Nut 5
23	900 242-0503 0	1	Screw 5x30	48	900 600-0000 6	2	Washer 5
24	178 024-0753 0	1	Bracket	49	178 001-4093 0	1	Wire, throttle
25	433 020-0083 0	1	Locknut 5	50	178 127-4093 0	1	Tube
26	900 500-0000 5	1	Nut 5	51	301 000-0753 0	1	Strap
27	163 400-2723 0	1	Switch, ignition	52	301 305-2433 0	1	Link

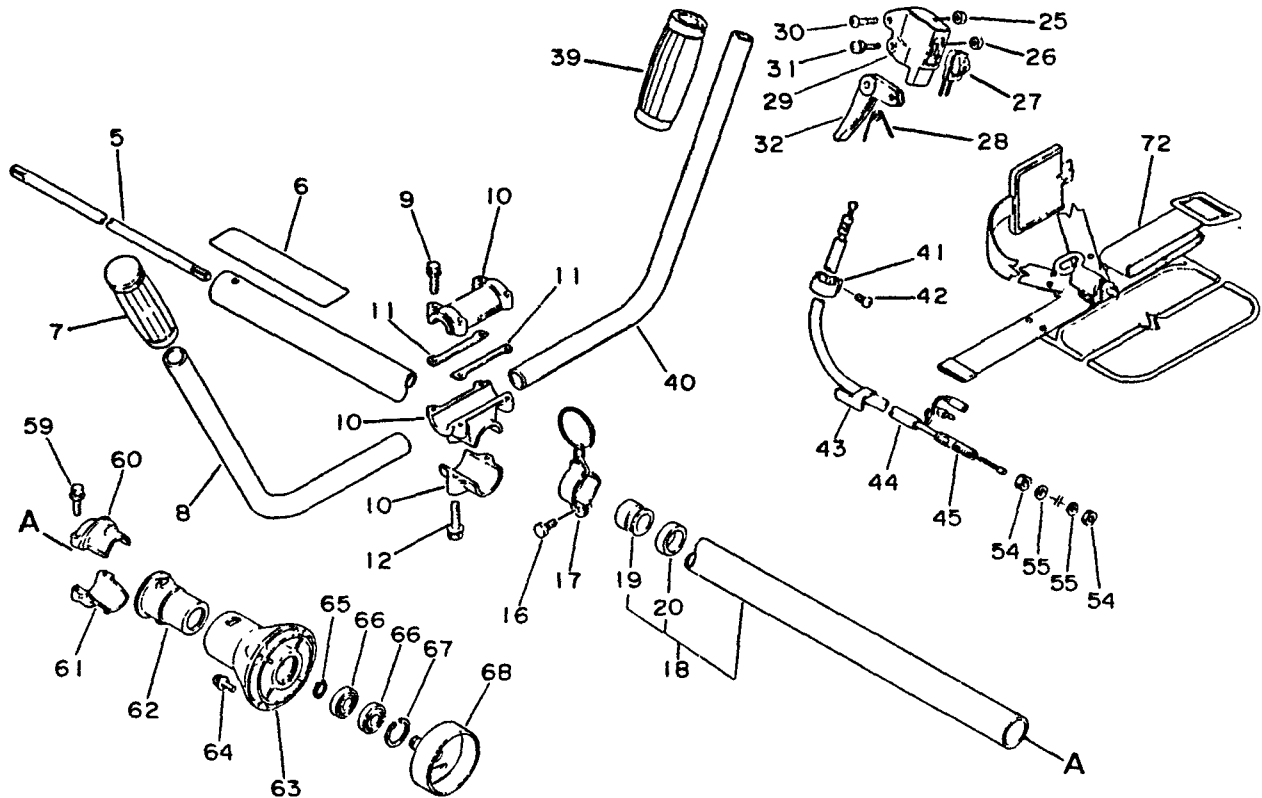


Key No.	Part Number	Q'ty	Description	Key No.	Part Number	Q'ty	Description
5- 5	610 011-0623 0	1	Shaft, drive	40	351 010-0553 0	1	Handle
6	890 160-0753 0	1	Label	41	178 106-0533 0	1	Band
7	351 311-0233 0	1	Grip, handle	42	900 220-0501 0	1	Screw 5x10
8	351 210-0553 0	1	Handle	43	178 111-0493 0	1	Bracket
10	351 301-0413 0	1	Bracket ass'y	44	178 127-4103 0	1	Tube
9	-900 162-0502 5	4	Bolt, h.s. 5x25	45	178 001-4103 0	1	Wire, throttle
11	-351 319-0413 0	1	Spacer	54	900 502-0000 6	2	Nut 6
12	-900 162-0603 0	2	Bolt 6x30	55	900 600-0000 6	2	Washer 6
16	301 200-0523 0	1	Hook	59	900 142-0502 5	2	Bolt 5x25
17	900 100-0501 2	1	Bolt 5x12	60	610 922-4043 0	1	Holder, housing
18	610 206-4043 0	1	Housing, drive shaft	61	610 923-4043 0	1	Holder, housing
19	-610 105-0493 0	5	Bushing	62	610 910-4043 0	1	Cushion
20	-610 112-0493 0	5	O-ring	63	610 205-4103 0	1	Cage, clutch
25	433 020-0083 0	1	Locknut 5	64	900 142-0501 6	4	Bolt 5x16
26	900 500-0000 5	1	Nut	65	900 701-0001 2	1	Circlip
27	163 400-4103 0	1	Switch, ignition	66	900 808-0600 1	2	Bearing, ball 6000
28	178 043-0523 0	1	Spring	67	900 702-0002 8	1	Circlip 28
29	178 024-2213 0	1	Bracket	68	175 005-4043 0	1	Control, throttle
30	178 110-0533 0	1	Screw	72	301 001-0533 0	1	Strap ass'y, shoulder
31	900 242-0503 0	1	Screw 5x30				
32	178 010-0533 0	1	Control, throttle				
39	351 315-2213 0	1	Grip, handle				

SRM-3000 6
SRM-3010

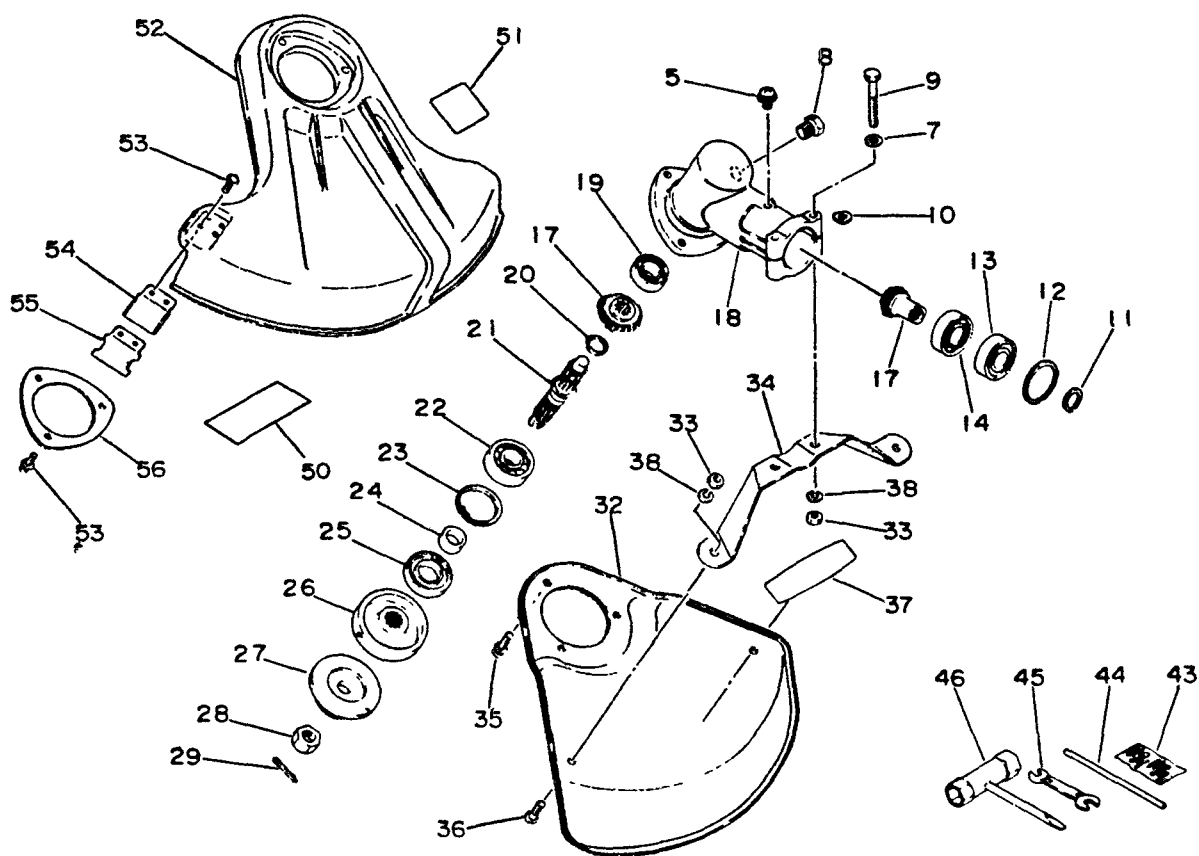

Key No.	Part Number	Q'ty	Description	Key No.	Part Number	Q'ty	Description
6-	610 400-2453 0	1	Housing ass'y, gear	32	699 000-0753 1	1	Shield
5	-900 242-0501 0	1	Screw 5x10	33	-900 500-0000 5	2	Nut 5
7	-900 600-0000 5	2	Washer 5	34	-699 015-0753 0	1	Bracket, shield
8	-900 100-0800 8	1	Bolt 8x8	35	-900 242-0501 0	3	Screw 5x10
9	-900 100-0504 0	2	Bolt 5x40	36	-900 220-0500 8	2	Screw 5x8
10	-610 239-0413 0	2	Washer	38	-900 605-0000 5	2	Washer, spring 5
11	-900 701-0001 2	1	Circlip 12	37	890 138-2403 0	1	Label
12	-900 702-0002 8	1	Circlip 28	43	898 502-0113 0	1	Pin, split 2x22 10pcs.
13	-900 807-0600 1	1	Bearing, ball 6001	44	897 518-0113 1	1	Rod, locking
14	-900 800-0600 1	1	Bearing, ball 6001	45	895 112-0033 0	1	Spanner
17	-610 300-4043 0	1	Gear set	46	895 410-0803 0	1	Wrench w/screwdriver
18	-610 410-0753 0	1	Housing, gear	50	890 138-4063 0	1	Label, ECHO
19	-900 800-3600 0	1	Bearing, ball 6000	51	890 177-4073 0	1	Label
20	-610 335-0713 0	1	Circlip	52	699 000-4083 0	1	Shield ass'y
21	-610 310-4103 0	1	Shaft, P.T.O.	53	-699 016-2323 1	1	Cutter
22	-900 810-0620 1	1	Bearing, ball 6201	54	-699 212-2323 0	1	Protector
23	-900 702-0003 2	1	Circlip 32	55	-900 242-0501 6	5	Screw 5x16
24	-610 315-0713 0	1	Spacer	56	-699 018-4083 0	1	Plate
25	-610 413-0713 0	1	Oilseal				
26	-610 313-0713 0	1	Plate, adapter				
27	-610 314-0413 1	1	Plate, adapter				
28	-900 511-0001 0	1	Nut 10				
29	-900 300-2002 2	1	Pin, split 2x22				
33	-900 500-0000 5	2	Nut 5				
38	-900 605-0000 5	2	Washer, spring 5				

SRM-3000 7
SRM-3010

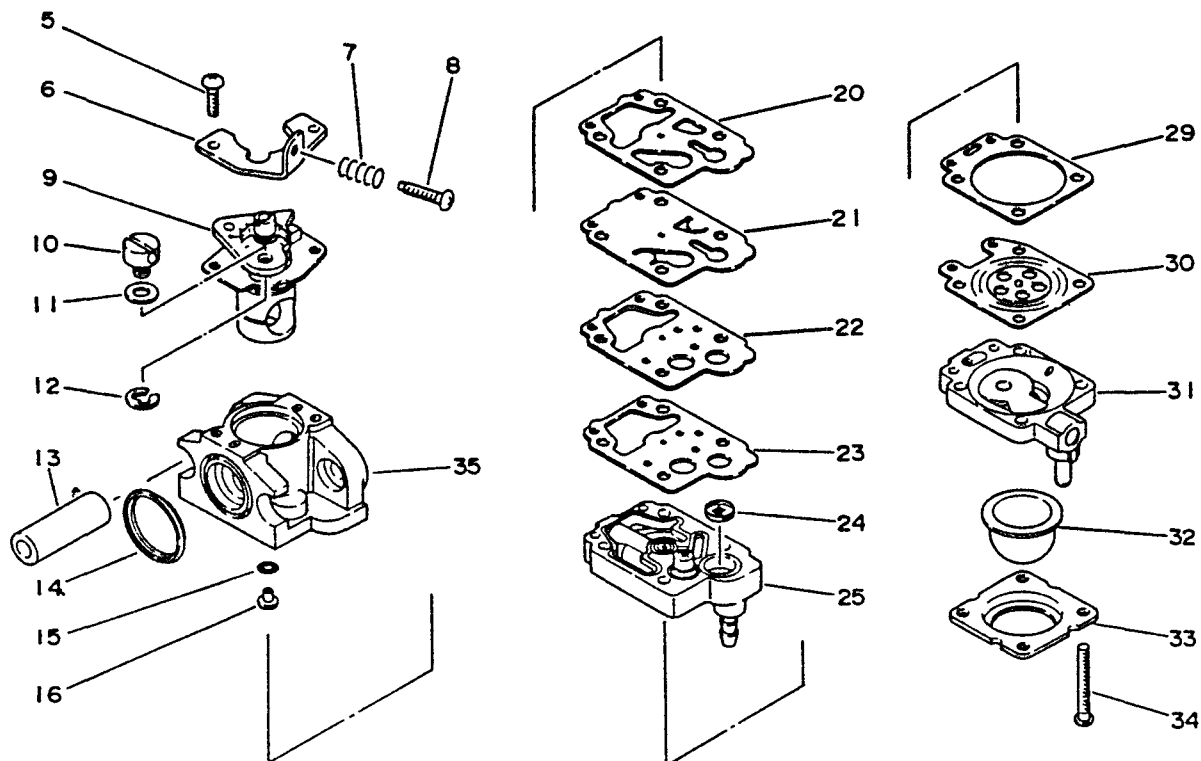

Key No.	Part Number	Q'ty	Description	Key No.	Part Number	Q'ty	Description
7-	123 000-4103 0	1	Carburetor ass'y WY-21	23	- (A) (B)	1	Gasket, plate
5	-123 114-4063 0	2	Screw	24	- (A)	1	Screen, inlet
6	-123 128-4063 0	1	Bracket, idle adjust.	25	- (A)	1	Body ass'y, pump
7	-123 133-2603 0	1	Spring, idle screw	29	- (A) (B)	1	Gasket, metering diaphragm
8	-123 134-4003 0	1	Screw, idle speed	30	- (A) (B)	1	Diaphragm, metering
9	-123 116-4063 0	1	Valve, throttle	31	-123 180-4063 0	1	Body ass'y, air purge
10	-123 172-2603 0	1	Swivel	32	-123 181-4063 0	1	Pump, primer
11	-123 149-2603 0	1	Washer	33	-123 142-0296 0	1	Cover, metering diaphragm
12	-123 173-0793 0	1	Clip	34	-123 110-4063 0	4	Screw
13	-123 158-4063 0	2	Sleeve, mounting	35	-Notavailable	1	Body, carburetor
14	- (A) (B)	1	Ring, packing				
15	- (A)	1	O-ring				
16	- (A)	1	Jet				
20	- (A) (B)	1	Gasket, pump				
21	- (A) (B)	1	Diaphragm, pump				
22	-123 160-4063 0	1	Plate, pump				

(A) Use 123 100-4093 0 Carburetor repair kit
 (B) Use 123 101-4063 0 Carburetor diaphragm/gasket kit

SEE SRM-3001 S/N 021091 - 027000
GRIDS C3 THRU C12 FOR
ATTACHMENTS & ACCESSORIES