

⚠ WARNING

Failure to follow these safety instructions when performing maintenance repair could result in severe personal injury or property damage.

- If you are not comfortable performing any of the functions described in these instructions, take your unit to an authorized servicing dealer
- Always stop engine, disconnect spark plug, and make sure all moving parts have come to a complete stop and allow unit to cool before servicing unit. Wear gloves to protect hands from sharp edges and hot surfaces.
- Work in a well-ventilated area, away from open flames or sparks.
- Drain fuel from tank and store in an approved container a minimum of 10 feet away from the work area.
- See operator's manual for complete maintenance schedule and procedures.

⚠ WARNING


To reduce the risk of injury, read and understand the operator's manual for your unit, and this instruction sheet. Always wear eye protection that complies with ANSI Z87.1. Ensure compatibility and fit before using this accessory. Do not use this accessory if a part is damaged or missing.

Installing New Trimmer Spool

1. Do not push spool in. Hold drum and turn spool clockwise until peg clicks and disappears from hole. Pull old spool out of drum.




2. Place ends of two 20 ft. x .095 in. Crossfire™ trimmer lines into holes in new spool, one on each side of barrier.
3. Wind both lines tightly and evenly (one on each side of barrier) in the direction of arrow on bottom of spool.

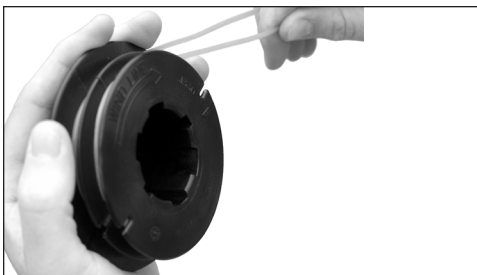

4. Place ends of lines into notches in spool, leaving 6 in. protruding.
5. Feed ends of line outward through eyelets in drum.



6. Turn inner drive so that pegs in drive align with grooves in spool and push spool into drum.
7. Hold spool and drum securely with one hand, and pull each line to disengage from notches.

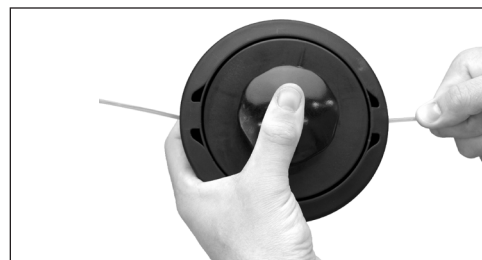

8. Hold drum and twist spool counter clockwise until peg clicks into hole.
9. Trim lines to 8 in. length.

