

Grass Trimmer/Brush Cutter *Operator's Manual*

MODEL

SRM - 210U Serial Number 05001001 - 05999999

WARNING A DANGER

The muffler or catalytic muffler and surrounding cover may become

<u>and and an extremely hot.</u> Always keep clear of exhaust and muffler area, otherwise serious personal injury may occur.

WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.



Read rules for safe operation and instructions carefully. ECHO provides an Operator's Manual and a Safety Manual. Both must be read and understood for proper and safe operation.

X7702278400

X770000780 02/03

INTRODUCTION

Welcome to the ECHO family. This ECHO product was designed and manufactured to provide long life and on-the-job dependability. Read and understand this manual and the SAFETY MANUAL you found in the same package. You will find both easy to use and full of helpful operating tips and SAFETY messages.

THE OPERATOR'S MANUAL

Read and understand this manual before operation. Keep it in a safe place for future reference. Contains specifications and information for operation, starting, stopping, maintenance, storage and assembly specific to this product.

THE SAFETY MANUAL

Read and understand this manual before operation. Keep it in a safe place for future reference. Explains possible hazards involved with the use of trimmer/brushcutters and the measures you should take to make their use safer.

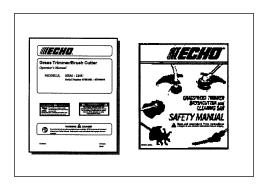


TABLE OF CONTENTS

Introduction	2
- The Operator's Manual	
- The Safety manual	2
Manual Safety Symbols and Important Information	3
Safety	3
- Decals	3
- International Symbols	4
Safety Instructions	5
- Personal Condition and Safety Equipment	5
- Extended Operation/Extreme Conditions	5
- Equipment	6
- Safe Operation	7
Emission Control	7
Description	8
- Package Contents	
- SRM-210U Parts	9
- SRM-210U Part Descriptions	10
Specifications	11
Assembly	
- Plastic Shield Installation	12
- Nylon Head Installation	
- Blade Installation	
- U-Handle Installation	14
- Throttle linkage and Ignition Leads	15
- Balance and Adjust Unit	15
- Blade Selection	16
Pre-Operation	18
- Fuel	18

Copyright© 2003 By Echo, Incorporated All Rights Reserved.

Operation
- Starting Cold Engine
- Starting Warm Engine
- Stopping Engine
Maintenance
- Skill Levels
- Maintenance Intervals
- Air Filter
- Fuel Filter
- Spark Plug 23
- Cooling System Cleaning
- Exhaust System
- Carburetor Adjustment Emission
- Lubrication
- Nylon Line Replacement
- Sharpening Metal Blades
Troubleshooting
Storage
Servicing Information
- Parts
- Service
- ECHO Consumer Product Support
- Warranty Card
- Additional or Replacement Manuals 32

Specifications, descriptions and illustrative material in this literature are as accurate as known at the time of publication, but are subject to change without notice. Illustrations may include optional equipment and accessories, and may not include all standard equipment.


MANUAL SAFETY SYMBOLS AND IMPORTANT INFORMATION

Throughout this manual and on the product itself, you will find safety alerts and helpful information messages preceded by symbols or key words. The following is an explanation of those symbols and key words.



This symbol accompanied by the words WARNING and **DANGER** calls attention to an act or condition that can lead to serious personal injury to operator and bystanders

The circle with the slash symbol means whatever is shown within the circle is prohibited.

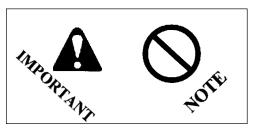

IMPORTANT The enclosed message provides information necessary for the protection of the unit.

NOTE This enclosed message provides tips for use, care and maintenance of the unit.

SAFETY DECALS

Locate these safety decals on your unit. The complete unit illustration, found in the "DESCRIPTION" section, will help you locate them. Make sure the decals are legible and that you understand and follow the instructions on them. If a decal cannot be read, a new one can be ordered from your ECHO dealer. See PARTS ORDERING instructions for specific information.

Shaft Decal - Spanish



ADVERTENCIA PELIGRO Esta unidad puede ser peligrosa y producir lesiones personales graves si no se usa en forma adecuada. Para reducir el riesgo de lesionarse, los operadores, los ayudantes y los espectadores deben leer y comprender el Manual Del Operador y los Manuales De Seguridad que se entregan escritos en español.

P/N 89022809560

Spanish Shaft Decal - English Translation



WARNING A DANGER

This unit can be dangerous and cause serious injury if improperly used. To reduce injury risk to operator, helpers and bystanders, read and understand the Operator's and Safety Manuals, which are provided in Spanish.



P/N 89016006361



Shaft Decal

WARNING

- DANGER
- This unit can be dangerous and cause serious injury if improperly used. To reduce injury risk to operator, helpers and bystanders, read and understand the Operator's and Safety manuals.
- Blindness can occur from objects that are thrown or ricocheted even with shield in place. Operators, helpers and bystanders must wear ANSI Z87.1 approved eye protection.
- Always wear hearing protection when operating unit.
- Prevent accidental contact with unit and any cutting attachment. Maintain a 15 m (50 ft.) radius, DANGER ZONE surrounding the operator. ONLY the operator, dressed in proper protective clothing should be in the DANGER ZONE.
- Beware of KICKOUT (blade thrust) when using blades. Special precautions are necessary for blade operation, see your Operator's and Safety Manuals. ONLY install ECHO approved blades on Brush Cutters (SRM) models equipped with proper blade shield, U-handles, harness, blade collar, nut and cotter pin.
- Blade/Cutting attachment does not stop immediately after releasing throttle. Keep hands and feet clear of blade/cutting attachment unless engine is shut off and cutting attachment is not moving.
- INSPECTBLADES BEFOREUSE.
- DONOTUSE DAMAGED, CRACKED, BENT, DULLOR IMPROPERLY SHARPENED BLADES.
- Do not remove shields, modify the unit or install attachments or parts not approved by ECHO. Approved attachment information and replacement Operator's and Safety Manuals are available from your ECHO dealer or by writing: ECHO, INCORPORATED, 400 OAKWOODRD., LAKE ZURICH, IL 60047.

(P/N 89016054130)













INTERNATIONAL SYMBOLS

SYMBOL	DESCRIPTION	SYMBOL	DESCRIPTION
	"WARNING, SEE OPERATOR'S MANUAL		Hot Surface
	Wear eye, ear and head protection	Ø	Finger Severing
	Wear hand and foot protection	8	DO NOT allow flames or sparks near fuel.
	Safety/Alert	B	DO NOT smoke near fuel.
			ers and helpers m (50 ft.).

SYME	BOL	DESCRIPTION	CRIPTION SYMBOL DESCRIP	
STC)P	Emergency Stop	+0	Fuel and oil mixture
ŀ	ł	Carburetor Adjustment - High speed mixture	⊨	Primer Bulb
		Carburetor Adjustment - Idle speed	+	Choke Control "Run" Position (Choke Open)
		Carburetor Adjustment - Low speed mixture	•	Choke Control "Cold Start" Position (Choke Closed)
Ignit ON I	on OFF O	Ignition ON/ OFF	80	Do not use blades. String line only

SAFETY INSTRUCTIONS PERSONAL CONDITION AND SAFETY EQUIPMENT

Trimmer/Brush Cutter users risk injury to themselves and others if the trimmer/brush cutter is used improperly or safety precautions are not followed. Proper clothing and safety gear must be worn when operating a trimmer.

Physical Condition

Your judgment and physical dexterity may not be good:

- if you are tired or sick,
- if you are taking medication,
- if you have taken alcohol or drugs.

Operate unit only if you are physically and mentally well.

Eye Protection

Wear eye protection that meets ANSI Z87.1 or CE requirements whenever you operate the trimmer.

Hand Protection

Wear no-slip, heavy duty work gloves to improve your grip on the Trimmer/Brush Cutter handles. Gloves also reduce the transmission of machine vibration to your hands.

Hearing Protection

ECHO recommends wearing hearing protection whenever unit is used.

Proper Clothing

Wear snug fitting, durable clothing;

- Pants should have long legs, shirts with long sleeves.
- DONOT WEAR SHORTS,
- DONOT WEAR TIES, SCARVES, JEWELRY.

Wear sturdy work shoes with non-skid soles;

- DONOT WEAR OPEN TOED SHOES,
 - DONOT OPERATE UNIT BAREFOOTED.

EXTENDED OPERATION/EXTREME CONDITIONS

Vibration and Cold

It is believed that a condition called Raynaud's Phenomenon, which affects the fingers of certain individuals may be brought about by exposure to vibration and cold. Exposure to vibration and cold may cause tingling and burning sensations followed by loss of color and numbness in the fingers. The following precautions are strongly recommended because the minimum exposure which might trigger the ailment is unknown.

- Keep your body warm, especially the head, neck, feet, ankles, hands and wrists.
- Maintain good blood circulation by performing vigorous arm exercises during frequent work breaks and also by not smoking.
- Limit the hours of operation. Try to fill each day with jobs where operating the trimmer or other hand-held power equipment is not required.
- If you experience discomfort, redness and swelling of the fingers followed by whitening and loss of feeling, consult your physician before further exposing yourself to cold and vibration.




6 **(((EEHD**)

Repetitive Stress Injuries

It is believed that overusing the muscles and tendons of the fingers, hands, arms, and shoulders may cause soreness, swelling, numbness, weakness, and extreme pain in those areas. Certain repetitive hand activities may put you at a high risk for developing a Repetitive Stress Injury (RSI). An extreme RSI condition is Carpal Tunnel Syndrome (CTS), which could occur when your wrist swells and squeezes a vital nerve that runs through the area. Some believe that prolonged exposure to vibration may contribute to CTS. CTS can cause severe pain for months or even years.

To reduce the risk of RSI/CTS, do the following:

- Avoid using your wrist in a bent, extended or twisted position. Instead try to maintain a straight wrist position. Also, when grasping, use your whole hand, not just the thumb and index finger.
- Take periodic breaks to minimize repetition and rest your hands.
- Reduce the speed and force with which you do the repetitive movement.
- Do exercises to strengthen the hand and arm muscles.
- Immediately stop using all power equipment and consult a doctor if you feel tingling, numbness, or pain, in the fingers, hands, wrists, or arms. The sooner RSI/CTS is diagnosed, the more likely permanent nerve and muscle damage can be prevented.

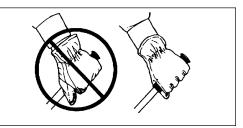

EQUIPMENT



Use only ECHO-approved attachments. Serious injury may result from the use of a non-approved attachment combination. ECHO, INC. will not be responsible for the failure of cutting devices, attachments, or accessories which have not been tested and approved by ECHO. Read and comply with all safety instructions listed in this manual and safety manual.

- Check unit for loose/missing nuts, bolts and screws. Tighten and/or replace as needed.
- Inspect fuel lines, tank, and area around carburetor for fuel leaks. DO NOT operate unit if leaks are found.
- Inspect shield for damage, and ensure that the cut-off knife is securely in place. Replace if either is damaged or missing.
- Check that the cutting attachment is firmly attached and in safe operating condition.
- Check that front loop handle and shoulder strap/ or shoulder/ waist harness are adjusted for safe, comfortable operation. See Assembly Section for proper adjustment.
- Keep exhaust area clear of flammable debris. Avoid contact during and immediately after operation.



Grass Trimmer/Brush Cutter 7 Operator's Manual 7

SAFE OPERATION



Do not operate this product indoors or in inadequately ventilated areas. Engine exhaust contains poisonous emissions and can cause serious injury or death.

Read the Manuals

• Provide all operators of this equipment with the Operator's Manual and Safety Manual for instructions on safe operation.

Keep A Firm Grip

• Hold the front and rear handles using both hands, with thumbs and fingers encircling the handles

Keep A Solid Stance

• Maintain footing and balance at all times. Do not stand on slippery, uneven or unstable surfaces. Do not work in odd positions or on ladders. Do not over reach.

EMISSION CONTROL

EPA Phase 2

The emission control system for these engines is EM (Engine Modification).



An Emission Control Label is located on the engine. (This is an EXAMPLE ONLY, information on label varies by engine FAMILY).

PRODUCT EMISSION DURABILITY

The 300 hour emission durability period is the time span selected by the manufacturer certifying the engine emissions output meets applicable emissions regulations, provided that approved maintenance procedures are followed as listed in the Maintenance Section of this manual.





DESCRIPTION

Your new Echo product has been factory pre-assembled for your convenience. Due to packaging restrictions, shield installation and other final assembly may be necessary.

Check the contents carefully, and notify your retailer or ECHO Dealer immediately if any parts are missing or damaged. Use the contents list below to check for missing parts.

PACKAGE CONTENTS

- ____1 Power Head
- ____1 Drive Shaft Assembly w/Gear Housing
 - ____1 Nylon Trimmer Head
 - ____1 Plastic Debris Shield
- ____1 Shield Plate
- ____3 5 mm x 16 mm screws (Shield Plate-Gear Case)
- ____1 Metal Shield
- ____1 Metal Shield Bracket
- 3 5 mm x 15 mm screws (Shield-Gear Case)
- 2 5 mm x 8 mm screws (Bracket-Shield)
- _____4 5 mm nuts (Bracket-Shield & Gear Case)
- 4 5 mm lockwashers (Bracket-Shield & Gear Case)
- ____1 8 Tooth Weed/Grass Blade
- ____1 Shoulder Harness With Hip Pad
- ____1 U-Handle Assembly
- ____1 8 mm hex head bolt
- ____1 8 mm flat washer
- _____ 10 2 mm x 25 mm Cotter pins
- _____2 Plastic cable clips
- ____1 Combination Socket/Screwdriver Tool (Scrench)
- ____1 LockingTool
- ____1 3 mm "L" hex wrench
- ____1 Operator's Manual
- ____1 Safety Manual
- 1 Warranty Registration Card
- ____1 Limited Warranty Statement
- ____1 Safety Glasses
- _____1 Echo Power Blend [™] 2-stroke oil sample














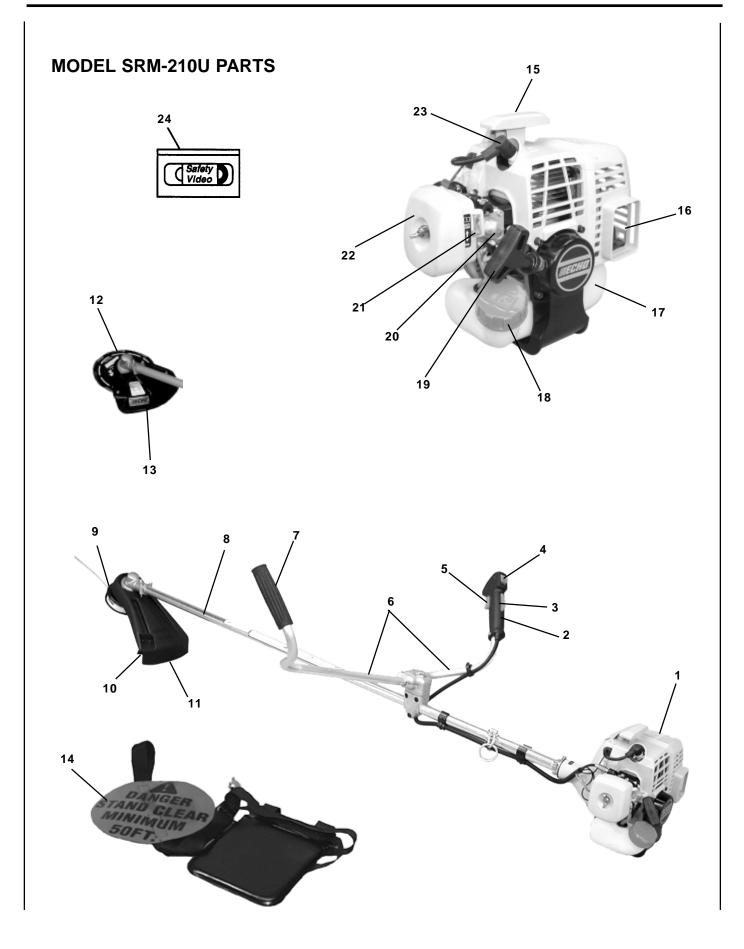

10 ///**EEHD**®

MODEL SRM-210U PART DESCRIPTIONS

- 1. **POWER HEAD** Includes the Engine, Clutch, Fuel System, Ignition System, and Recoil Starter.
- 2. RIGHTHANDGRIP
- 3. **THROTTLE TRIGGER LOCKOUT** This lever must be held during acceleration. Operation of the throttle trigger is prevented unless throttle trigger lockout lever is engaged.
- 4. **STOP SWITCH** "SLIDE SWITCH" mounted on top of the Throttle Trigger Housing. Move switch FORWARD to RUN, BACK to STOP.
- 5. **THROTTLE TRIGGER** Controls engine speed. Spring loaded to return to idle when released. During acceleration, press trigger gradually for best operating technique.
- 6. U-HANDLE Provides secure two-handed control of trimmer/brushcutter. Required for metal blade operation.
- 7. LEFTHANDGRIP
- 8. **DRIVE SHAFT ASSEMBLY** Includes Gear Housing assembly, Blade attachment parts, Flexible Drive Cable and Safety Decal.
- 9. **NYLON CUTTING ATTACHMENT** Contains replaceable nylon trimming line that advances when the trimmer head is tapped against the ground while the head is turning at normal operating speed.
- 10. **CUT-OFF KNIFE** Automatically trims line to the correct length (5 in.) after head is tapped on the ground while nylon cutting attachment is turning. If trimmer is operated without a cut-off knife, the line will become too long, the engine will overheat and engine damage may occur.
- 11. **PLASTIC DEBRIS SHIELD ASSEMBLY** Deflects debris. **MUST** be installed on unit before Nylon Line Head use (See Assembly Instructions). Shield assembly includes the Cut-Off Knife and Safety Decal. Mounts on the Gear Housing Assembly just above the cutting attachment. Helps protect the operator by deflecting debris produced during the trimming operation. This shield must be replaced with the steel shield for blade use.
- 12. **BLADES** Circular steel blades for grass, weeds, or brush cutting applications. (Harness, metal shield, and U-handle required for blade operation.)
- 13. METAL BLADE SHIELD Required when unit is equipped with blades. Do not operate unit without shield.
- 14. **SHOULDER HARNESS WITH HIP PAD** An adjustable shoulder strap that suspends the unit from the operator's shoulder. Using the strap reduces operator fatigue and enhances safety. Hip pad helps protect hip/leg and clothing when using U-handle equipped units.
- 15. TOP GUARD Protects operator's arm from the hot engine during normal operation.
- 16. **SPARK ARRESTOR CATALYTIC MUFFLER/MUFFLER -**The muffler or catalytic muffler controls exhaust noise and emission. The spark arrestor screen prevents hot, glowing particles of carbon from leaving the muffler. Keep exhaust area clear of flammable debris.
- 17. FUEL TANK Holds fuel and contains the fuel filter.
- 18. FUEL TANK CAP Covers and seals fuel tank opening.
- 19. **RECOIL STARTER HANDLE** Starts engine. Pull handle slowly until starter engages, then quickly and firmly. When engine starts, return handle slowly. DO NOT let handle snap back or damage to unit will occur.
- 20. **PRIMER BULB** Primes carburetor for quick starting. Pumping primer bulb before starting engine draws fresh fuel from the fuel tank, priming the carburetor for starting. Pump primer bulb until fuel is visible and flows freely in the clear fuel tank return line. Pump bulb an additional 4 or 5 times.
- 21. **CHOKE** Adjusts Fuel/Air ratio for starting or running engine. The choke control is located at the top of the air filter case. Move choke lever to "Cold Start" (**b**) to close choke for cold starting. Move choke lever to "Run" (**b**) position to open choke.
- 22. AIR CLEANER Filters out dirt and debris in air. Contains replaceable filter element.
- 23. **SPARK PLUG** Provides spark to ignite fuel mixture.
- 24. **SAFETY VIDEO** (Not included with unit) P/N 99922202540 English version and P/N 99922203508 Spanish version are available at a cost of \$5.00 from ECHO, INC. or any authorized ECHO dealer. The video overviews safety precautions and proper operating techniques and is supplemental to the Safety Manual. Read and understand the Safety Manual for complete information on safe operation.

SPECIFICATIONS

MODEL	• SRM-210U
Length	1770mm(69.7in.)
Width	700mm(27.68in.)
Height	455 mm(17.9 in.)
Weight (dry) w/Cutter Head	5.48kg(12.0lb.)
Engine Type	Air cooled, two-stroke, single cylinder gasoline engine
Bore	- 32.2 mm(1.27 in.)
Stroke	26.0mm(1.02in.)
Displacement	21.2 cc (1.29 cu. in.)
Exhaust	Spark Arrestor Muffler
Carburetor	Zama diaphragm model RB w/purge pump
Ignition System	Flywheel magneto, capacitor discharge ignition type
Spark Plug	NGK BPM-8Y (Gap 0.65 mm (0.026 in.)
Fuel	Mixed (Gasoline and Two-stroke Oil)
Fuel/Oil Ratio	50:1 two-stroke air cooled engine oil
Gasoline	89 Octane unleaded. DO NOT use fuel containing methyl
	alcohol, more than 10% ethyl alcohol or 15% MTBE.
Oil	Power Blend M Premium Universal 2-Stroke Oil
Fuel Tank Capacity	0.45 lit. (15.2 US fl. oz.)
Starter System	Automatic Rewind Starter
Clutch	· Centrifugal Type
Vibration Isolated System	Rubber cushion on engine mount (heavy duty). Rubber
	grip on front handle.
Operating Rod	
Drive Shaft	$6.35 \mathrm{mm}(1/4\mathrm{in.})$ flexible shaft
Gear Case Ratio	1.4:1 Reduction
Rotating Direction	
Cutter Head	Semi-Auto Nylon line head (2-line) with $.095 Crossfire^{TM}$
	Line capacity 6 m (20 ft.), 8 tooth weed and grass blade
Handle*	
Shoulder Harness w/hip pad	
Idle Speed	- 2400-3200 RPM
Wide Open Throttle Speed (W.O.T.) with Nylon Line Head	
Wide Open Throttle Speed (W.O.T.) with Blade	9000-11,500 RPM

* Install and use U-Handle when operating any model with blade.



ASSEMBLY PLASTIC SHIELD INSTALLATION


Tools Required: Screwdriver, Locking Tool


Parts Required: Plastic Debris Shield, Shield Plate, three (3) 5 x 16 mm screws.



The plastic shield is for use with the Nylon Line Head only. Install Metal Shield when using plastic or metal blades, or serious injury may result.

- 1. Align hole in upper plate (D) with notch in gear housing (G), and insert locking tool to prevent splined shaft from turning. Arrow on gear housing flange points to notch location.
- 2. Remove cotter pin (A), L.H. blade nut (B), lower plate (C), and upper plate (D) from PTO shaft. Turn blade nut clockwise to remove.
- 3. Remove locking tool. Retain lower plate, blade nut, and cotter pin for future use with blade conversions.
- 4. Align plastic debris shield (F) with the drive shaft, and install on the bottom of the gear housing flange.
- 5. Place shield plate (E) on shield, align holes and install three (3) screws.
- 6. Replace upper plate (D) on PTO shaft.

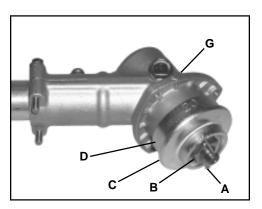

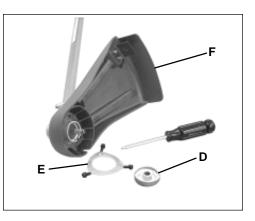


NYLON HEAD INSTALLATION

Tools Required: Locking Tool, 17x19 mm Scrench

Parts Required: Nylon Line Head.

- 1. Make sure plastic debris shield (F) is properly aligned, and upper plate (D) is installed on splined PTO shaft.
- 2. Align hole in upper plate (D) with notch in gear housing (G), and insert locking tool (H) to prevent splined shaft from turning.
- 3. Thread line head (I) onto PTO shaft by turning it counter-clockwise until head is tight against upper plate (D).
- 4. Remove locking tool.

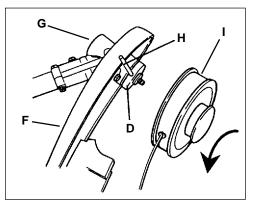

BLADE INSTALLATION


You must install the U-Handle and all Blade Conversion parts shown in the following instructions before operating this unit with metal blades, otherwise serious injury may result.


NOTE

Model SRM-210U includes U-Handle, 8-tooth blade, and necessary blade conversion parts. Blades must be selected for type of cutting being performed. See page 16, "Blade Selection."

Install Metal Shield

- *Tools Required:* 8 x 10 mm Open-end Wrench, Screwdriver, Scrench, Locking Tool
- Parts Required: Metal Shield, Shield Bracket,
 3 5 x 15 mm screws w/captivated flat and lock-washer, (metal shield to gear housing).
 2 5 x 8 mm screws, 2 5 mm nuts, 2 5 mm lock-washers, (bracket to shield).
 2 5 mm nuts, 2 5 mm lockwashers (bracket to gear housing)
- 1. If installed, remove nylon line head, upper plate and plastic shield, and set upper plate aside for use with blade installation. Retain plastic shield, shield plate, and plastic shield hardware for conversion back to nylon line operation.
- 2. Align hole in upper plate (D) with notch in gear housing (G), and insert locking tool to prevent splined shaft from turning. Arrow on gear housing flange points to notch location.
- 3. Remove split pin (A), L.H. blade nut (B), lower plate (C), and upper plate (D) from PTO shaft. Turn blade nut clockwise to remove.
- 4. Remove locking tool.
- 5. Loosely attach bracket (J) to shield (K) and attach shield to bottom of gear housing (G) with hardware provided.
- 6. Tighten all shield hardware.

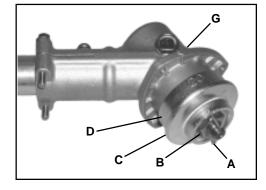

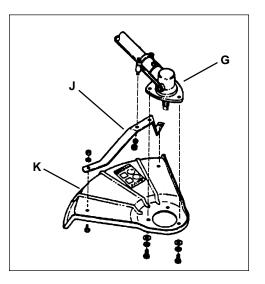



Install Blade

Tools Required: Locking Tool, Scrench.

Parts Required: Upper Plate w/ 20 mm pilot, Lower Plate, 10 mm Nut w/ L.H. threads, 2 x 25 mm Cotter Pin, Blade.

- 1. Install upper plate (D) on splined PTO shaft, pilot side down. Blade installation requires Upper Plate (D) with 20 mm pilot.
- 2. Install Blade (L) on upper plate pilot. Blades must be installed so that rotation arrow on blade matches rotation of unit: teeth toward direction of rotation (See debris shield decal). Secure blade with Lower Plate (C), and 10 mm L.H. nut (B). Turn nut counter-clockwise on PTO shaft to tighten.
- 3. Align hole in upper plate with notch in gear housing, and insert Locking Tool (H) to prevent splined shaft from turning. Arrow on gear housing points to notch. Tighten 10 mm nut securely.
- 4. Insert Split Pin (A) in hole in PTO shaft, and bend pin legs around shaft counterclockwise to retain 10 mm nut.

IMPORTANT


Never reuse a cotter pin - install a new cotter pin each time a blade is installed or replaced.


- 5. Tri-Cut Blade (M) is installed with Glide Cup (N).
- 6. Remove locking tool.


U-HANDLE INSTALLATION

Tools Required: Scrench, 3 and 4 mm Hex Wrench, Pliers

- *Parts Required:* U-Handle, Clamp w/screws, 8 mm x 55 mm hex bolt, 8 mm flat washer
- 1. Install upper U-Handle and bracket on lower bracket with one (1) 8mm x 55mm bolt (A) and (1) large circular washer. Do not tighten bolt securely until final adjustments are completed.
- 2. Loosen upper (2) U-handle clamp screws (B), and position U-handle as shown.
- 3. Lightly tighten 8mm bolt (A) and clamp screws (B) to hold U-handle in position until final adjustments are completed.
- 4. Route throttle linkage and ignition lead assembly along shaft and clip as shown.

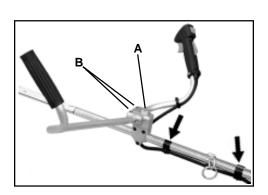


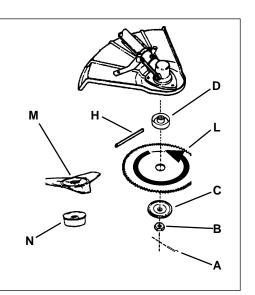


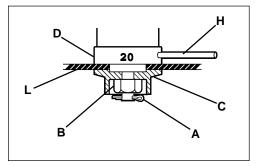

THROTTLE LINKAGE AND IGNITION LEADS

- 1. Place throttle linkage cable (C) through adjustment fixture (D) and install wire end into large carburetor throttle swivel hole (E). Check throttle for freedom of movement and that wide open throttle / low idle extremes are adjusted properly. The throttle linkage can be adjusted by turning the adjustment fixture (D). Consult with your Echo Dealer for correct adjustment procedure.
- 2. Connect ignition leads (F) and one ring terminal (G) which attaches under fan housing screw.

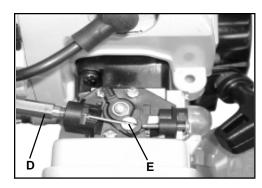

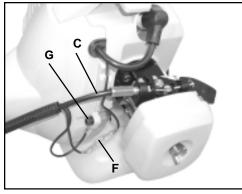


H

3. Install throttle linkage into bracket clamp (H) and pinch snug with pliers. Bend bracket up and flush against drive shaft.

BALANCE AND ADJUST UNIT

- 1. Loosen harness clamp screw.
- 2. Put on harness and attach unit to harness.
- 3. Slide harness clamp up (I) or down until unit balances with head approximately 50-75 mm (2-3 in.) from the ground.
- 4. Tighten harness clamp screw.
- 5. Loosen upper U-Handle clamp screws (J), and position U-Handle for comfortable operation.
- 6. Tighten U-Handle clamp screws and 8 mm clamp bolt securely.

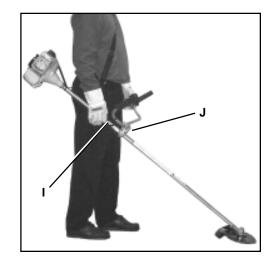



BLADE SELECTION



The type of Blade used **MUST** be matched to the type and size of material cut. An improper or dull blade can cause serious personal injury. Blades **MUST** be sharp. Dull blades increase the chance of kick out, and injury to yourself and bystanders.


Plastic/Nylon Blades may be used where ever the nylon line head is used. DO NOT use this blade for heavy weeds or brush!

8 Tooth Weed/Grass Blade is designed for grass, garden debris and thick weeds. DO NOT use this blade for brush or heavy woody growth, 19 mm(3/4 in.) diameter or larger. SRM-210Series P/N 69600120331

80 Tooth Brush Blade (P/N 69500120331) is designed for cutting brush and woody growth up to 64 mm (2-1/2 in.) diameter.

22 Tooth Clearing Blade (99944200130) is designed for dense thickets and saplings up to 64 mm (2-1/2 in.) diameter.



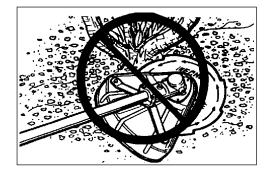



Shoulder/Waist Harness (P/N 30100052131) Use of the Shoulder/Waist Harness is required for blade operation, and is recommended for **ALL** Trimmer/Brush Cutter use.


The Shoulder/Waist Harness suspends the trimmer from the operator's shoulder, and reduces operator fatigue during nylon line trimming or cutting with a blade.

Operator safety is also enhanced by restricting trimmer movement and preventing blade or line contact with the operator's hands and feet during operation.



NOTE

In case of Emergency, the trimmer/brushcutter can be released from the harness by pulling up on the quick-release collar.

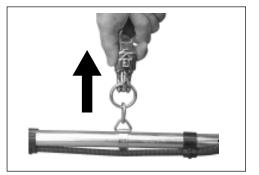



PRE-OPERATION

Fuel Requirements

Gasoline - Use 89 Octane [R + M/2] (mid grade or higher) gasoline known to be good quality. Gasoline may contain up to 15% MTBE (methyl tertiary-butyl ether). Gasohol containing methyl (wood) alcohol is **NOT** approved.

Two Stroke Oil - A two-stroke engine oil meeting ISO-L-EGD (ISO/CD 13738) and J.A.S.O. <u>FC</u> Standards must be used. Echo brand premium Power Blend TM Universal 2-Stroke Oil meets these standards. Engine problems due to inadequate lubrication caused by failure to use an ISO-L-EGD and J.A.S.O. <u>FC</u> certified oil, such as Echo premium Power Blend TM, will void the two-stroke engine warranty. (Emission related parts only are covered for two years, regardless of two-stroke oil used, per the statement listed in the Emission Defect Warranty Explanation.)

IMPORTANT

Echo premium Power BlendTM Universal 2-Stroke Oil may be mixed at 50:1 ratio for application in all Echo engines sold in the past regardless of ratio specified in those manuals.

Mixing Instructions

- 1. Fill an approved fuel container with half of the required amount of gasoline.
- 2. Add the proper amount of 2-stroke oil to gasoline.
- 3. Close container and shake to mix oil with gasoline.
- 4. Add remaining gasoline and remix.
- 5. Install fuel container cap and wipe any spilled fuel from container and surrounding area.

Handling Fuel



Fuel is **VERY** flammable. Use extreme care when mixing, storing or handling, otherwise serious personal injury may result.

- Use an approved fuel container.
- DO NOT smoke near fuel.
- DO NOT allow flames or sparks near fuel.
- Fuel tanks/cans may be under pressure. Always loosen fuel caps slowly allowing pressure to equalize.
- NEVER refuel a unit when the engine is HOT!
- NEVER refuel a unit with the engine running.
- DO NOT fill fuel tanks indoors. ALWAYS fill fuel tanks outdoors over bare ground.
- Securely tighten fuel cap after refueling.
- Inspect for fuel leakage. If fuel leakage is found, do not start or operate unit until leakage is repaired.

IMPORTANT

Spilled fuel is a leading cause of hydrocarbon emissions. Some states may require the use of automatic fuel shut-off containers to reduce fuel spillage. Contact your ECHO dealer for ordering information.

After Refueling

- Wipe any spilled fuel from the unit.
- Move at least 3 m (10 ft.) from refueling location before starting.

After Use

• DO NOT store a unit with fuel in its tank. Leaks can occur. Return unused fuel to an approved fuel storage container.

Storage

Fuel storage laws vary by locality. Contact your local government for the laws affecting your area. As a precaution, store fuel in an approved, air tight container. Store in a well ventilated, unoccupied building, away from sparks and flames. Do not store fuel longer than 30 days.

IMPORTANT

Stored fuel ages. Do not mix more fuel than you expect to use in thirty (30) days, ninety (90) days when a fuel stabilizer is added.

IMPORTANT

Stored two-stroke fuel may separate. ALWAYS shake fuel container thoroughly before each use.

OPERATION

STARTING COLD ENGINE



rotates, readjust carburetor according to "Carburetor Adjustment" instructions in this manual or see your ECHO Dealer, otherwise serious personal injury may result.

NOTE

Refer to Grass Trimmer/Brush Cutter Safety Manual for proper and safe techniques.

1. Stop Switch

Move stop switch button (A) forward, away from the STOP position.

2. Choke Lever

3. Primer Bulb

Pump primer bulb (C) until fuel is visible and flows freely in the clear fuel tank return line. Pump bulb an additional 4 or 5 times.

NOTE

Lightly place knee on drive shaft to stabilize unit during starting. Do not apply excessive downward force or damage to unit can occur.

4. Recoil Starter

Lay the unit on a flat, clear area. Firmly grasp right hand grip and throttle trigger lockout with left hand, and fully depress throttle trigger to wide open position. Rapidly pull the recoil starter handle/ rope (D) until engine fires (or maximum 5 pulls).

5. Choke

After engine fires (or 5 pulls), move choke lever back to "Run"


(****) position. Hold throttle trigger and throttle trigger lockout fully depressed, and pull recoil starter starter handle/rope until engine starts and runs. Release throttle trigger, and allow unit to warm up at idle for several minutes.


NOTE


If engine does not start with choke in "Run" position after 5 pulls, repeat instructions 4 and 5.

6. Throttle Trigger

After engine warm-up, gradually depress throttle trigger to increase engine RPM to operating speed.

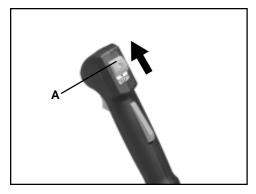

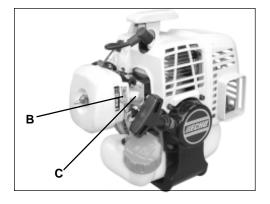

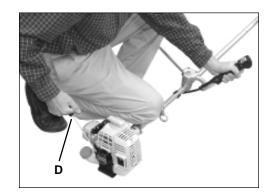

20////EEHD


STARTING WARM ENGINE WARNING A DANGER The cutting attachment should not rotate at idle. If attachment rotates, readjust carburetor according to "Carburetor Adjustment" instructions in this manual or see your ECHO Dealer, otherwise serious personal injury may result. 1. Stop Switch Move stop switch button (A) away from the STOP position. **Recoil Starter** Lay the unit on a flat, clear area and pull the recoil starter handle

(D) until the engine fires.

NOTE

2.

If engine does not start after 5 pulls, use Cold Start Procedure.

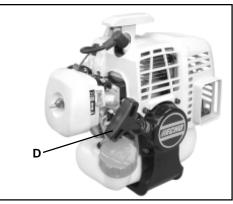


STOPPING ENGINE

- 1. *Release Throttle*. Allow engine to return to idle before shutting off engine.
- 2. Stop Switch. Move stop switch button backward to STOP position.



If engine does not stop when stop switch is moved to "STOP" position, move choke lever to closed "Cold Start" position to stall engine. Have your ECHO dealer repair stop switch before using trimmer again.

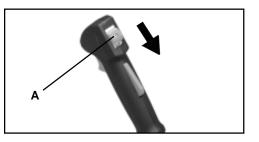

MAINTENANCE

Your ECHO unit is designed to provide many hours of trouble free service. Regular scheduled maintenance will help your unit achieve that goal. If you are unsure or are not equipped with the necessary tools, you may want to take your unit to an ECHO Service Dealer for maintenance. To help you decide whether you want to DO-IT-YOURSELF or have the ECHO Dealer do it, each maintenance task has been graded. If task is not listed, see your ECHO Dealer for repairs.

SKILL LEVELS

- Easy to do. Most required tools come with unit. Level 1 =
- Level 2= Moderate difficulty. Some specialized tools may be required.
- Level 3= Experience required. Specialized tools are required. Echo recommends that the unit be returned to your ECHO dealer for service.

ECHO offers **REPOWERTM** Maintenance Kits and Parts to make your maintenance job easier. Just below each task heading are listed the various part numbers required for that task. See your ECHO dealer for these parts.

MAINTENANCE INTERVALS

COMPONENT/ SYSTEM	MAINTENANCE PROCEDURE	REQ'D SKILL LEVEL	DAILY OR BEFORE USE	EVERY REFUEL	3 MONTHS OR 90 HOURS	6 MONTHS OR 270 HOURS	YEARLY 600 HOURS
	Recommended Ech	o Dealer	Maintenanc	e Procedur	es		
Cylinder Exhaust Port	Inspect/Clean/Decarbon	3			I/C		
	Do-lt-Yourse	If Mainter	nance Proce	dures	1	1	1
Air Filter	Inspect/Clean/Replace	1	I/C		R*		
Choke	Inspect/Clean	2	I/C				
Fuel Filter	Inspect/Replace	1			I		I / R *
Fuel System, leaks	Inspect/Replace	1	I *	I	I		
Cooling System	Inspect/Clean	2	I/C				
Muffler Spark Arrestor	Inspect/Replace	2			I / R *		
Drive Shaft (Flex Cable Models)	Grease	2			I (1)		
Gear Housing	Grease	2			I (2)		
Recoil Starter Rope	Inspect/Clean	1	I / C *				
Spark Plug	Inspect/Clean	2			I/C	R *	
Screws/Nuts/Bolts	Inspect/Tighten/Replace	1	I / R *				

MAINTENANCE PROCEDURE LETTER CODES: I = INSPECT, R = REPLACE, C = CLEAN

IMPORTANT NOTE - Time intervals shown are maximum. Actual use and your experience will determine the frequency of required maintenance.

MAINTENANCE PROCEDURE NOTES:
 (1) Apply ECHO_® LUBE[™] every 25 hours of use.

(2) Apply ECHO_® LUBE[™] every 50 hours of use.
 * All recommendations to replace are based on the finding of damage or wear during inspection...



AIR FILTER

Level 1.

Tools required: 25-50 mm (1 or 2 in.) medium bristle paint brush.


Parts required: 90030 REPOWER[™] AIR & FUEL FILTER KIT.

 
- 1. Close choke (Cold Start Position). This prevents dirt from entering the carburetor throat when the air filter is removed. Brush accumulated dirt from the air cleaner area.
- 2. Remove the air cleaner cover. Clean and inspect the element for damage. If element is fuel soaked or very dirty, replace.
- 3. If element can be cleaned and reused, be certain it:
 - still fits the cavity in the air cleaner cover.
 - is installed with the original side out.

NOTE

Carburetor adjustment may be needed after air filter cleaning/ replacement.



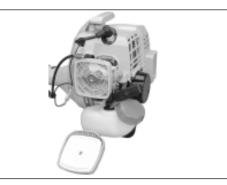



FUEL FILTER

Level 1.

Tools required: Fuel line hook. 200-250 mm (8 - 10 in.) length of wire with one end bent into a hook. Clean rag, funnel, and an approved fuel container.

Parts required: 90030 REPOWER[™] AIR & FUEL FILTER KIT.



WARNING A DANGER Fuel is **VERY** flammable. Use extreme care when mixing, storing or handling.

- 1. Use a clean rag to remove loose dirt from around fuel cap and empty fuel tank.
- 2. Use the "fuel line hook" to pull the fuel line and filter from the tank.
- 3. Remove the filter from the line and install the new filter.



Grass Trimmer/Brush Cutter Operator's Manual 23


SPARK PLUG


Level 2.

Tools Required: Scrench (combination socket wrench & screw driver) Feeler gauge, preferably a wire gauge. Brush.

Parts Required: REPOWER[™] Tune-Up Kit P/N90074

- 1. Remove spark plug and check for wear or fouling.
- 2. Clean the plug or replace with a new one. DO NOT sand blast to clean. Remaining sand will damage engine.
- 3. Adjust spark plug gap by bending outer electrode.
- 4. Install spark plug and tighten to 145-155 kg/cm (125-135 in. lb.).

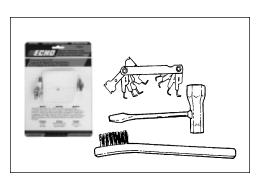

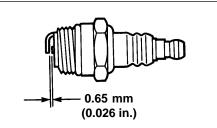

COOLING SYSTEMS CLEANING

Level 2.

Tools required: Cross Head Screwdriver, 4 mm Hex Wrench, Pointed Wood Stick, 25-50 mm (1-2 in.) medium bristle paint brush.

Parts Required: No parts are required if care is used during cleaning.

IMPORTANT


To maintain proper engine operating temperatures, cooling air must pass freely through the cylinder fin area. This flow of air carries combustion heat away from the engine.


Overheating and engine seizure can occur when:

- Air intakes are blocked, preventing cooling air from reaching the cylinder.
- Dust and grass build-up on the outside of the cylinder. This build up insulates the engine and prevents the heat from leaving.

Removal of cooling passage blockages or cleaning of cooling fins is considered "Normal Maintenance." Any failure attributed to lack of maintenance is not warranted.

- 1. Disconnect spark plug lead from spark plug.
- 2. Remove (1) screw from top guard, and remove guard.
- 3. Remove (3) screws from engine cover, and remove cover.

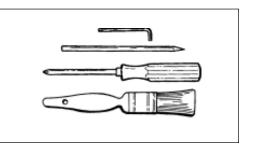


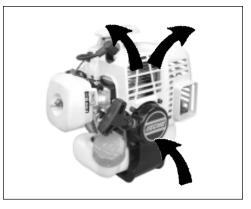



24 ///EEHD.

- 4. Use the wooden stick or brush to remove dirt from the cylinder fins.
- 5. Install engine cover properly, placing fuel vent tube into engine cover and deflector shield tabs (A) into slots in engine cover.
- 6. Secure engine cover with three (3) screws.
- 7. Install top guard, and secure with one (1) screw.
- 8. Connect spark plug lead to spark plug.

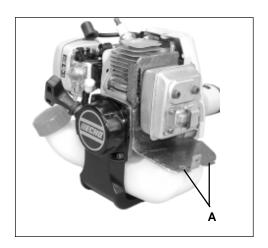

EXHAUST SYSTEM


Spark Arrestor Screen

Level 2.

Tools Required: Cross Head Screwdriver, Soft metal brush, Wooden carbon scraper, 3 and 4 mm Hex Wrench


Parts Required: Screen P/N 14586240630 Gasket P/N 14586642031

- 1. Disconnect spark plug lead from spark plug.
- 2. Remove (1) screw from top guard, and remove guard.
- 3. Remove (3) screws from engine cover, and remove cover.

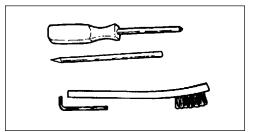



- 4. Remove screen holder (A), gasket (B) and screen (C) from muffler body.
- 5. Clean carbon deposits from muffler components.
- 6. Replace screen if it is cracked, plugged or has holes burned through.
- 7. Reassemble in reverse order of removal. Make sure screen is positioned properly before tightening screws.

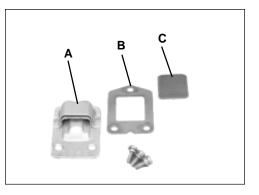

CARBURETOR ADJUSTMENT

NOTE

New engines must be operated for a minimum of two tanks of fuel before carburetor adjustments can be made. During the break-in period your engine performance will increase and exhaust emissions will stabilize. Idle speed can be adjusted as required.

High Altitude Adjustment

High altitude adjustment is not required for proper operation of this engine.

Emissions Adjustments

Every unit is run at the factory and the carburetor is set in compliance with applicable emission regulations. This carburetor does not have acceleration and high speed adjustment needles.

Idle Speed Adjustment

Idle speed adjustment may be required periodically to comply with specifications for this unit. See page 11, "Specifications" for correct idle speed.

Level 2.


Tools required: Screwdriver, Tachometer (ECHOP/N 99051130017).


Parts required: None.

1. Check idle speed using a tachometer, and reset if necessary. Turn idle screw (A) clockwise to increase idle speed; counter-clockwise to decrease idle speed.



When carburetor adjustment is completed, the cutting attachment should not turn at idle, otherwise serious personal injury may result.

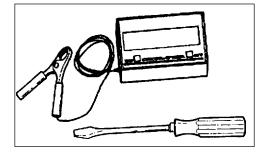

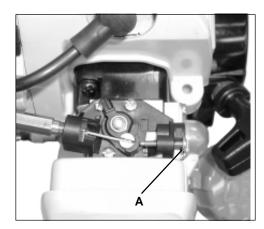




LUBRICATION

Level 1.


Tools Required: 8 mm Open-end Wrench, Screwdriver, Clean Rag.

Parts Required: ECHO_{\otimes} LUBETM 8 oz. (P/N 91014) or Lithium Base Grease.

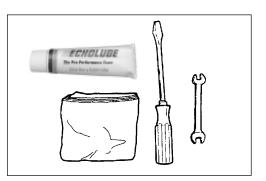


Gear Housing

- 1. Clean all loose debris from gear box.
- 2. Remove plug (A) and check level of grease.
- 3. Add grease if necessary. DO NOT over fill.

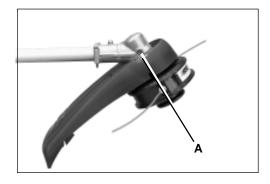

Drive Shaft

- 1. Loosen two (2) screws (B) and remove center locating screw (C). Pull gear box and shield from drive shaft.
- 2. Pull flexible cable from the drive shaft housing, wipe clean and recoat with a thin coating [1/2 oz. (15 ml)] of grease.
- 3. Slide the flexible cable back in the drive housing. DO NOT get dirt on the flex shaft.
- 4. Install the gear housing and shield assembly.

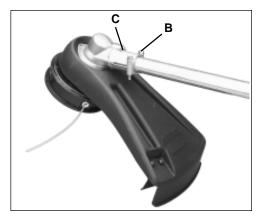

NYLON LINE REPLACEMENT


Level 1.

Parts Required: ECHO0.095" Nylon Trimmer Line 6 m (20 ft.) long.

- 1. Shut engine off. Lay unit on the ground with head assembly up.
- 2. Hold drum (A) and turn spool (B) CW (clockwise) until it stops. Pull spool from drum. DO NOT push in on spool when turning.

- 3. Use one piece of new nylon line (C) 6 m (20 ft.) long and thread through the molded loop (D) on the spool. Pull line tight and adjust so one end is 15 cm (6 in.) longer than the other.
- 4. Hold the spool, opening toward you. Place index finger between the two strands and wind line, tightly and evenly, in direction of arrow (E) marked "CC".


- 5. Stop when approximately 15-20 cm (6-8 in.) line (C) remains and place ends of line in notches (F) in spool (B).
- 6. Feed ends of line through housing eyelets (G) and place spool (B) over drive (H). Align pegs (I) on drive with notches in spool, and push spool into drum.
- 7. Pull on both lines until they come free from notches (F) in spool.

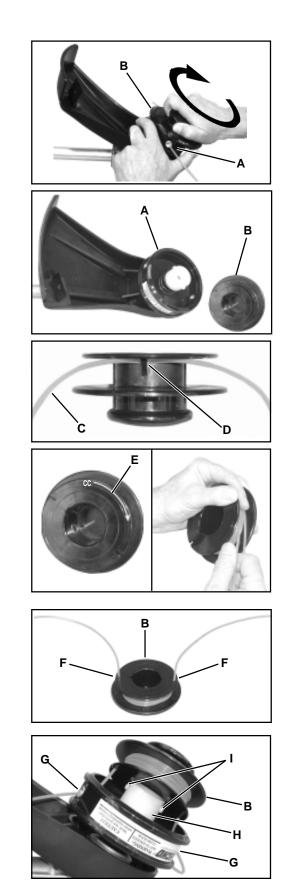



8. Hold drum (A) firmly and turn spool (B) CCW (counterclockwise) until it stops. DO NOT push in on spool when turning.

9. Pull both lines out and trim to cut-off knife length.

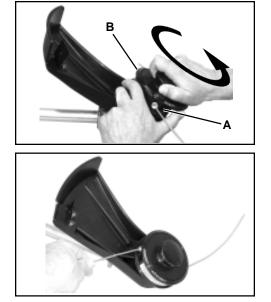

SHARPENING METAL BLADES

Three styles of metal blades are approved for use on the ECHO Brush Cutter. The 8-tooth blade can be sharpened during normal maintenance. The clearing blade and 80 tooth blade require professional service.

Before sharpening, CLOSELY inspect blade for cracks (look at the bottom of each tooth and the center mounting hole closely), missing teeth and bending. If ANY of these problems are discovered, replace the blade.

When sharpening a blade, always remove the same amount of materials from each tooth to maintain balance. A blade that is not balanced will cause unsafe handling due to vibration and can result in blade failure.


Tool required: Flat file (preferred). Electric grinder if special care is used. Round (rat tail) file for gullet (radius).


- 1. File each tooth at a 30 degree angle a specific number of times, eg. 4 strokes per tooth. Work your way around the blade until all teeth are sharp.
- 2. DO NOT file the 'gullet' (radius) of the tooth with the flat file. The radius must remain. A sharp corner will lead to a crack and blade failure.


IMPORTANT

If an electric grinder is used, use care not to overheat teeth, do not allow tips/tooth to glow red or turn blue. DO NOT place blade in cooling water. This will change the temper of the blade and could result in blade failure.

3. After sharpening teeth, check each tooth radius for evidence of a square (sharp) corner. Use the round (rat tail) file to renew the radius.

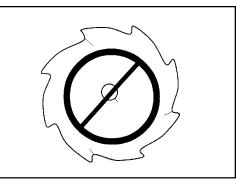

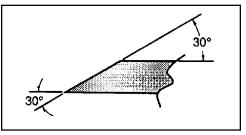

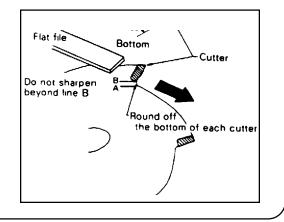

TROUBLESHOOTING

Problem	Check	Status	Cause	Remedy
	Fuel at carburetor	No fuel at carburetor	Fuel strainer clogged Fuel line clogged Carburetor	Clean or replace Clean or replace See your Echo dealer
		No fuel at cylinder	Carburetor	See your Echo dealer
Engine cranks - starts hard/ doesn't start	Fuel at cylinder	Muffler wet with fuel	Fuel Mixture too rich	Open choke Clean/replace air filter Adjust carburetor See your Echo dealer
	Spark at end of plug wire	No spark	Stop switch off Electrical problem Interlock switch	Turn switch to ON See your Echo dealer See your Echo dealer
	Spark at plug	No spark	Spark gap incorrect Covered with carbon Fouled with fuel Plug defective	Adjust to .65mm (0.026 in.) Clean or replace Clean or replace Replace plug
Engine runs, but dies or does not accelerate properly	Air filter	Air filter dirty	Normal wear	Clean or replace
	Fuel filter	Fuel filter dirty	Contaminants/residues in fuel	Replace
	Fuel vent	Fuel vent plugged	Contaminants/residues in fuel	Clean or replace
	Spark Plug	Plug dirty/worn	Normal wear	Clean and adjust or replace
	Carburetor	Improper adjustment	Vibration	Adjust
	Cooling System	Excessive dirt/debris	Extended operation in dirty/dusty locations	Clean
	Spark Arrestor Screen	Screen cracked, plugged, or perforated	Normal wear	Replace
Engine does not crank	N/A	N/A	Internal engine problem	See your Echo dealer

WARNING A DANGER

Fuel vapors are **extremely** flammable and may cause fire and/or explosion. **Never** test for ignition spark near an open spark plug opening, otherwise serious personal injury may result.



STORAGE



During operation the muffler or catalytic muffler and surrounding cover become hot. Always keep exhaust area clear of flammable debris during transportation or when storing, otherwise serious property damage or personal injury may result.

Long Term Storage (over 30 days)

Do not store your unit for a prolonged period of time (30 days or longer) without performing protective storage maintenance which includes the following:


1. Store unit in a dry, dust free place, out of the reach of children.



Do not store in enclosure where fuel fumes may accumulate or reach an open flame or spark.

- 2. Place the stop switch in the "STOP" position.
- 3. Remove accumulation of grease, oil, dirt and debris from exterior of unit.
- 4. Perform all periodic lubrication and services that are required.
- 5. Tighten all the screws and nuts.
- 6. **Drain** the fuel tank **completely** and pull the recoil starter handle several times to remove fuel from the carburetor.

- 7. Remove the spark plug and pour 7 cc (1/4 oz.) of fresh, clean, two-stroke engine oil into the cylinder through the spark plug hole.
 - A. Place a clean cloth over the spark plug hole.
 - B. Pull the recoil starter handle 2-3 times to distribute the oil inside the engine.
 - C. Observe the piston location through the spark plug hole. Pull the recoil handle slowly until the piston reaches the top of its travel and leave it there.
- 8. Install the spark plug (do not connect ignition cable).

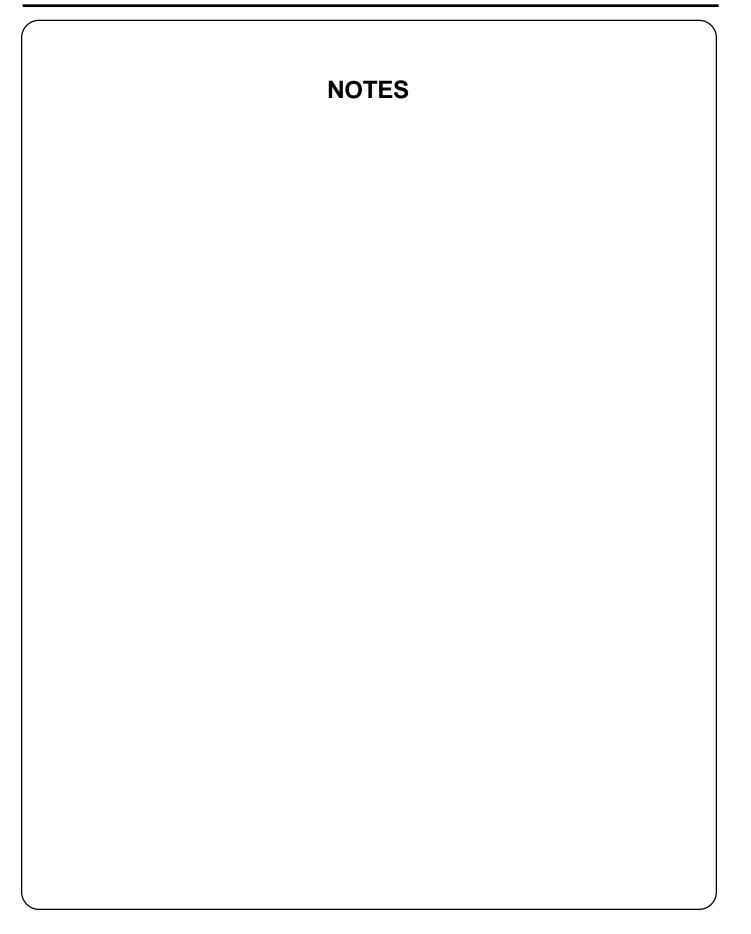

SERVICING INFORMATION

PARTS

Genuine ECHO Parts and ECHO REPOWERTM Parts and Assemblies for your ECHO products are available only from an Authorized ECHO Dealer. When you do need to buy parts **always** have the Model Number and Serial Number of the unit with you. You can find this information on the engine housing. For future reference, write them in the space provided below.

Model No.	S.N	

SERVICE

Service of this product during the warranty period must be performed by an Authorized ECHO Service Dealer. For the name and address of the Authorized ECHO Service Dealer nearest you, ask your retailer or call: 1-800-432-ECHO (3246). Dealer information is also available on our Web Site. When presenting your unit for Warranty service/repairs, proof of purchase is required.

ECHO CONSUMER PRODUCT SUPPORT

If you require assistance or have questions concerning the application, operation, or maintenance of this product, you may call the ECHO Consumer Product Support Department at 1-800-673-1558 from 8:30 am to 4:30 pm (Central Standard Time) Monday through Friday. Before calling, please know the model and serial number of your unit to help your Consumer Product Support Representative.

WARRANTY REGISTRATION

You may register your Echo equipment using the warranty registration card or register on-line at www.echo-usa.com. Registering provides a direct link between you and ECHO if we find it necessary to contact you.

ADDITIONAL OR REPLACEMENT MANUALS

Safety Manuals in English/Spanish or English/French are available free of charge from your ECHO dealer, or online at www.echo-usa.com.

$Operator's \,and \,Parts\,Manuals\, are\, available\, by:$

- Downloading free from www.echo-usa.com
- Purchasing from your Echo Dealer.
- Sending a check or money order for \$2.00 per Parts Catalog or \$1.50 per Operator's Manual made payable to ECHO, INCORPORATED. State on a sheet of paper the model number and serial number of the ECHO unit you have, part number of the manual (if known), your name and address and mail to address below.

Safety Videos are available from your Echo dealer. A \$5.00 shipping charge is required for each video.


Available Parts Catalog Parts Lists

SRM-210U

Serial Number 05001001 - 05999999

Part Number 99922203252



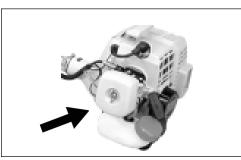

DEALER? CALL 1-800-432-ECHO OR www.echo-usa.com

CONSUMER PRODUCT SUPPORT 1-800-673-1558 8:30 - 4:30 MON - FRI C.S.T.

