



MOBILE GENERATORS

Recommended Parts Lists



SERVICE INTERVAL KITS	4
DGK7F RECOMMENDED PARTS LIST	6
DGK14F RECOMMENDED PARTS LIST	8
DGK15F RECOMMENDED PARTS LIST	10
DGK20FS RECOMMENDED PARTS LIST	12
DGK25F RECOMMENDED PARTS LIST	14
DGK36FS RECOMMENDED PARTS LIST	16
DGK45F RECOMMENDED PARTS LIST	18
DGK70F RECOMMENDED PARTS LIST	20
DGK125F/FP RECOMMENDED PARTS LIST	24
DGK180F/FP RECOMMENDED PARTS LIST	28



SERVICE INTERVAL KITS

Service kits are designed to keep your generator running at peak performance with reliable, long-lasting protection. This all-in-one maintenance solution includes oil, fuel, and air filters, a fuel/water separator, pre-fuel filter, main fuel filter, fuel pump filter, and a DEF filter.



Generator Model	Filter Kit	Includes
DGK7	92000Y	1J0903243 - OIL FILTER
		1627143562 - FUEL FILTER
		1G65911220 - AIR FILTER
DGK14	90210Y	HH16432430 - OIL FILTER
		1552143160 - FUEL FILTER
		TA04093230 - AIR FILTER
DGK15	92020Y	1J0903243 - OIL FILTER
		1G38143350 - FUEL/WATER SEP
		1627143562 - FUEL FILTER
		1G31911212 - AIR FILTER
DGK20/DGK25	92030Y	8944567412 - OIL FILTER
		8982402790 - PRE FUEL FILTER
		8982402800 - MAIN FUEL FILTER
		YH176000090 - AIR FILTER
		8980714010 - FUEL PUMP FILTER
DGK36/DGK45	92040Y	8980756761 - OIL FILTER
		8982402790 - PRE FUEL FILTER
		8982402800 - MAIN FUEL FILTER
		YH176000090 - AIR FILTER
		8980714010 - FUEL PUMP FILTER
DGK70F	92050Y	8980188580 - OIL FILTER
		8983129180 - SPIN ON FUEL FLT
		8980742880 - SPIN ON FUEL FLT
		YH176000180 - AIR FLT INNER
		YH176000190 - AIR FLT OUTER
		YH176000350 - DEF FILTER
		8980714010 - FUEL PUMP FILTER
DGK125	92060Y	8983758600 - OIL FILTER
		8983129180 - SPIN ON FUEL FLT
		8980742880 - ELEMENT FUEL FLT
		YH176000250 - AIR FLT INNER
		YH176000260 - AIR FLT OUTER
		YH176000350 - DEF FILTER
		8980714010 - FUEL PUMP FILTER
DGK180	92070Y	89837586 - OIL FILTER
		8983129180 - SPIN ON FUEL FLT
		8980742880 - ELEMENT FUEL FLT
		YH176000320 - AIR FLT INNER
		YH176000330 - AIR FLT OUTER
		YH176000350 - DEF FILTER
		8980714010 - FUEL PUMP FILTER
DGW400	92020Y	1J0903243 - OIL FILTER
		1G38143350 - FUEL/WATER SEP
		1627143562 - FUEL FILTER
		1G31911212 - AIR FILTER

DGK7F RECOMMENDED PARTS LIST

S/N D17601000001 - D17601000020



ECHO

Item	P/N
FILTER KIT	92000Y
FUEL FILTER ASSEMBLY COMPLETE	1G31843012
FUEL TANK CAP	G255000110
FUEL TANK CAP CHAIN	V489000120
FUEL TANK CAP GASKET	V107000140
FUEL TANK STRAINER	A369000180
GFCI RECEPTACLE 20A 125V	C154000491
RECEPTACLE TWIST LOCK 50 125V/250V	C154000170
CIRCUIT BREAKER 20A	C137000080
CIRCUIT BREAKER 50A	C137000070
EXCITATION RECTIFIER (FULL WAVE BRIDGE)	M105000000
AVR	G370002172
EMERGENCY UNIT	1747260606
RELAY (MAIN)	G370000471
THROTTLE MOTOR (RPM ADJUSTMENT)	G280000430
TOGGLE SWITCH MAIN	A440001970
TOGGLE SWITCH MAIN (RUBBER CAP)	V494000910
TOGGLE SWITCH (ACCESSORY / DIAGNOSTIC MODE)	G334001960
STARTER SWITCH	G334002060
CONTROL PANEL FASTENING KNOB	V299000480
CONTROL PANEL FASTENING KNOB LOCKING RING	V324000010

Kubota Z482

Item	P/N
DRIVE V-BELT	1747297010
OIL PRESSURE SWITCH/SENDER	15221-3901-6
RADIATOR HOSE UPPER	1G31972940
RADIATOR HOSE LOWER	G203000570
WATER PUMP ASSM	1E05173036
WATER PUMP GASKET	16871-7343-0
THERMOSTAT	15531-7301-4
THERMOSTAT GASKET	16851-7327-0
STARTER	YH176000370
DYNAMO	YH176000600
STOP SOLENOID	1685160015

DGK14F RECOMMENDED PARTS LIST

S/N D18101000001 - D18101999999



ECHO

Item	P/N
FILTER KIT	92010Y
FUEL FILTER PRIMARY ASSEMBLY (COMPLETE)	1707643015
FUEL TRANSFER PUMP (COMPLETE)	1G37752030
FUEL SEPARATOR FILTER ASSEMBLY (PRE-FILTER)	1G38143350
FUEL TANK CAP	G255000010
FUEL TANK STRAINER	A369000160
GFCI RECEPTACLE 20A 125V	C154000491
RECEPTACLE TWIST LOCK 50 125V/250V	C154000170
SOCKET,50A 240V TWIST LOCK	C154000180
CIRCUIT BREAKER 20A	C137000080
CIRCUIT BREAKER 50A	C137000070
CIRCUIT BREAKER 20A (USED FOR SOCKET 50A)	C137000090
AVR	G370001791
ECU	1K98960605
RELAY (MAIN)	RP42153730
RELAY (RELAY COMP/STARTER RELAY)	K6888153540
RELAY (QTY 3)	G343000490
TOGGLE SWITCH ON/OFF THROTTLE	A045000761
TOGGLE SWITCH MAIN (RUBBER CAP)	V494000910
TOGGLE SWITCH (ACCESSORY / DIAGNOSTIC MODE)	G334001960
STARTER SWITCH	G334002060
CONTROL PANEL FASTENING KNOB	M613000020
CONTROL PANEL FASTENING KNOB LOCKING RING	V583000230

Kubota D1503

Item	P/N
CRANK POSITION SENSOR	5H911-4262-2
WATER TEMP SWITCH	YH176000490
WATER TEMP SENSOR SENDER/GAUGE	YH176000500
DRIVE V-BELT	1711297012
RADIATOR HOSE UPPER	1K37672940
RADIATOR HOSE LOWER	1K37672850
WATER PUMP ASSEMBLY	1A05173036
GASKET, WATER PUMP	1A051-7343-0
SENSOR WATER TEMP	G365000041
OIL PRESSURE SENDING	C100000440
STOP SOLENOID	YH176000430
STARTER	15461-6301-0
OIL PRESSURE SWITCH	1584039013
THERMOSTAT	YH176000480

DGK15F RECOMMENDED PARTS LIST

S/N D16301000128 - D16301999999



ECHO

Item	P/N
FILTER KIT	92020Y
FUEL FILTER ASSEMBLY (COMPLETE)	1G31843012
FUEL TANK CAP	G255000110
FUEL TANK CAP GASKET	V107000140
FUEL TANK STRAINER	A369000180
GFCI RECEPTACLE 20A 125V	C154000491
RECEPTACLE TWIST LOCK 50 125V/250V	C154000170
CIRCUIT BREAKER 20A	C137000080
CIRCUIT BREAKER 50A	C137000070
EXCITATION RECTIFIER (FULL WAVE BRIDGE)	M105000000
AVR	G370002172
ECU	1747260606
RELAY 12V 1A CONTROL RELAY	G370000471
FUSE MAIN 50A	G350000450
THROTTLE MOTOR (RPM ADJUSTMENT)	G280000430
VOLTAGE REGULATOR RHEOSTAT & KNOB	M112000160 & E145000060
TOGGLE SWITCH MOMENTARY / DISPLAY SELECTOR	A440001970
TOGGLE SWITCH MAIN (RUBBER CAP)	V494000910
TOGGLE SWITCH (ACCESSORY)	G334001960
TOGGLE SWITCH STARTER (AUTO/START/STOP)	G334002060
TOGGLE SWITCH MAINTENANCE	A440003600
LUG (TERMINAL STUD)	V227000010
LUG (TERMINAL STUD) FASTENING BOLT	V207000090
CONTROL PANEL FASTENING KNOB & LOCKING RING	V299000480 & V324000010

Kubota D902

Item	P/N
DRIVE V-BELT	1747297010
RADIATOR HOSE UPPER	1G31972940
RADIATOR HOSE LOWER	1G31972850
THERMOSTAT ASSM	19434-73015
THERMOSTAT GASKET	16221-7327-0
SENSOR WATER TEMP SWITCH	17538-8304-0
OIL PRESSURE SWITCH	15221-39016
FUEL STOP SOLENOID	16821-60014
WATER PUMP	YH176000570
WATER PUMP GASKET	YH176000580
INJECTOR PUMP	1600651012
ALTERNATOR / DYNAMO	YH176000600
STARTER	16824-63013

DGK20FS RECOMMENDED PARTS LIST

S/N D20401000001 - D20401099999



ECHO

Item	P/N
FILTER KIT	92030Y
PRE FUEL FILTER ASSEMBLY (COMPLETE)	I8982369910
FUEL TRANSFER PUMP (COMPLETE WITH GASKETS)	8980682752
FUEL FILTER PRIMARY (WITH HAND PUMP)	I8982369900
FUEL TANK CAP & STRAINER	G255000010 & A369000160
GFCI RECEPTACLE 20A 125V	C154000491
CIRCUIT BREAKER 20A	C137000080
VOLTAGE REGULATION RHEOSTAT AND KNOB	M112000010 & E145000060
AVR	G370001762
RELAY	G343000490
RELAY	I5825500290
RELAY	I8942481610
MAIN FUSE 60A	G350000210
SWITCH STARTER	G334001790
LUG (TERMINAL STUD)	V227000010
LUG (TERMINAL STUD) FASTENING BOLT	V207000090
CONTROL PANEL LOCKING KNOB AND LOCKING RING	M613000020 & V583000230
TOGGLE SWITCH MAIN (RUBBER CAP)	V494000910
TOGGLE SWITCH	G334001960
TOGGLE SWITCH STARTER (AUTO/START/STOP)	G334002060
TOGGLE SWITCH (MAINTENANCE)	A440003600
LUG	V227000010
LUG FASTENING BOLT	V207000090

Isuzu 4LE2T

Item	P/N
SUCTION CONTROL VALVE	8981455021
EGR VALVE GASKET (REQUIRES 2)	8982100160 & 8982963060
EGR VALVE	8982394801
SENSOR MAP	8981216970
SENSOR MANIFOLD	8973811820
SENSOR OIL PRESSURE	8980274560
SENSOR AIR INTAKE	I8121468300
CRANKSHAFT POSITION SENSOR	8973121081
CAM POSITION SENSOR	8980190240
FUEL RAIL PRESSURE SENSOR	8981387360
WATER TEMP SENSOR	8-12146-830-0
WATER TEMP SENSOR	8-98156-648-0
DRIVE V-BELT	I8980953350
ALTERNATOR	8972283181
STARTER	8971128652
RADIATOR HOSE UPPER	G203000580
RADIATOR HOSE LOWER	G203000590
WATER PUMP & GASKET	5873111832
THERMOSTAT	8973617700
THERMOSTAT GASKET	8972646901

DGK25F RECOMMENDED PARTS LIST

S/N D16201000001 - D16201999999



ECHO

Item	P/N
FILTER KIT	92030Y
KEY SWITCH ASSEMBLY	I8944025000
PRE FUEL FILTER ASSEMBLY (COMPLETE)	I8982369910
FUEL TRANSFER PUMP (COMPLETE WITH GASKETS)	I8982369910 & I8980682752
FUEL FILTER PRIMARY (WITH HAND PUMP)	I8982369900
FUEL TANK CAP & STRAINER	G255000010 & A369000160
GFCI RECEPTACLE 20A 125V	C154000491
CIRCUIT BREAKER 20A	C137000080
RECEPTACLE TWIST LOCK 50A 125V/250V	I8980682752
CIRCUIT BREAKER 50A	C137000070
VOLTAGE REGULATION RHEOSTAT AND KNOB	M112000010 & E145000060
AVR	G370001762
RELAY (QTY 3)	I5825500290
RELAY (QTY 2)	I8942481610
RELAY (QTY 1)	I8942481610
TOGGLE SWITCH RUBBER CAP	V494000910
TOGGLE SWITCH ON/OFF (QTY 2)	A440001970
TOGGLE SWITCH(ON/OFF)	A045000761
MAIN FUSE 50A	G350000250
MAIN FUSE 60A	G350000210
LUG (TERMINAL STUD)	V227000010
LUG (TERMINAL STUD) FASTENING BOLT	V207000090
CONTROL PANEL LOCKING KNOB AND LOCKING RING	M613000020 & V583000230

Isuzu 4LE2T

Item	P/N
SUCTION CONTROL VALVE	8981455021
EGR VALVE GASKET (REQUIRES 2)	8982963060 & 8982100160
EGR VALVE	8982394801
SENSOR MAP	8981216970
SENSOR MANIFOLD	8973811820
SENSOR OIL PRESSURE	8980274560
SENSOR AIR INTAKE	I8121468300
CRANKSHAFT POSITION SENSOR	8973121081
CAM POSITION SENSOR	8980190240
FUEL RAIL PRESSURE SENSOR	8981387360
MA SENSOR	8-12146-830-0
WATER TEMPERATURE SENSOR	8-98156-648-0
DRIVE V-BELT	I8980953350
ALTERNATOR	8972283181
STARTER	8971128652
RADIATOR HOSE UPPER	G203000580
RADIATOR HOSE LOWER	G203000590
WATER PUMP & GASKET	5873111832
THERMOSTAT	8973617700
THERMOSTAT GASKET	8972646901

DGK36FS RECOMMENDED PARTS LIST

S/N D20501000001 - D20501099999



ECHO

Item	P/N
FILTER KIT	92040Y
PRE FUEL FILTER ASSEMBLY (COMPLETE)	I8982369910
FUEL TRANSFER PUMP (COMPLETE WITH GASKETS)	8980682752
FUEL FILTER PRIMARY (WITH HAND PUMP)	I8982369900
FUEL TANK CAP	G255000010
FUEL TANK STRAINER	A369000160
GFCI RECEPTACLE 20A 125V	C154000491
CIRCUIT BREAKER 20A	C137000080
AVR	G370001762
MAIN FUSE 60A	G350000210
RELAY (QTY 2)	I8942481610
RELAY	G343000490
RELAY (QTY 3)	I5825500290
LUG (TERMINAL STUD)	V227000010
LUG (TERMINAL STUD) FASTENING BOLT	V207000090
VOLTAGE ADJUSTMENT RHEOSTAT & KNOB	M112000010 & E145000060
CONTROL PANEL FASTENING KNOB LOCKING RING	M613000020 & V583000230
TOGGLE SWITCH (ON/OFF)	A045000761
MAIN FUSE 50A	G350000250
MAIN FUSE 60A	G350000210
LUG (TERMINAL STUD)	V227000010
LUG (TERMINAL STUD) FASTENING BOLT	V207000090
CONTROL PANEL LOCKING KNOB AND LOCKING RING	M613000020 & V583000230

Isuzu 4LE2X

Item	P/N
SUCTION CONTROL VALVE	8981455021
EGR VALVE GASKET (REQUIRES 2)	8982963060 & 8982100160
EGR VALVE	8-98239-480-1
SENSOR MAP	8-98121-697-0
SENSOR MANIFOLD	8-97381-182-0
SENSOR OIL PRESSURE	8-98027-456-0
SENSOR AIR INTAKE	I8121468300
CRANKSHAFT POSITION SENSOR	8973121081
CAM POSITION SENSOR	8980190240
FUEL RAIL PRESSURE SENSOR	8-98138-736-0
WATER TEMP SENSOR	YH176000910
WATER TEMP SENSOR	YH176000850
DRIVE V-BELT	I8980953350
ALTERNATOR	8972283181
STARTER	8971128652
RADIATOR HOSE UPPER	G203000580
RADIATOR HOSE LOWER	G203000590
WATER PUMP & GASKET	5873111832
THERMOSTAT	8973617700
THERMOSTAT GASKET	8972646901

DGK45F RECOMMENDED PARTS LIST

S/N D15601000001 - D15601999999



ECHO

Item	P/N
FILTER KIT	92040Y
KEY SWITCH ASSEMBLY	I8944025000
FUEL TRANSFER PUMP (COMPLETE WITH GASKETS)	I8980682752
FUEL FILTER PRIMARY (WITH HAND PUMP)	I8982369900
PRE FUEL FILTER ASSEMBLY (COMPLETE)	I8982369910
FUEL TANK CAP	G255000010
FUEL TANK STRAINER	A369000160
GFCI RECEPTACLE 20A 125V	C154000491
RECEPTACLE TWIST LOCK 50A 125V/250V	C154000170
CIRCUIT BREAKER 20A	C137000080
CIRCUIT BREAKER 50A	C137000070
AVR	G370001762
RELAY (QTY 1)	I8942481610
RELAY (QTY 2)	G343000490
RELAY (QTY 3)	I5825500290
SWITCH TOGGLE ON/OFF (QTY 2)	A440001970
SWITCH TOGGLE ON/OFF (QTY 1)	A045000761
SWITCH TOGGLE CAP	V494000910
FUSE MAIN 50A	G350000250
LUG (TERMINAL STUD)	G343000490
LUG (TERMINAL STUD) FASTENING BOLT	V209000170
VOLTAGE ADJUSTMENT RHEOSTAT & KNOB	M112000010 & E145000060
CONTROL PANEL FASTENING KNOB	M613000020
CONTROL PANEL FASTENING KNOB LOCKING RING	V583000230

Isuzu 4LE2X

Item	P/N
SUCTION CONTROL VALVE	8981455021
EGR VALVE GASKET (REQUIRES 2)	8982963060 & 8982100160
EGR VALVE	8-98239-480-1
SENSOR MAP	8-98121-697-0
SENSOR MANIFOLD	8-97381-182-0
SENSOR OIL PRESSURE	8-98027-456-0
SENSOR AIR INTAKE	I8121468300
CRANKSHAFT POSITION SENSOR	8973121081
CAM POSITION SENSOR	8980190240
FUEL RAIL PRESSURE SENSOR	8-98138-736-0
WATER TEMP SENSOR	YH176000910
WATER TEMP SENSOR	YH176000850
DRIVE V-BELT	I8980953350
ALTERNATOR	8972283181
STARTER	8971128652
RADIATOR HOSE UPPER	G203000580
RADIATOR HOSE LOWER	G203000590
WATER PUMP & GASKET	5873111832
THERMOSTAT	8973617700
THERMOSTAT GASKET	8972646901

DGK70F RECOMMENDED PARTS LIST

S/N D17101000001 - D17101000152



ECHO

Item	P/N
FILTER KIT	92050Y
KEY SWITCH ASSEMBLY	I8944025000
PRE FUEL FILTER ASSM (COMPLETE)	I8980758555
FUEL TRANSFER PUMP (COMPLETE WITH GASKETS)	I8980682752
FUEL FILTER HEAD PRIMARY (WITH HAND PUMP)	8983129151
FUEL TANK CAP	G255000010
FUEL TANK STRAINER	A369000160
GFCI RECEPTACLE 20A 125V	C154000491
RECEPTACLE TWIST LOCK 50 125V/250V	C154000170
CIRCUIT BREAKER 20A	C137000080
CIRCUIT BREAKER 50A	C137000070
VOLTAGE REGULATION RHEOSTAT AND KNOB	M112000010 & E145000060
AVR	G370001762
RELAY (QTY2)	G343000490
RELAY (QTY1)	I8942481610
RELAY (QTY4)	5825500290
FUSE 50A	G350000250
FUSE 60A	G350000210
TOGGLE SWITCH THROTTLE	A045000770
TOGGLE SWITCH LOAD BANK CONTROL	A045000761
TOGGLE SWITCH (OIL PRESSURE/WATER TEMP/SPEED)	A440001970
TOGGLE SWITCH ON/OFF DISPLAY SELECTOR	A440001970
TOGGLE SWITCH CAP	V494000910
LUG (TERMINAL STUD)	V229000020
LUG (TERMINAL STUD) FASTENING BOLT	V209000170
CONTROL PANEL FASTENING KNOB	M613000020
CONTROL PANEL FASTENING KNOB LOCKING RING	V583000230

Isuzu 4JJ1X

Item	P/N
DEF CAP	8981202622
DEF TANK SIGHT TUBE	8981202641
SUCTION CONTROL VALVE	8981454491
EGR VALVE GASKET	8980945282
EGR VALVE	8982382461
SENSOR INTAKE MANIFOLD	8973811820
SENSOR MAP	8980094180
SENSOR MAT	8121468300
SENSOR MAF	YH176001050
CAM POSITION SENSOR	8-98019-024-0
CRANK POSITION SENSOR	8-97312-108-1
FUEL RAIL PRESSURE SENSOR	8-98138-736-0
WATER TEMP SENSOR	8981566480
DRIVE V-BELT	I8973629260
OIL PRESSURE SENSOR	8-98027-456-0
ALTERNATOR	8980762602

DGK70F RECOMMENDED PARTS LIST (CONT.)

S/N D17101000001 - D17101000152



Isuzu 4JJ1X

Item	P/N
STARTER	8-98084-407-0
RADIATOR HOSE UPPER	G203000720
RADIATOR HOSE LOWER	G203000730
WATER PUMP AND GASKET	8-98047-689-4
THERMOSTAT 82C ORANGE W/ GASKET	YH176000990
O2 SENSOR FRONT	8981783581
O2 SENSOR REAR	8981867621
NOX SENSOR	8982465063
EXHAUST TEMP SENSOR DEF DCM	I8982387670

DGK125F/FP RECOMMENDED PARTS LIST

S/N D18601000034-D18601999999 (F)

S/N D20301000001 - D20301999999 (FP)



ECHO

Item	P/N
FILTER KIT	92060Y
PRE FUEL FILTER ASSEMBLY COMPLETE	8980758555
FUEL TRANSFER PUMP (COMPLETE W/ GASKETS)	I8981731650
FUEL FILTER HEAD PRIMARY (W/ HAND PUMP)	8983129151
FUEL TANK CAP	G255000170
GFCI RECEPTACLE 20A 125V	C154000491
RECEPTACLE TWIST LOCK 50 125V/250V	C154000170
CIRCUIT BREAKER 20A	C137000080
CIRCUIT BREAKER 50A	C137000070
VOLTAGE REGULATION RHEOSTAT AND KNOB	M112000010 & E145000060
FUSE 50A	G350000250
FUSE 60A	G350000210
AVR	G370002983
RELAY (QTY 1)	I8942481610
RELAY (QTY 4)	I5825500290
RELAY (QTY 6)	G343000490
TOGGLE SWITCH LOAD BANK CONTROL	A045000770
TOGGLE SWITCH ACCESSORY /MAINTENANCE	G334001960
TOGGLE SWITCH ON/OFF	A440001970
TOGGLE SWITCH ON/OFF NKK S-2F	A045000770
TOGGLE SWITCH MAIN (RUBBER CAP)	V494000910
TOGGLE SWITCH APR22PR-311B SELECTOR	G334001100
TOGGLE SWITCH APR30PCR-3	G334002110
LUG (TERMINAL STUD)	V229000000
LUG (TERMINAL STUD) FASTENING BOLT	V211000020
CONTROL PANEL FASTENING KNOB	M613000340
CONTROL PANEL FASTENING KNOB LOCKING RING	V583000230

Isuzu 4HK1X

Item	P/N
DEF CAP	8981202622
DEF TANK SIGHT TUBE	8981202641
SUCTION CONTROL VALVE	8-98145-502-1
EGR VALVE GASKET	8980010240 & 8980010230
EGR VALVE	8983024482
SENSOR AIR INTAKE	8-97381-182-0
SENSOR MASS AIR FLOW	YH176001050
CRANK POSITION SENSOR	8-98027-456-0
FUEL RAIL PRESSURE SENSOR	8-98138-736-0
WATER TEMP SWITCH OVER HEAT / WARNING	YH176001570
OIL PRESSURE SENSOR	8981454491
DRIVE V-BELT	I1136715220
STARTER	8-98063-699-1
ALTERNATOR	YH176001160
RADIATOR HOSE UPPER	G203000790
RADIATOR HOSE LOWER	G203000800

DGK125F/FP RECOMMENDED PARTS LIST (CONT.)

S/N D18601000034-D18601999999 (F)

S/N D20301000001 - D20301999999 (FP)



Isuzu 4HK1X

Item	P/N
WATER PUMP WITH GASKET	YH176001090
THERMOSTAT 82C	YH176001100
THERMOSTAT 85C	YH176001110
THERMOSTAT GASKET	YH176001120
O2 SENSOR FRONT	8981783581
O2 SENSOR REAR	8981867621
NOX SENSOR	8982465063
EXHAUST TEMP SENSOR DEF DCM	I8982387670

DGK180F/FP RECOMMENDED PARTS LIST

S/N D184010000001 - D184010000096 (F)

S/N D190010000001 - D19001999999 (FP)



ECHO

Item	P/N
FILTER KIT	92070Y
PRE FUEL FILTER ASSEMBLY COMPLETE	8980758555
FUEL TRANSFER PUMP (COMPLETE W/ GASKETS)	8981731650
FUEL FILTER HEAD PRIMARY (W/ HAND PUMP)	8983129151
FUEL TANK CAP	G255000170
FUEL PUMP CONTROL 24VDC	G370002741
PCV FILTER	I8980305320
GFCI RECEPTACLE 20A 125V	C154000491
RECEPTACLE TWIST LOCK 50 125V/250V	C154000170
CIRCUIT BREAKER 20A	C137000080
CIRCUIT BREAKER 50A	C137000070
VOLTAGE REGULATION RHEOSTAT AND KNOB	M112000010 / E145000060
AVR	G370002723
RELAY STARTER	8980056310
RELAY (MAIN)	8980137900
RELAY	5825500300
TOGGLE SWITCH THROTTLE	A045000770
TOGGLE SWITCH (OIL PRESSURE/WATER TEMP/SPEED SELECTOR)	A440001970
TOGGLE SWITCH MAIN (RUBBER CAP)	V494000910
TOGGLE SWITCH (ACCESSORY)	G334001960
LUG (TERMINAL STUD)	V229000000
LUG (TERMINAL STUD) FASTENING BOLT	V211000020
CONTROL PANEL FASTENING KNOB	M613000340
CONTROL PANEL FASTENING KNOB LOCKING RING	V583000230
LUG (TERMINAL STUD) FASTENING BOLT	V211000020
CONTROL PANEL FASTENING KNOB	M613000340
CONTROL PANEL FASTENING KNOB LOCKING RING	V583000230

Isuzu 6HK1

Item	P/N
DEF CAP	8981202622
DEF TANK SIGHT TUBE	8981202641
SUCTION CONTROL VALVE	8981454491
EGR VALVE GASKET	8976084230
EGR VALVE	8982391302
SENSOR MAT	8-97381-182-0
SENSOR MAF	YH176001050
SENSOR OIL PRESSURE	8-98027-456-0
WATER TEMP SWITCH OVER HEAT / WARNING	YH176000790
WATER TEMP SWITCH OVER HEAT / WARNING	YH176001570
WATER TEMP SENSOR	8980237170
CRANK POSITION SENSOR	8976069430
FUEL RAIL PRESSURE SENSOR	8981197900
DRIVE V-BELT	I1136715160
STARTER	YH176001250

DGK180F/FP RECOMMENDED PARTS LIST (CONT.)

S/N D184010000001 - D184010000096 (F)

S/N D190010000001 - D19001999999 (FP)



Isuzu 6HK1

Item	P/N
ALTERNATOR	YH176001260
RADIATOR HOSE UPPER	G203000770
RADIATOR HOSE LOWER	G203000780
WATER PUMP WITH GASKET	YH176001200
THERMOSTAT 76.5C	YH176001210
THERMOSTAT 80C	YH176001220
THERMOSTAT GASKET (QTY 2)	YH176001120
O2 SENSOR FRONT	8981783581
O2 SENSOR REAR	8981867621
NOX SENSOR	I8983023941
EXHAUST TEMP SENSOR DEF DCM	I8982387670



ECHO Incorporated
400 Oakwood Road, Lake Zurich, IL. 60047
ECHO-USA.COM | 800-432-3246