




**BRUSH CUTTER
PARTS CATALOG**

SRM-2201


SERIAL NUMBER 001001 & UP

**ECHO, INCORPORATED
400 OAKWOOD ROAD
LAKE ZURICH, IL 60047**


**898696 49130
02/90**

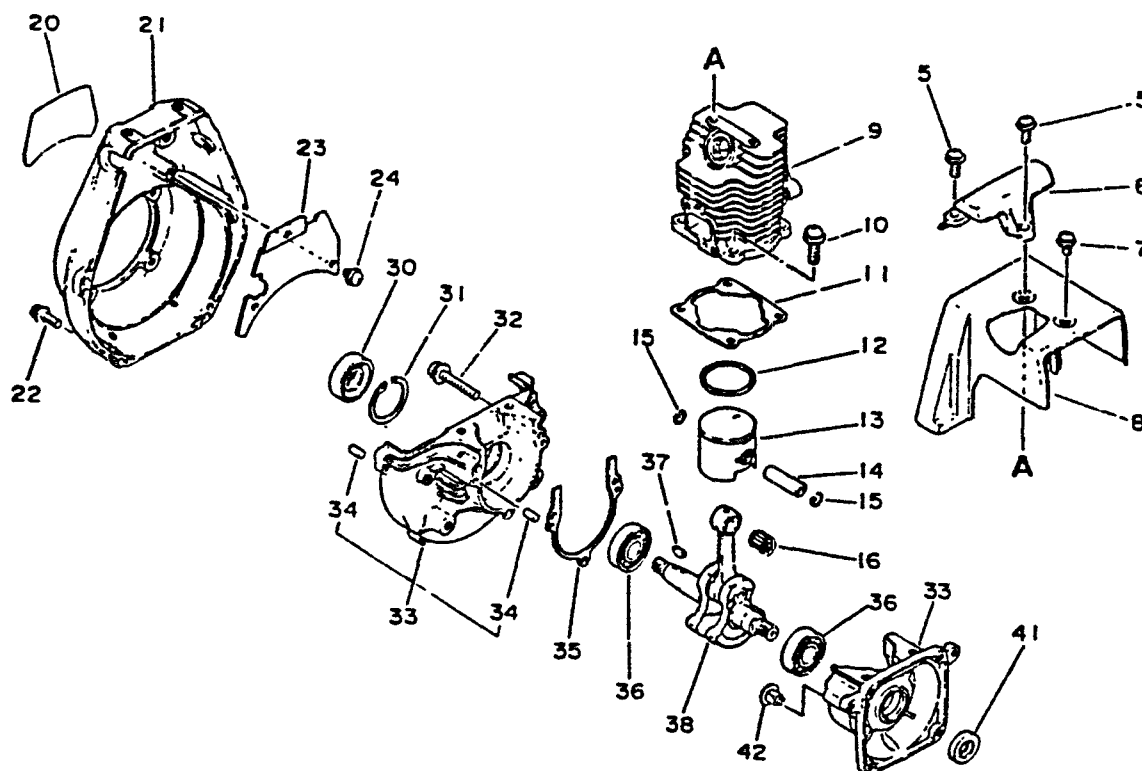


KEY	LV	PART NUMBER	Q'TY	DESCRIPTION	APPLICATION	REMARKS	INF. NR
5		900238-04014	3	SCREW 4#14			
6		159905-40630	1	GUARD, TOP			
7		900238-04010	1	SCREW 4#10			
8		101514-40630	1	COVER, CYLINDER			
9		101011-40630	1	CYLINDER			
10		900238-05016	4	SCREW 5#16			
* 11			1	GASKET, CYL. BASE		USE KIT	
12		100011-05330	1	RING, PISTON			
13		100010-40630	1	PISTON			
14		100013-22330	1	PIN, PISTON			
15		100015-04630	2	CIRCLIP, PISTON PIN			
16		100012-22330	1	BEARING, NEEDLE			
20		890115-48030	1	LABEL, MODEL			
21		101511-40630	1	COVER, FAN			
22		900238-04016	4	SCREW 4#16			
23		101534-40630	1	DUCT, AIR			
24		900238-04008	3	SCREW 4# 8			
30		100212-28230	1	OILSEAL			
31		900702-00028	1	CIRCLIP 28			
32		900238-05028	3	SCREW 5#28			
33		100200-28230	1	CRANKCASE SET			
34	+	100215-03930	4	PIN, DOWEL			
* 35			1	GASKET, CRANKCASE		USE KIT	
36		900800-36001	2	BEARING, BALL 6001			
37		100142-12330	1	KEY, WOODRUFF			
38		100100-40630	1	CRANKSHAFT ASSEMBLY			
41		100212-04630	1	OILSEAL			
42		880517-28230	1	PLUG			
*		GASKET KIT, P/N 889000-40630					

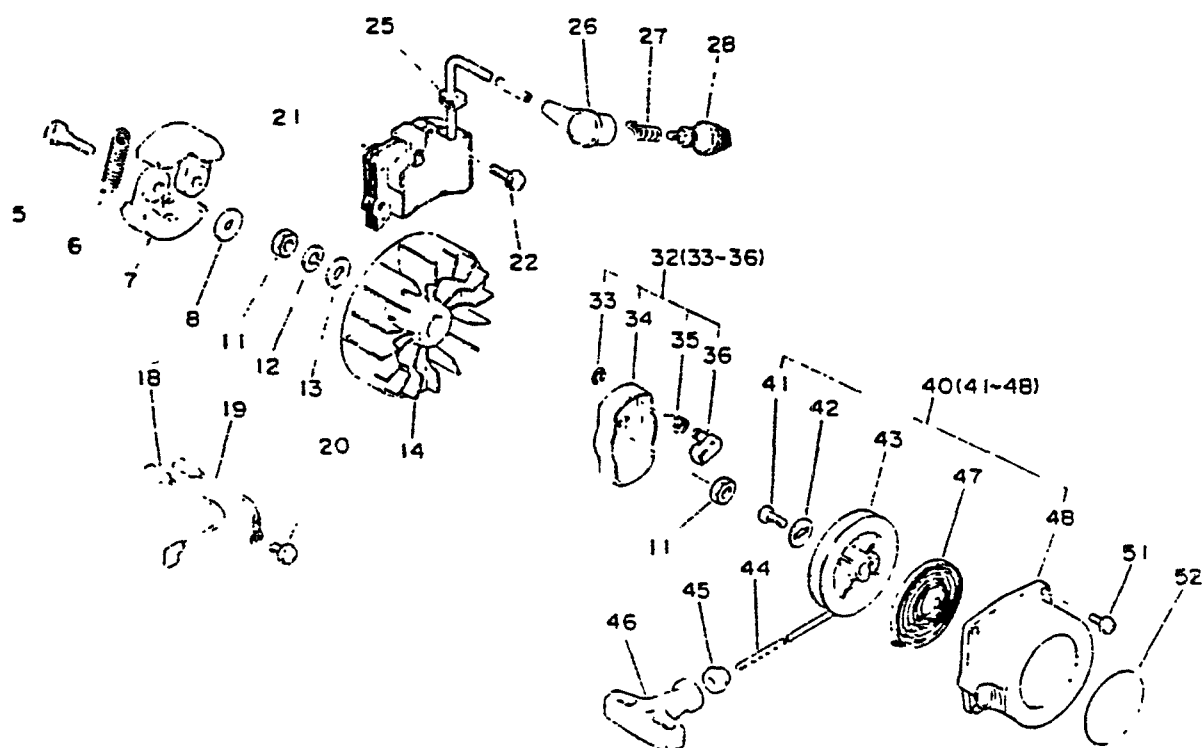


KEY LV	PART NUMBER	Q'TY	DESCRIPTION	APPLICATION	REMARKS	INF. NR
5	175046-22332	2	SHAFT, CLUTCH			
6	175018-05535	1	SPRING, CLUTCH			
7	175009-05531	2	SHOE, CLUTCH			
8	175048-05530	2	WASHER (I)			
11	900502-00008	2	NUT 8 #3			
12	900605-00008	1	WASHER, SPRING 8			
13	900600-00008	1	WASHER 8			
14	156801-28230	1	FLYWHEEL			
18	156630-40630	1	LEAD			
19	156635-40630	1	LEAD, GROUND			
20	900238-05010	1	SCREW 5*10			
21	156601-40630	1	MODULE, C.D. IGNITION			
22	900238-05020	2	SCREW 5*20			
25	156112-40630	1	GROMMET			
26	159012-03433	1	CAP, SPARK PLUG			
27	159011-03432	1	COIL, SPARK PLUG CAP			
28	159017-13930	1	PLUG, SPARK (CJ-7Y)			

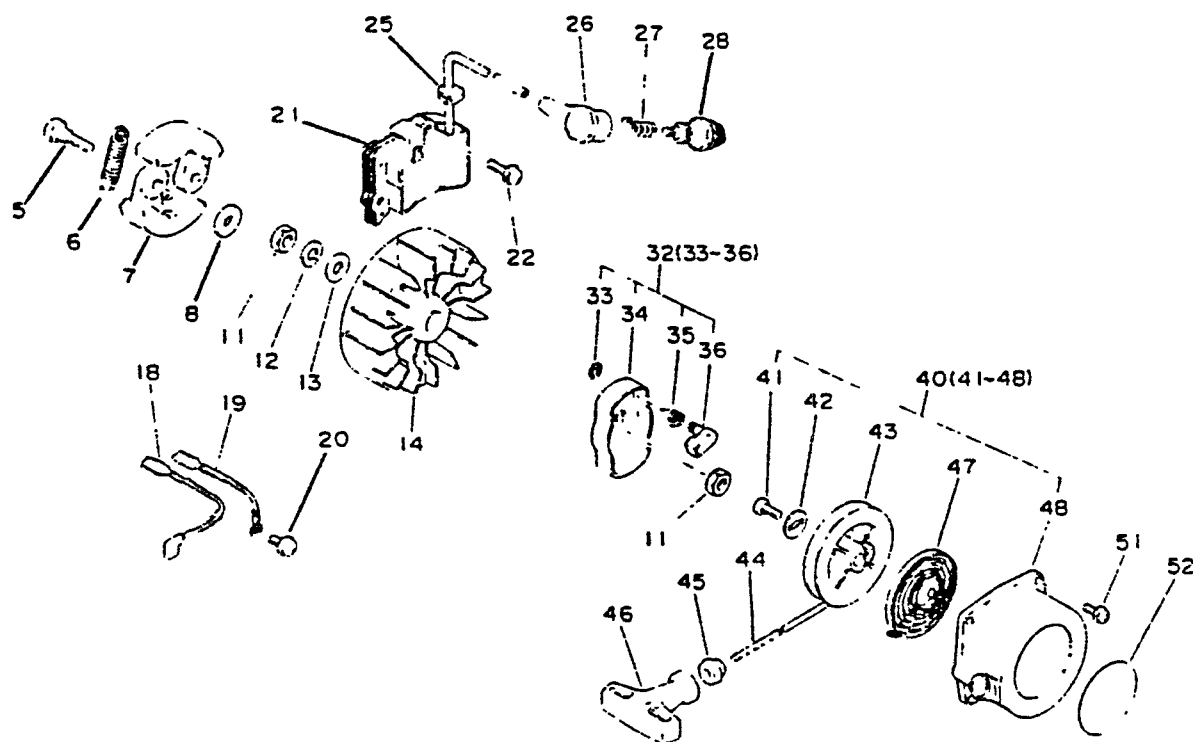


KEY LV	PART NUMBER	Q'TY	DESCRIPTION	APPLICATION	REMARKS	INF. NR
32	177202-40630	1	PAWL ASM., STARTER			
33	+ 900700-00004	1	E-RING 4			
34	+ 177210-40630	1	CATCHER, PAWL			
35	+ 177234-40630	1	SPRING, RETURN			
36	+ 177218-40630	1	PAWL, STARTER			
40	177200-40630	1	STARTER ASSEMBLY			
41	+ 177236-40630	1	SCREW			
42	+ 177214-40630	1	WASHER			
43	+ 177215-40630	1	DRUM, STARTER			
44	+ 177226-40630	1	ROPE, STARTER			
45	+ 177227-05530	1	GUIDE, ROPE			
46	+ 177228-05530	1	GRIP, STARTER			
47	+ 177220-40630	1	SPRING, REWIND			
48	+ 177232-40630	1	CASE, STARTER			
51	900238-04014	4	SCREW 4x14			
52	890118-44330	1	LABEL, ECHO			

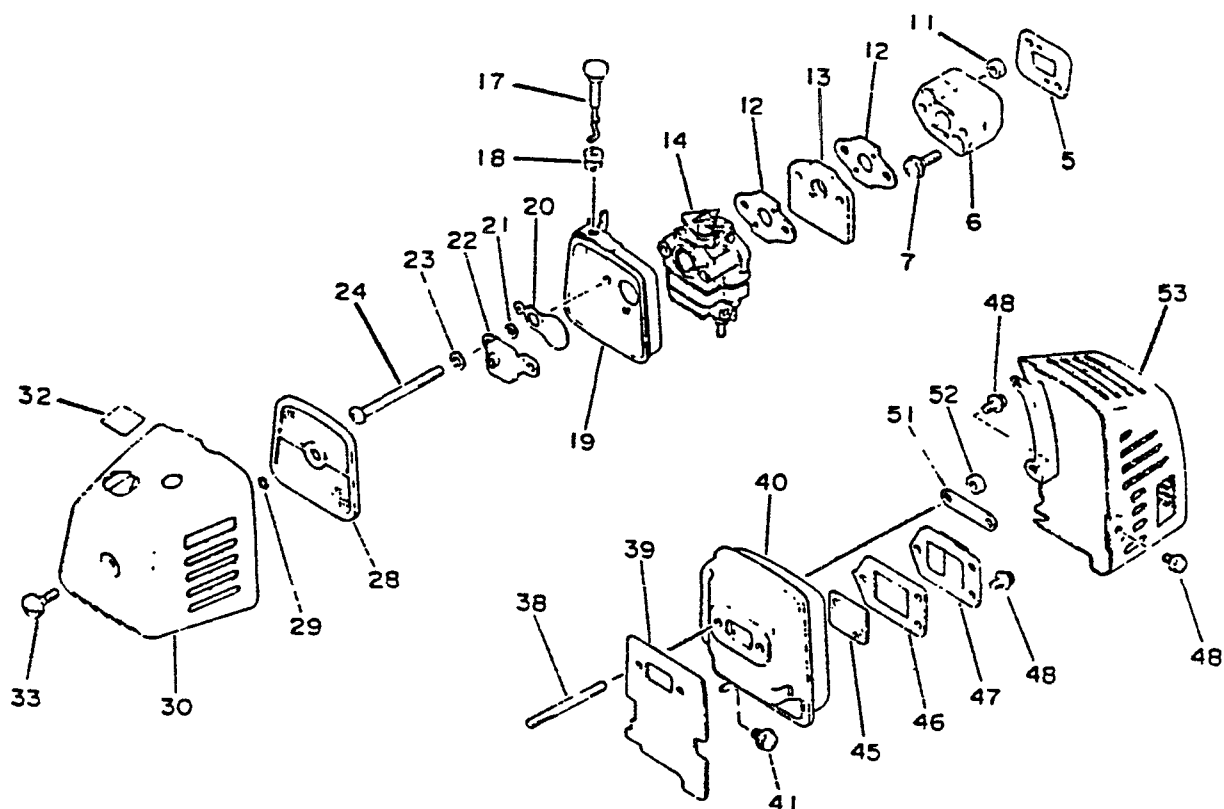


KEY LV	PART NUMBER	Q'TY	DESCRIPTION	APPLICATION	REMARKS	INF. NR
5	130010-28230	1	GASKET, INTAKE			
6	130017-40630	1	INSULATOR			
7	900238-05020	2	SCREW 5#20			
11	900500-00005	2	NUT 5			
12	130016-40630	2	GASKET, INTAKE			
13	130026-40630	1	INSULATOR			
14	123000-40630	1	CARBURETOR WY-18			
17	178510-41030	1	ROD, CHOKE			
18	178810-05230	1	GROMMET, CHOKE			
19	130314-40630	1	CASE, AIR CLEANER			
20	178515-40630	1	SHUTTER, CHOKE			
21	178516-00830	2	SPACER			
22	129006-40630	1	PLATE			
23	900605-00005	2	WASHER, SPRING 5			
24	900220-05060	2	SCREW 5#60		USE 900241-05060	
28	130310-40630	1	FILTER, AIR			
30	130302-40630	1	COVER ASS'Y, AIR CLE			
29	+ 900720-00004	1	O-RING 4			
33	+ 130415-40630	1	SCREW			
32	890121-40630	1	LABEL, CHOKE			

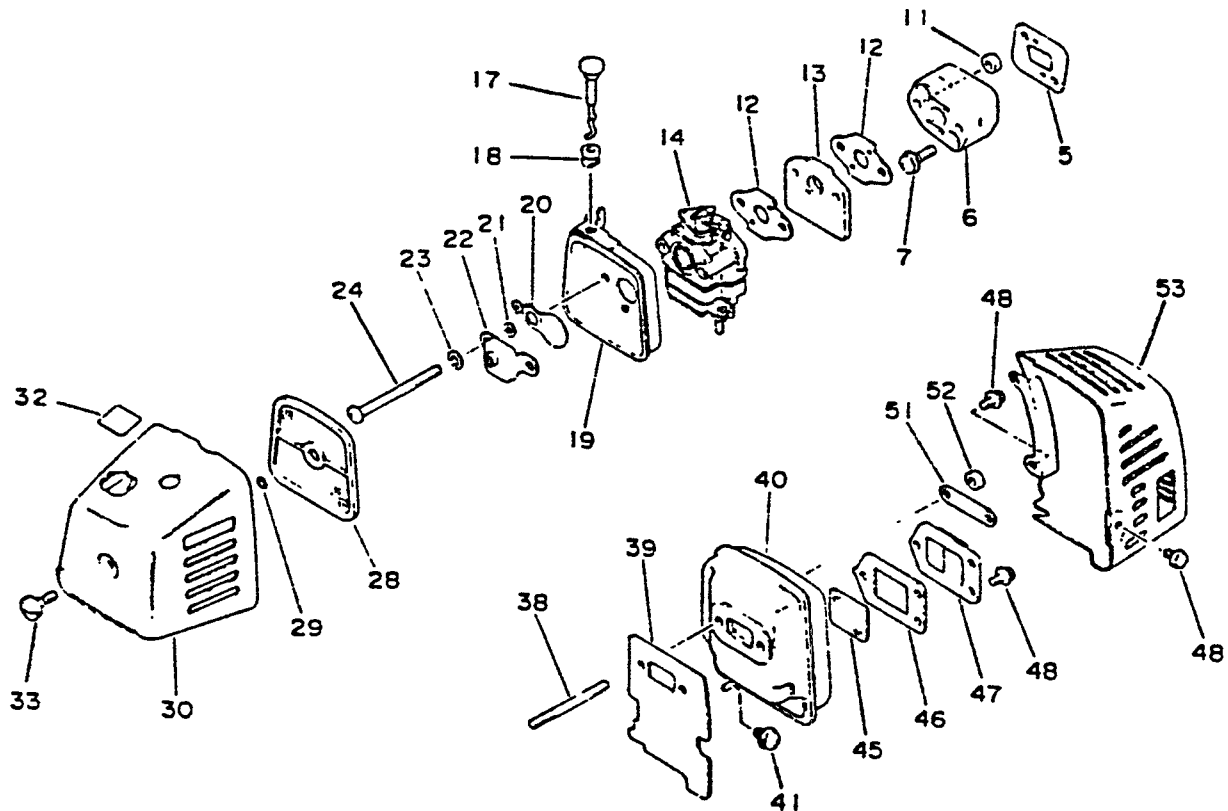

KEY	LV	PART NUMBER	Q'TY	DESCRIPTION	APPLICATION	REMARKS	INF. NR.
38		101014-00560	2	STUD, MUFFLER			
39		145510-40630	1	GASKET, MUFFLER			
40		145806-40630	1	MUFFLER			
41		900238-05010	1	SCREW 5#10			
45		145862-40630	1	SCREEN, MUFFLER			
46		145866-40630	1	GASKET, MUFFLER LID			
47		145809-40630	1	LID, MUFFLER			
48		900238-04010	6	SCREW 4#10			
51		145642-04930	1	WASHER			
52		433020-00830	2	LOCKNUT 5			
53		145871-40630	1	COVER, MUFFLER			

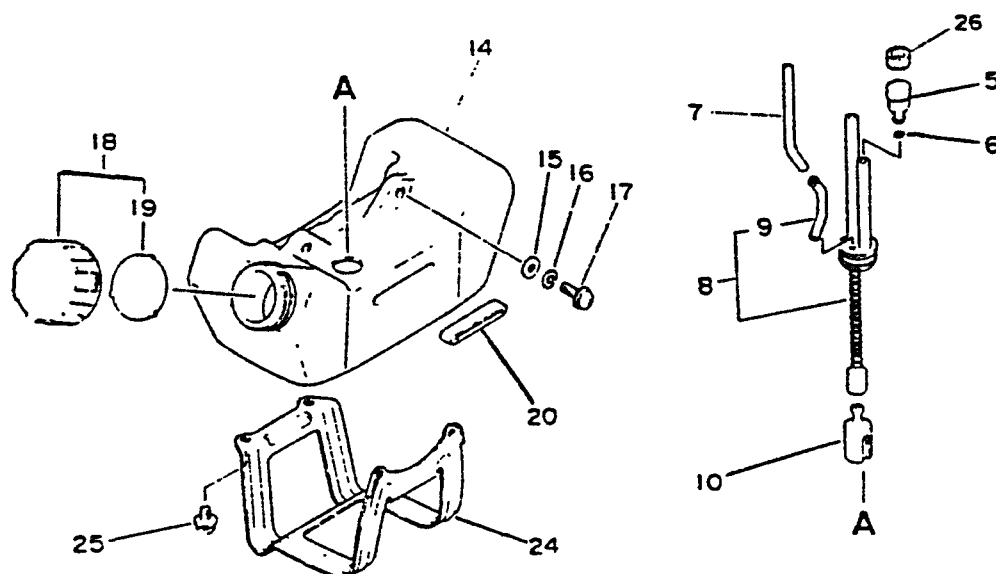


KEY LV	PART NUMBER	Q'TY	DESCRIPTION	APPLICATION	REMARKS	INF. NR
5	131300-40630	1	VENT ASSEMBLY			
6	130111-00530	1	CLIP			
7	129028-40630	1	PIPE 3±5± 75			
8	132002-40630	1	PIPE, FUEL			
9	+ 132021-40630	1	CONNECTOR, FUEL PIPE			
10	131205-07320	1	STRAINER, FUEL			
14	131005-40630	1	TANK, FUEL			
15	900603-00005	2	WASHER 5			
16	900605-00005	2	WASHER, SPRING 5			
17	900220-05016	2	SCREW 5±16			
18	131004-40930	1	CAP ASS'Y, FUEL TANK			
19	+ 131016-40930	1	GASKET, F. TANK CAP			
20	131920-40630	1	CUSHION, FUEL TANK			
24	305110-40630	1	STAND			
25	900238-05010	2	SCREW 5±10			
26	131328-40630	1	COVER, VENT			

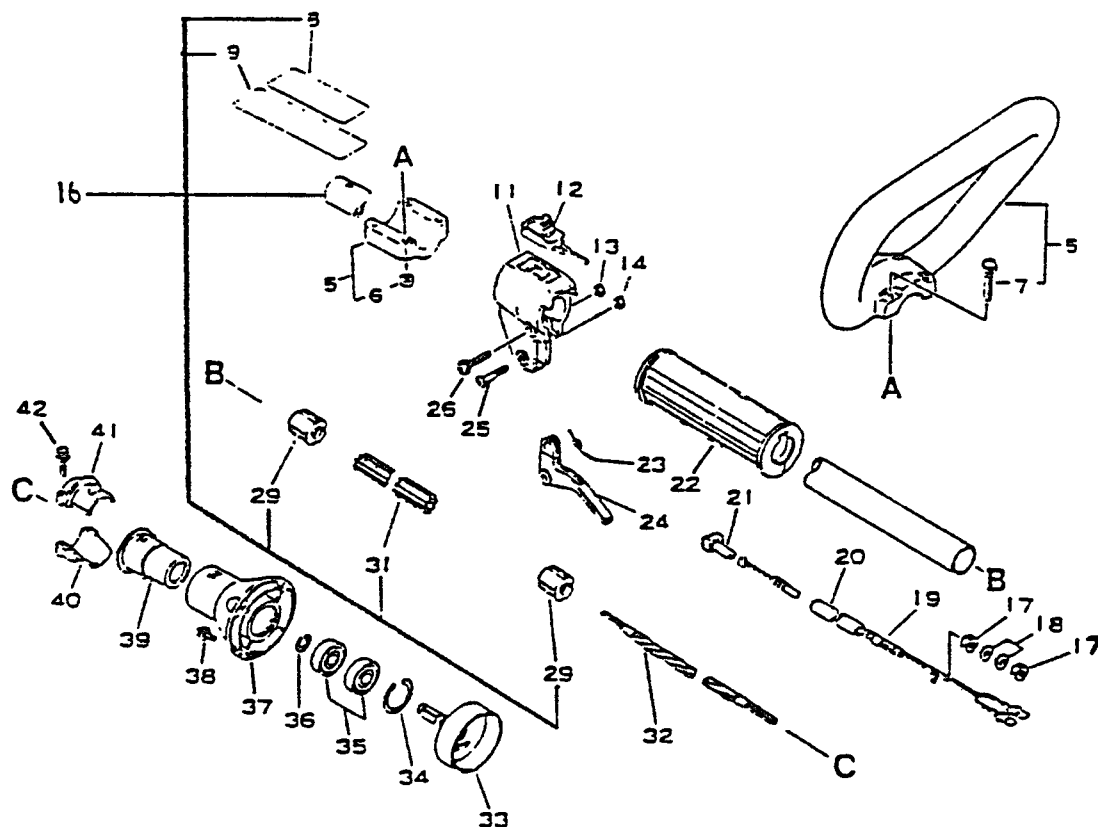


KEY	LV	PART NUMBER	Q'TY	DESCRIPTION	APPLICATION	REMARKS	INF. NR
5		351201-40830	1	HANDLE ASSY, LOOP			
6	+	900500-00005	4	NUT 5			
7	+	900242-05035	4	SCREW 5#35			
* 8		890160-47630	1	LABEL, CAUTION			
* 9		890160-44430	1	LABEL, CAUTION			
11		178024-44730	1	BRACKET, THROTTLE			
12		163400-40630	1	SWITCH, IGNITION			
13		900500-00005	1	NUT 5			
14		433020-00830	1	LOCKNUT 5			
16		610609-44730	1	HOUSING, DRIVE SHAFT			
17		900502-00006	2	NUT 6 #3			
18		900600-00006	2	WASHER 6			
19		178001-40930	1	WIRE, THROTTLE			
20		178127-40930	1	TUBE 10#11#220			
21		178048-05630	1	HOLDER, THR. WIRE			
22		351012-40930	1	GRIP, HANDLE			
23		178043-06930	1	SPRING, THR. RETURN			
24		178010-05631	1	CONTROL, THROTTLE			
25		178110-05330	1	SCREW			
26		900242-05030	1	SCREW 5#30			
* 29		610246-44730	2	FIXTURE, LINER			

* KEY # 8, 9, 29, AND 31 ARE INCLUDED IN DRIVE SHAFT HOUSING ASS'Y,
KEY # 16

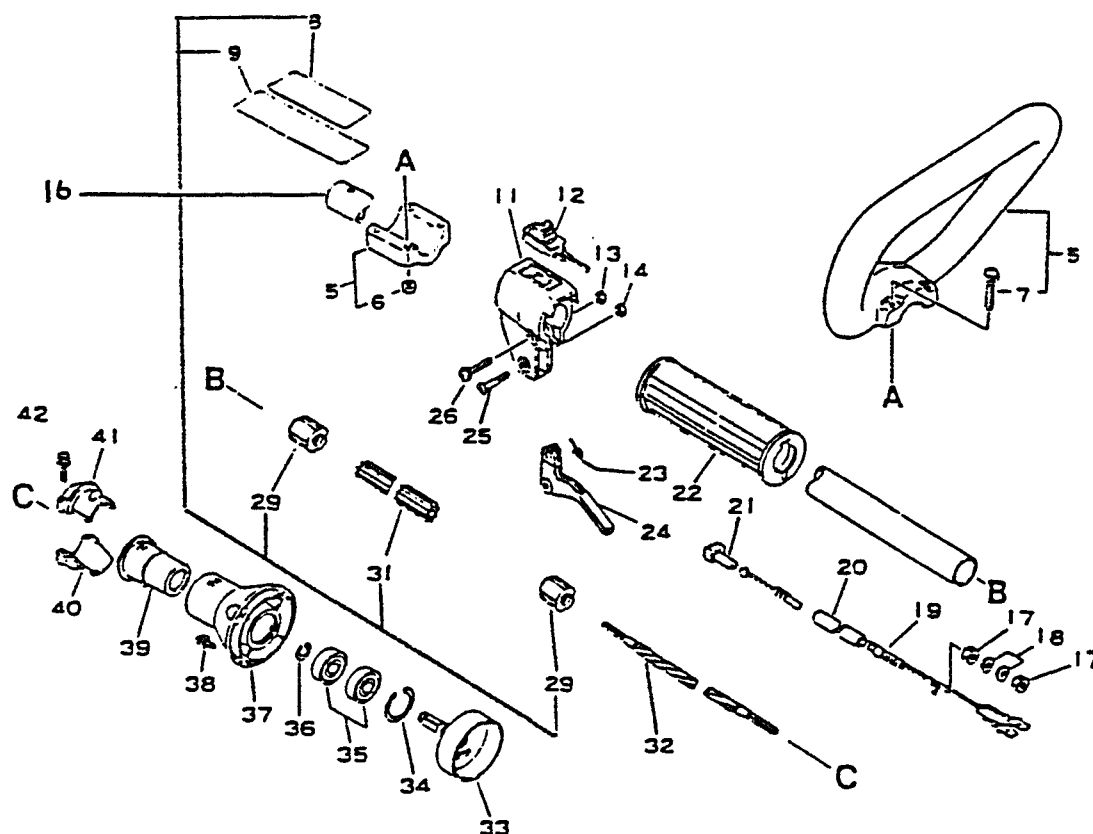


KEY	LV	PART NUMBER	Q'TY	DESCRIPTION	APPLICATION	REMARKS	INF. NR
*31		610217-44730	1	LINER, FLEXIBLE			
32		610013-44730	1	SHAFT, FLEXIBLE			
33		175005-44830	1	DRUM, CLUTCH			
34		900702-00028	1	CIRCLIP 28			
35		900808-06001	2	BEARING, BALL 6001			
36		900701-00012	1	CIRCLIP 12			
37		610223-44730	1	FLANGE, D.S. HOUSING			
38		900242-05016	4	SCREW 5#16			
39		610910-27832	1	CUSHION			
40		610922-27432	1	HOLDER			
41		610923-27432	1	HOLDER			
42		900142-05025	2	BOLT 5#25			

* KEY #'s 8, 9, 29 AND 31 ARE INCLUDED IN DRIVE SHAFT HOUSING ASS'Y,
KEY # 16

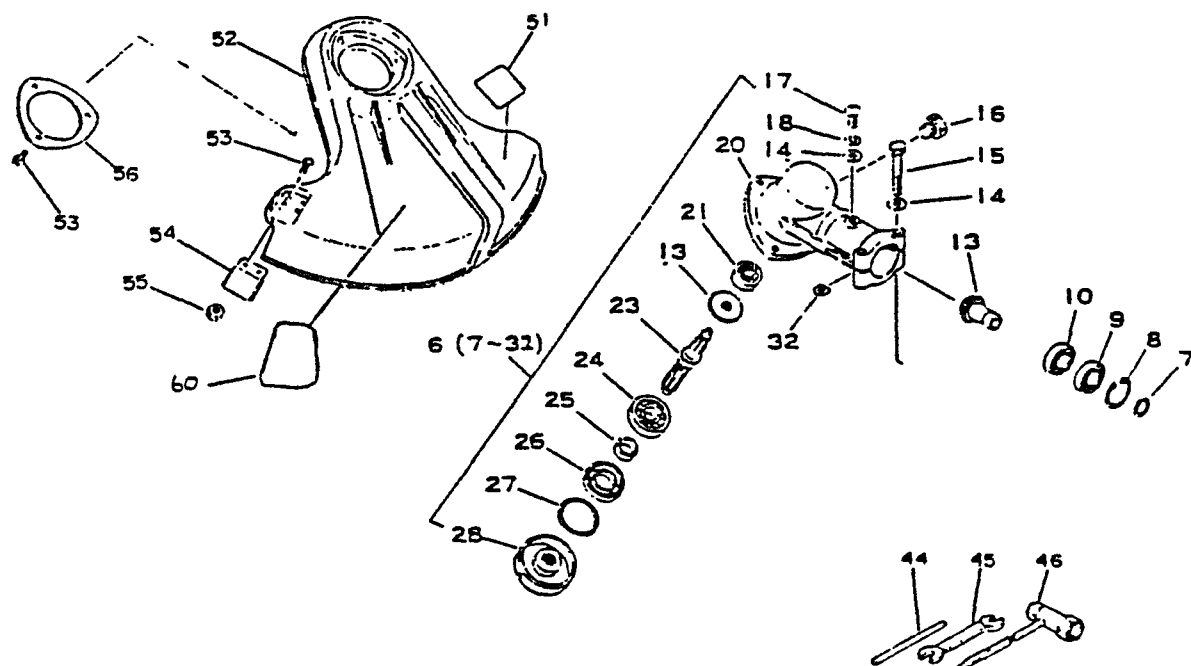

KEY	LV	PART NUMBER	Q'TY	DESCRIPTION	APPLICATION	REMARKS	INF. NR
6		610402-47730	1	HOUSING ASSY, GEAR			
7	+	900706-00012	1	CIRCLIP 12			
8	+	900702-00022	1	CIRCLIP 22			
9	+	900858-06900	1	BEARING, BALL 6900			
10	+	900855-06900	1	BEARING, BALL 6900			
13	+	610300-44830	1	GEAR SET, BEVEL			
14	+	900600-00005	3	WASHER 5			
15	+	900100-05035	2	BOLT 5x35			
16	+	900100-08008	1	BOLT 8x8			
17	+	900220-05010	1	SCREW 5x10			
18	+	900605-00005	1	WASHER, SPRING 5			
20	+	610460-27430	1	HOUSING, GEAR			
21	+	900800-00609	1	BEARING, BALL 609			
23	+	610360-08931	1	SHAFT, P.T.O.			
24	+	900810-06201	1	BEARING, BALL 6201			
25	+	610315-07130	1	SPACER			
26	+	610413-07130	1	OILSEAL			
27	+	900702-00032	1	CIRCLIP 32			
28	+	610313-47730	1	PLATE, ADAPTER (U)			
32	+	610239-04130	2	WASHER, SHIM			
44		897518-01131	1	LOCKING TOOL			
45		895112-00330	1	SPANNER 8x10			
46		895410-08030	1	WRENCH, W/S-DRIVER			
51		890138-44330	1	LABEL, ECHO			
52		699004-40930	1	SHIELD ASSY			
53	+	900242-05016	5	SCREW 5x16			
54	+	699016-44330	1	KNIFE, CORD			
55	+	900500-00005	2	NUT 5			
56	+	699018-40830	1	BRACKET, SHIELD			
60	+	890168-44830	1	LABEL, CAUTION			

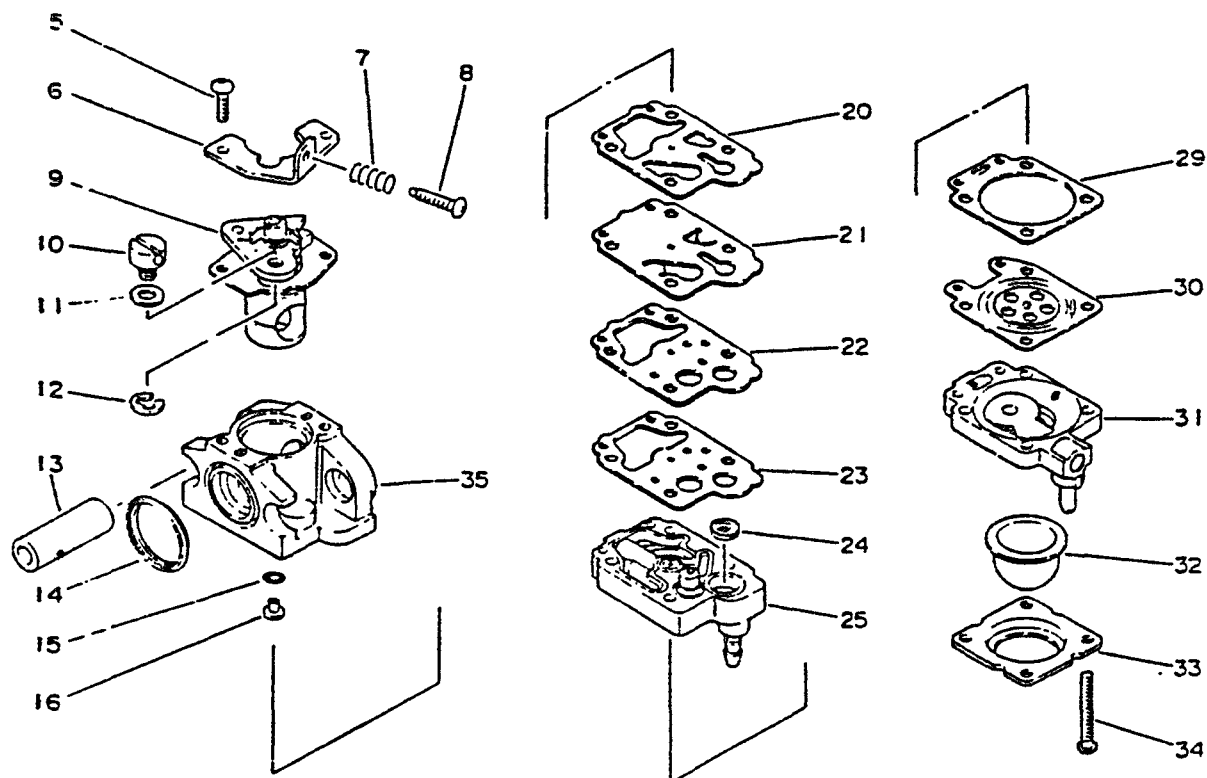

KEY LV	PART NUMBER	Q'TY	DESCRIPTION	APPLICATION	REMARKS	INF. NR
	123000-40630	1	CARBURETOR	WY-18		
5	+ 123114-40630	2	SCREW			
6	+ 123128-40630	1	BRACKET, IDLE ADJUST			
7	+ 123133-26030	1	SPRING, IDLE ADJUST			
8	+ 123134-40030	1	SCREW, IDLE ADJUST			
9	+ 123116-40630	1	VALVE, THROTTLE			
10	+ 123172-26030	1	SWIVEL			
11	+ 123149-26030	1	WASHER			
12	+ 123173-07930	1	CLIP			
13	+ 123158-40630	2	SLEEVE, MOUNTING			
14	+ 123143-40630	1	RING, PACKING			
15	+ 123183-40630	1	O-RING			
16	+ 123184-40630	1	JET			
20	+ 123125-40630	1	GASKET, PUMP			
21	+ 123112-40630	1	DIAPHRAGM, FUEL PUMP			
22	+ 123160-40630	1	PLATE, PUMP			
23	+ 123159-40630	1	GASKET, PLATE			
24	+ 123126-03930	1	SCREEN, INLET			
25	+ 123179-40630	1	BODY ASS'Y, PUMP			
29	+ 123140-02960	1	GASKET, M. DIAPHRAGM			
30	+ 123141-03930	1	DIAPHRAGM, METERING			
31	+ 123180-40630	1	BODY ASS'Y, AIRPURGE			
32	+ 123181-40630	1	PUMP, PRIMER			
33	+ 123142-02960	1	COVER, PRIMER PUMP			
34	+ 123110-40630	4	SCREW			