

# **Hedge Clipper**

Operator's Manual

MODEL HC-201

# WARNING A DANGER



The muffler or catalytic muffler and surrounding cover may become extremely hot.

Always keep clear of exhaust and muffler area, otherwise serious personal injury may occur.

# A

# **WARNING**



The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.



# WARNING A DANGER

Read rules for safe operation and all instructions carefully. ECHO provides this Operator's Manual and a Safety Manual. Both must be read and understood for proper and safe operation.



## Introduction


Welcome to the ECHO family. This ECHO product was designed and manufactured to provide long life and on-the-job dependability. Read and understand this manual. You will find it easy to use and full of helpful operating tips and SAFETY messages.

# THE OPERATOR'S MANUAL

Read and understand this manual before operation. Keep it in a safe place for future reference. It contains specifications and information for operation, starting, stopping, maintenance, storage, and assembly specific to this product.

#### THE SAFETY MANUAL

Read and understand this manual before operation. Keep it in a safe place for future reference. It explains possible hazards involved with the use of this product and what measures you should take to make their use safer.

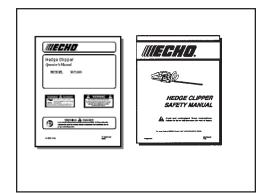

# TABLE OF CONTENTS

Introduction .....

- The Operator's Manual
- The Safety Manual
Safety
- Manual Safety Symbols and Important Information .
- International Symbols
- Personal Conditions and Safety Equipment
- Equipment
Emissions Control
Description
Assembly
Operation
- Fuel
- Starting Cold Engine
- Starting Warm Engine
- Stopping Engine
- Hedge Trimming

Maintenance	
- Skill Levels	13
- Maintenance Intervals	14
- Air Filter	15
- Fuel Filter	15
- Spark Plug	16
- Cooling System	
- Exhaust System	
- Carburetor Adjustment	
- Lubrication	20
- Sharpening Blades	21
- Blade Adjustment	22
Troubleshooting	23
Storage	
Specifications	25
Servicing Information	28
- Parts/Serial Number	28
- Service	28
- ECHO Consumer Product Support	28
- Warranty Card	
- Additional or Replacement Manuals	

Specifications, descriptions and illustrative material in this literature are as accurate as known at the time of publication, but are subject to change without notice. Illustrations may include optional equipment and accessories, and may not include all standard equipment.

Copyright© 2006 By Echo, Incorporated All Rights Reserved.

# SAFETY

### MANUAL SAFETY SYMBOLS AND IMPORTANT INFORMATION

Throughout this manual and on the product itself, you will find safety alerts and helpful, informational messages preceded by symbols or key words. The following is an explanation of those symbols and key words and what they mean to you.



This symbol accompanied by the words **WARNING** and **DANGER** calls attention to an act or condition that can lead to serious personal injury to operator and bystanders.



The circle with the slash symbol means whatever is shown within the circle is prohibited.



#### **IMPORTANT**

The enclosed message provides information necessary for the protection of the unit.

#### NOTE

This enclosed message provides tips for use, care and maintenance of the unit.

#### INTERNATIONAL SYMBOLS

Symbol form/shape	Symbol description/application	Symbol form/shape	Symbol description/application
	Read and understand owners manual.		Fuel and oil mixture
	Wear eyes, ears and head protection		Finger Severing
STOP	Emergency stop	attilitation.	Hot Surface
	Wear hand protection. Use two handed.		DO NOT SMOKE NEAR FUEL.
1	Choke Control "Cold Start" Position (Choke Closed)	Ignition ON OFF	Ignition ON/OFF
	Choke Control "Run" Position (Choke Open)		Do not operate without guards in place.

Symbol form/shape	Symbol description/application	Symbol form/shape	Symbol description/application
	Carburetor adjustment - Low speed mixture	H	Carburetor adjustmen - High speed mixture
<b>⚠</b>	Safety/Alert	T	Carburetor adjustmen - Idle speed
A	Avoid all power lines. This unit is not insulated against electrical current.	X	Do not operate clos- er than 15 M (50 ft.) from electrical haz- ards.
*	Plan retreat path from falling objects.	H #	Primer bulb
	DO NOT ALLOW FLAMES OR SPARKS NEAR FUEL.	74	Wear slip resistant foot wear.
@			nders at least 15 feet) away.

### PERSONAL CONDITION AND SAFETY EQUIPMENT





Users of this product risk injury to themselves and others if the unit is used improperly and/or safety precautions are not followed. Proper clothing and safety gear must be worn when operating unit.

### Physical Condition

Your judgment and physical dexterity may not be good:

- if you are tired or sick,
- if you are taking medication,
- if you have taken alcohol or drugs.

Operate unit only if you are physically and mentally well.

## Eye Protection

Wear eye protection that meets ANSI Z87.1 or CE requirements whenever you operate the unit.

#### Hand Protection

Wear no-slip, heavy-duty work gloves to improve your grip on the handle. Gloves also reduce the transmission of machine vibration to your hands.

### Hearing Protection

ECHO recommends wearing hearing protection whenever unit is used.

# Proper Clothing

Wear snug fitting, durable clothing;

- Pants should have long legs, shirts with long sleeves.
- DONOTWEAR SHORTS,
- DONOTWEARTIES, SCARFS, JEWELRY.

Wear protective hair covering to contain long hair.

Wear sturdy work shoes with nonskid soles;

- DONOTWEAR OPENTOED SHOES,
- DONOTOPERATE UNIT BAREFOOTED.

#### Hot Humid Weather

Heavy protective clothing can increase operator fatigue which may lead to heat stroke. Schedule heavy work for early morning or late afternoon hours when temperatures are cooler.

# Extended Operation/Extreme Conditions

It is believed that a condition called Raynaud's Phenomenon, which affects the fingers of certain individuals, may be brought about by exposure to vibration and cold. Exposure to vibration and cold may cause tingling and burning sensations, followed by loss of color and numbness in the fingers. The following precautions are strongly recommended, because the minimum exposure, which might trigger the ailment, is unknown.


- Keep your body warm, especially the head, neck, feet, ankles, hands, and wrists.
- Maintain good blood circulation by performing vigorous arm exercises during frequent work breaks, and also by not smoking.
- Limit the hours of operation. Try to fill each day with jobs where operating the unit or other hand-held power equipment is not required.
- If you experience discomfort, redness, and swelling of the fingers followed by whitening and loss of feeling, consult your physician before further exposing yourself to cold and vibration.



### Repetitive Stress Injuries

It is believed that overusing the muscles and tendons of the fingers, hands, arms, and shoulders may cause soreness, swelling, numbness, weakness, and extreme pain in those areas. Certain repetitive hand activities may put you at a high risk for developing a Repetitive Stress Injury (RSI). An extreme RSI condition is Carpal Tunnel Syndrome (CTS), which could occur when your wrist swells and squeezes a vital nerve that runs through the area. Some believe that prolonged exposure to vibration may contribute to CTS. CTS can cause severe pain for months or even years. To reduce the risk of RSI/CTS, do the following:

- Avoid using your wrist in a bent, extended, or twisted position. Instead try to maintain a straight wrist position. Also, when grasping, use your whole hand, not just the thumb and index finger.
- Take periodic breaks to minimize repetition and rest your hands.
- Reduce the speed and force with which you do the repetitive move-
- Do exercise to strengthen the hand and arm muscles.
- Immediately stop using all power equipment and consult a doctor if you feel tingling, numbness, or pain in the fingers, hands, wrists, or arms. The sooner RSI/CTS is diagnosed, the more likely permanent nerve and muscle damage can be prevented.

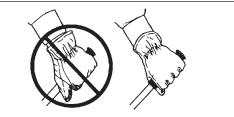



Do not operate this product indoors or in inadequately ventilated areas. Engine exhaust contains poisonous emissions and can cause serious injury or death.

#### Read the Manuals

• Provide all users of this equipment with the Operator's Manual and Safety Manual for instructions on Safe Operation.

#### Clear the Work Area

· Spectators and fellow workers must be warned, and children and animals prevented from coming nearer than 15 m (50 ft.) while the unit is in use.

#### Keep a Firm Grip

· Hold the front and rear handles with both hands, with thumbs and fingers encircling the handles.

#### Keep a Solid Stance

• Maintain footing and balance at all times. Do not stand on slippery, uneven or unstable surfaces. Do not work in odd positions or on ladders. Do not over reach.

#### Avoid Hot Surfaces

• Keep exhaust area clear of flammable debris. Avoid contact during and immediately after operation.



Never perform blade maintenance procedures while engine is running.









### **EQUIPMENT CHECK**





Use only ECHO approved attachments. Serious injury may result from the use of a non-approved attachment combination. ECHO, INC. will not be responsible for the failure of cutting devices, attachments or accessories which have not been tested and approved by ECHO. Read and comply with all safety instructions listed in this manual and safety manual.

- · Check unit for loose/missing nuts, bolts, and screws. Tighten and/or replace as needed.
- Inspect fuel lines, tank, and area around carburetor for fuel leaks. DO NOT operate unit if leaks are found.
- Check that the cutting attachment is firmly attached and in safe operating condition.

# **EMISSION CONTROL**

information on label varies by FAMILY).

# California Tier 2

The emission control system for these engines is EM/TWC (Engine and Catalyst Modification).

### IMPORTANT ENGINE INFORMATION

ENGINE FAMILY: 6EHXS.0214KF DISPLACEMENT: 21.2 cc EMISSION COMPLIANCE PERIOD: 300 Hours THIS ENGINE MEETS U.S. EPA PH2 AND 2005 - 2006 CALIFORNIA EMISSION REGULATIONS FOR SOREs. REFER TO OWNER'S MANUAL FOR MAINTENANCE SPECIFICATIONS AND ADJUSTMENTS.



KIORITZ CORP. [111]






# PRODUCT EMISSION DURABILITY

Emission Control Label (located on Engine) (EXAMPLE ONLY,


The 300 hour emission durability compliance period is the time span selected by the manufacturer certifying the engine emissions output meets applicable emissions regulations, provided that approved maintenance procedures are followed as listed in the Maintenance Section of this manual.

# **DESCRIPTION**

Locate the safety decals on your unit. Make sure the decals are legible and that you understand and follow the instructions on them. If a decal cannot be read, a new one can be ordered from your ECHO dealer. See PARTS ORDERING instructions for specific information.

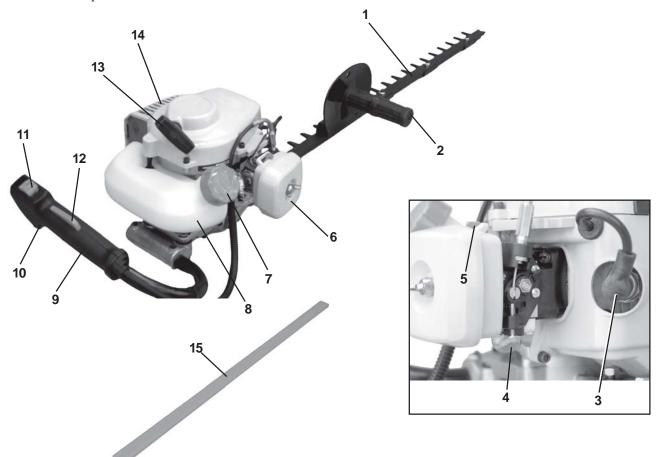

Right Front Handle Guard

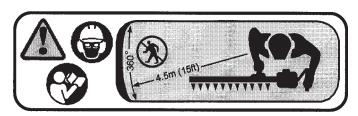

P/N X505000270



P/N X505000280

Hot Decal (near muffler)
P/N 89016006361





- 1. **BLADES** Double reciprocating single sided blades mounted to a blade support bar.
- RIGHT FRONT HANDLE WITH GUARD Rubber non-slip grip, guard protects hand from the blades. Warning decals are located on guard.
- 3. **SPARK PLUG** Provides spark to ignite fuel mixture.
- 4. PURGE BULB Pumping purge bulb before starting engine draws fresh fuel from the fuel tank, purging air from the carburetor. Pump purge bulb until fuel is visible and flows freely in the clear fuel tank return line. Pump bulb an additional 4 or 5 times.
- 6. **AIR CLEANER** Contains replaceable filter element.
- 7. **FUEL TANK CAP** Covers and seals fuel tank opening.
- 8. **FUEL TANK** Contains fuel and fuel filter.
- 9. **REAR HANDLE** Contains the Stop Switch, Throttle Lockout, and Throttle Trigger.
- 10. **THROTTLE TRIGGER** Spring loaded to return to idle when released. Trigger Lockout must be depressed fully before Throttle Trigger will move. During acceleration, depress gradually for best operating technique.
- 11. **STOP SWITCH -** "SLIDE SWITCH" mounted on top of the rear handle. Move switch FORWARD to RUN, BACK to STOP.
- 12. **THROTTLE TRIGGER LOCKOUT** This lever must be depressed before Throttle Trigger can be activated.
- 13. **RECOIL STARTER HANDLE** Pull handle slowly until recoil starter engages, then quickly and firmly. DO NOT pull rope all the way out or allow the handle to snap back, damage to the starter will occur.
- 14. **SPARK ARRESTOR CATALYTIC MUFFLER/MUFFLER-**The muffler or catalytic muffler controls exhaust noise and emission. The spark arrestor screen prevents hot, glowing particles of carbon from leaving the muffler. Keep exhaust area clear of flammable debris.
- 15. BLADE COVER Used to cover blades during transportation or storage. Remove blade cover before using unit.

# **C**ONTENTS

The ECHO product you purchased has been factory pre-assembled for your convenience.

After opening the carton, check for damage. Immediately notify your retailer or ECHO Dealer of damaged or missing parts. Use the contents list to check for missing parts.

- \_\_ 1 Hedge Clipper Assembly
- \_\_ 1 Operators Manual
- \_\_ 1 Safety Manual
- \_\_ 1 Warranty Statement
- \_\_ 1 Warranty Registration Card
- \_\_ 1 T-Wrench 13 x 19
- \_\_ 1 Echo Power Blend <sup>TM</sup> 2-stroke oil sample
- \_\_ 1 Blade Cover













# **A**SSEMBLY

This model is factory assembled.



### **OPERATION**

**NOTICE:** Use of unmixed, improperly mixed, or fuel older than 90 days, (stale fuel), may cause hard starting, poor performance, or severe engine damage and void the product warranty. Read and follow instructions in the Storage section of this manual.

#### **FUEL**

## Fuel Requirements

Gasoline - Use 89 Octane [R+M/2] (mid grade or higher) gasoline known to be good quality. Gasoline may contain up to 15% MTBE (methyl tertiary-butyl ether). Gasohol containing methyl (wood) alcohol is **NOT** approved.

Two Stroke Oil - A two-stroke engine oil meeting ISO-L-EGD (ISO/CD 13738) and J.A.S.O. FC Standards must be used. Echo brand premium Power Blend TM Universal 2-Stroke Oil meets these standards. Engine problems due to inadequate lubrication caused by failure to use an ISO-L-EGD and J.A.S.O. FC certified oil, such as Echo premium Power Blend ™, will void the two-stroke engine warranty. (Emission related parts only are covered for two years, regardless of two-stroke oil used, per the statement listed in the Emission Defect Warranty Explanation.)

#### **IMPORTANT**

Echo premium Power Blend ™ Universal 2-Stroke Oil may be mixed at 50:1 ratio for application in all Echo engines sold in the past regardless of ratio specified in those manuals.

# Handling Fuel



Fuel is VERY flammable. Use extreme care when mixing, storing or handling or serious personal injury may result.

- Use an approved fuel container.
- DO NOT smoke near fuel.
- DO NOT allow flames or sparks near fuel.
- Fuel tanks/cans may be under pressure. Always loosen fuel caps slowly allowing pressure to equalize.
- NEVER refuel a unit when the engine is HOT or RUNNING!
- DO NOT fill fuel tanks indoors. ALWAYS fill fuel tanks outdoors over bare ground.
- DO NOT overfill fuel tank. Wipe up spills immediately.
- Securely tighten fuel tank cap and close fuel container after refueling.
- Inspect for fuel leakage. If fuel leakage is found, do not start or operate unit until leakage is repaired.
- Move at least 3m (10 ft.) from refueling location before starting the engine.

Fuel to Oil Mix - 50:1 Ratio			
U.S.		METR	IC
GAS	OIL	GAS	OIL
Gallons	Fl. oz.	Liter	CC.
1 2 5	2.6 5.2 13	4 8 20	80 160 400

#### **Mixing Instructions**

- 1. Fill an approved fuel container with half of the required amount of gasoline.
- 2. Add the proper amount of 2-stroke oil to gasoline.
- 3. Close container and shake to mix oil with gasoline.
- 4. Add remaining gasoline, close fuel container, and remix.

#### **IMPORTANT**

Spilled fuel is a leading cause of hydrocarbon emissions. Some states may require the use of automatic fuel shut-off containers to reduce fuel spillage.

#### After use

• DO NOT store a unit with fuel in its tank. Leaks can occur. Return unused fuel to an approved fuel storage container.

Storage - Fuel storage laws vary by locality. Contact your local government for the laws affecting your area. As a precaution, store fuel in an approved, airtight container. Store in a well-ventilated, unoccupied building, away from sparks and flames.

### **IMPORTANT**

Stored fuel ages. Do not mix more fuel than you expect to use in thirty (30) days, ninety (90) days when a fuel stabilizer is added.

#### **IMPORTANT**

Stored two-stroke fuel may separate. ALWAYS shake fuel container thoroughly before each use.

#### STARTING COLD ENGINE

# WARNING A DANGER

Hedge Clipper blades are very sharp. Touching them may lead to severe personal injury. Avoid touching blades whenever possible, and always wear gloves to protect hands.

#### NOTE

The blade cover is used for transportation and storage. Remove blade cover before using the unit.

- 1. Stop Switch Move stop switch (A) away from the STOP position.
- Move choke (B) to the Cold Start ( ) (CLOSED) position.
- 3. Purge Bulb Pump purge bulb (C) until fuel is visible and flows freely in the clear fuel tank return line. Pump bulb an additional 4 or 5 times.

### 4. Recoil Starter Lay the unit on a flat, clear area. Grip the front handle securely with one hand, and pull the recoil starter handle (D) until engine fires (or 5 pulls maximum).

#### 5. Choke

(OPEN) position. Restart engine if necessary and allow unit to warm up at idle for several minutes.

# WARNING A DANGER


The blades must not move at idle, otherwise serious personal injury may result. Periodic carburetor adjustment may be necessary to assure blades do not move at idle.


If blades move, readjust carburetor according to "Carburetor Adjustment" instructions in this manual or see your ECHO Dealer.


If engine does not start with choke in "Run" position after 5 pulls, repeat instructions 2 - 5.

#### 6. Throttle Trigger

After engine warm-up, grip the handle to depress the throttle trigger lockout, and gradually depress throttle trigger to increase engine RPM to operating speed.

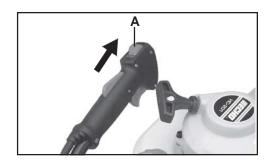

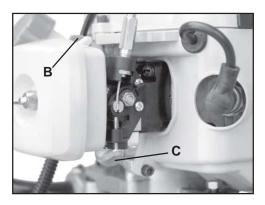

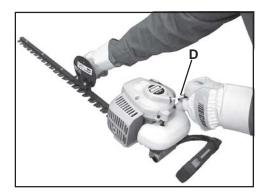

### STARTING WARM ENGINE

The starting procedure is the same as Cold Start except DO NOT close

# WARNING A DANGER




The blades must not move at idle, otherwise serious personal injury may result. Periodic carburetor adjustment may be necessary to assure blades do not move at idle.


If blades move, readjust carburetor according to "Carburetor Adjustment" instructions in this manual or see your ECHO Dealer.

- 1. Stop Switch Move stop switch (A) away from the STOP position.
- 2. Purge Bulb Pump purge bulb (C) until fuel is visible and flows freely in the clear fuel tank return line. Pump bulb an additional 4 or 5 times.
- 3. Recoil Starter Place the unit on a flat, clear area. Grip the front handle securely with one hand, and pull the recoil starter handle (D) until engine

fires.

If engine does not start after 5 pulls, use Cold Start Procedure.

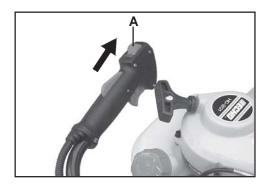

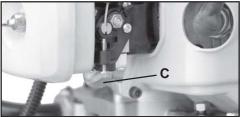



#### STOPPING ENGINE


- 1. Throttle Release throttle and allow engine to return to idle before shutting off engine.
- 2. Stop Switch Move stop switch (A) to STOP position.





# DANGER

If engine does not stop when stop switch is moved to STOP position, close choke - COLD START position - to stall engine. Have your ECHO dealer repair stop switch before using hedge clipper again.

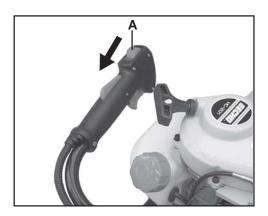

#### **HEDGE TRIMMING**

# WARNING A DANGER



Hedge Clipper blades are very sharp. Touching them may lead to severe personal injury. Avoid touching blades whenever possible, and always wear gloves to protect hands.

- 1. Hold trimmer firmly and squeeze throttle trigger to accelerate engine.
- 2. Tilt trimmer so cutting teeth are angled slightly toward the hedge or shrub and proceed to cut.





Never remove hands from unit when blades are moving.



The engine continues running even when the blades have stopped due to an obstruction. If this occurs, stop the engine, disconnect ignition cable and remove the obstruction.



# MAINTENANCE

Your ECHO unit is designed to provide many hours of trouble free service. Regular scheduled maintenance will help your unit achieve that goal. If you are unsure or are not equipped with the necessary tools, you may want to take your unit to an ECHO Service Dealer for maintenance. To help you decide whether you want to DO-IT-YOURSELF or have the ECHO Dealer do it, each maintenance task has been graded. If task is not listed, see your ECHO Dealer for repairs.

#### SKILL LEVELS

Level 1 = Easy to do. Most required tools come with unit.

Level 2= Moderate difficulty. Some specialized tools may be required.

Level 3= Experience required. Specialized tools are required. Echo recommends that the unit be returned to your

ECHO dealer for service.

ECHO offers **REPOWER™** Maintenance Kits and Parts to make your maintenance job easier. Just below each task heading are listed the various part numbers required for that task. See your ECHO dealer for these parts.



## **MAINTENANCE INTERVALS**

COMPONENT/ SYSTEM	MAINTENANCE PROCEDURE	REQ'D SKILL LEVEL	DAILY OR BEFORE USE	EVERY REFUEL	3 MONTHS OR 90 HOURS	6 MONTHS OR 270 HOURS	YEARLY 600 HOURS
	Recommended Ech	o Dealer	Maintenanc	e Procedur	es	-	-
Cylinder Exhaust Port	Inspect/Clean/Decarbon	3			I/C		
Sharpen Blades	Inspect/Clean	3	I (2)				
	Do-lt-Yourse	If Mainter	nance Proce	dures			•
Air Filter	Inspect/Clean/Replace	1	I/C		R*		
Choke	Inspect/Clean	2	I/C				
Fuel Filter	Inspect/Replace	1			I		R *
Fuel System, leaks	Inspect/Replace	1	I *	I			
Cooling System	Inspect/Clean	2	I/C				
Muffler Spark Arrestor	Inspect/Replace	2			I *		
Gear Housing	Grease	2	I (1)				
Blades	Inspect/Clean	1	I / C (2)				
Recoil Starter Rope	Inspect/Clean	1	I/C*				
Spark Plug	Inspect/Clean	2			I/C	R *	
Screws/Nuts/Bolts	Inspect/Tighten/Replace	1	I / R *				

#### MAINTENANCE PROCEDURE LETTER CODES: I = INSPECT, R = REPLACE, C = CLEAN

IMPORTANT NOTE - Time intervals shown are maximum. Actual use and your experience will determine the frequency of required

#### **MAINTENANCE PROCEDURE NOTES:**

- (1) Apply  $ECHO_{\odot} LUBE^{TM}$  every 15 25 hours of use.
- (2) Inspect blade and clean and sharpen as needed. Lubricate blades periodically during use.

  \* All recommendations to replace are based on the finding of damage or wear during inspection..

#### **AIR FILTER**

#### Level 1.

Tools required: 25 or 50 mm (1 or 2 in.) cleaning brush

Parts required: 90008 REPOWER™ AIR & FUEL FILTER KIT

- 1. Close choke (Cold Start Position [ ]). This prevents dirt from entering the carburetor throat when the air filter is removed. Brush accumulated dirt from air cleaner area.
- 2. Remove air filter cover. Brush dirt from inside cover.
- 3. Remove air filter and lightly brush debris from filter. Replace filter if it is damaged, fuel soaked, very dirty, or the rubber sealing edges are deformed.
- 4. If filter can be reused, be certain it:
  - Fits tightly in the air filter cavity.
  - Is installed with the original side out.
- 5. Install air filter cover.

#### NOTE

Carburetor adjustment may be needed after air filter cleaning/replacement.







#### **FUEL FILTER**

#### Level 1.

Tools required: 200-250 mm (8-10 in.) length of wire with one end

bent into a hook, clean rag, funnel, and an approved

fuel container

Parts required: 90008REPOWER™AIR&FUELFILTERKIT




# WARNING A

# DANGER

Fuel is  $\mathbf{VERY}$  flammable. Use extreme care when mixing, storing or handling.

- 1. Use a clean rag to remove loose dirt from around fuel cap and empty fuel tank.
- 2. Use the "fuel line hook" to pull the fuel line and filter from the tank.
- 3. Remove the filter from the line and install the new filter.

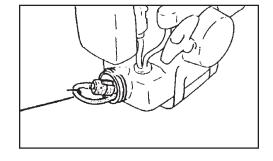



### **SPARK PLUG**

#### Level 2.


Tools required: T-wrench, Feeler gauge, Soft metal brush


Parts required: REPOWER™Tune-Up Kit P/N 90074

#### **IMPORTANT**

Use only NGK BPM-8Y spark plug (BPMR-8Y in Canada) otherwise severe engine damage may occur.

- Remove spark plug and check for fouling, worn and rounded center electrode.
- 2. Clean the plug or replace with a new one. DO NOT sand blast to clean. Remaining sand will damage engine.
- 3. Adjust spark plug gap by bending outer electrode.
- 4. Tighten spark plug to 150-170 kg/cm (130-150 in. lb.).

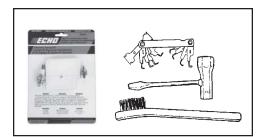

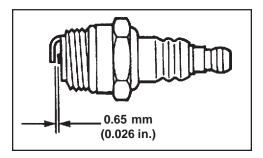

### **COOLING SYSTEM**

#### Level 2.

Tools required: 4 mm Hex wrench, 25 or 50 mm (1 or 2 in.) cleaning

brush

Parts required: None if you are careful.


#### **IMPORTANT**

To maintain proper engine operating temperatures, cooling air must pass freely through the cylinder fin area. This flow of air carries combustion heat away from the engine.

Overheating and engine seizure can occur when:

- Air intakes in the crankcase are blocked, preventing cooling air from reaching the cylinder.
- Dust and grass build up on the outside of the cylinder. This build up insulates the engine and prevents the heat from leaving.

Removal of crankcase cooling passage blockages or cleaning of cooling fins is considered "Normal Maintenance." Any failure attributed to lack of maintenance is not warranted.

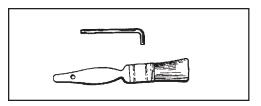





- 1. Remove spark plug lead and spark plug.
- 2. Remove (4) starter cover hex socket bolts and starter.



3. Remove bottom left (A) and bottom right (B) hex socket bolts.

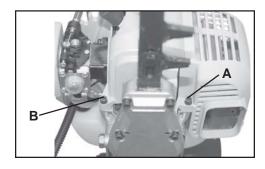

4. Remove heat shield bolt (C) from muffler cover.

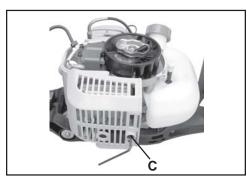

- 5. Carefully pull cylinder cover forward disengaging muffler gasket tabs and spark plug lead, and lay aside.
- 6. Loosely install spark plug to keep debris out of the cylinder. Use brush to remove dirt from cylinder fins.


#### **IMPORTANT**

DO NOT use a metal scraper to remove dirt from the cylinder fins.

7. Assemble components in reverse order.



When installing the cylinder cover, be certain the muffler gasket tabs are locked into the muffler grill slots and the stop switch lead is seated in the rubber grommet.

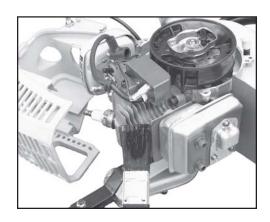



#### **EXHAUST SYSTEM**

## Spark Arrestor Screen

#### Level 2.

Tools required: 3 mm Hex wrench, Cross Head Screwdriver, Soft

metal brush

Parts required: Screen, Gasket

1. Disconnect spark plug lead.

2. Remove muffler cover.

3. Place piston at Top Dead Center (TDC) to prevent carbon/dirt from entering cylinder.

4. Remove spark arrestor screen cover (A), gasket (B), and screen (C) from muffler body.

#### NOTE

When cleaning carbon deposits, be careful not to damage the catalytic element inside muffler.

- 5. Clean carbon deposits from muffler components.
- 6. Replace screen if it is cracked, plugged or has holes burned through.
- 7. Assemble components in reverse order.

#### NOTE


When installing the cylinder cover, be certain the muffler gasket tabs are locked into the muffler grill slots and the stop switch lead is seated in the rubber grommet.


# Cylinder Exhaust Port

#### Level 3.

#### **IMPORTANT**

The cylinder exhaust port must be inspected and cleaned of excess carbon every 3 months or 90 hours of operation in order to maintain this engine within the emissions durability period. ECHO strongly recommends that you return your unit to your ECHO dealer for this important maintenance service.

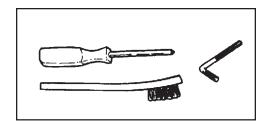

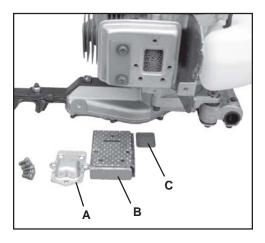

## **CARBURETOR ADJUSTMENT**

# WARNING **A**

# DANGER

The blades must not move at idle, otherwise serious personal injury may result. Periodic carburetor adjustment may be necessary to assure blades do not move at idle.

If blades move, readjust carburetor according to these instructions, or see your ECHO Dealer

## Engine Break-In

New engines must be operated a minimum duration of two tanks of fuel break-in before carburetor adjustments can be made. During the breakin period your engine performance will increase and exhaust emissions will stabilize. Idle speed can be adjusted as required.

## High Altitude Adjustment

High altitude adjustment is not required for proper operation of this engine.

#### Level 2.

*Tools required:* Screwdriver, Tachometer (ECHOP/N 99051130017).

Parts required: None.

#### NOTE


Every unit is run at the factory and the carburetor is set in compliance with emission regulations. This carburetor does not have acceleration and high-speed adjustment needles.


1. Check idle speed and reset if necessary. If a tachometer is available, idle speed screw (A) should be set to the specifications found on page 25 "Specifications" of this manual. Turn idle screw (A) clockwise to increase idle speed; counter clockwise to decrease idle speed.





When carburetor adjustment is completed, the cutting attachment should not move at idle, otherwise serious personal injury may result.

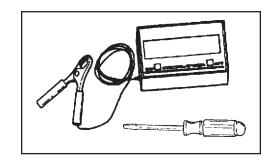

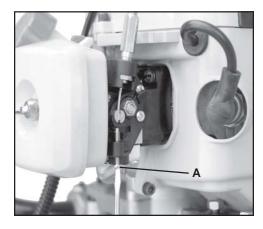



#### **LUBRICATION**


### Blades

#### Level 1.

Tools required: Clean rag, 25 or 50 mm (1 or 2 in.) cleaning brush

Parts required: 20W Engine Oil (lubrication), 50-50 mixture of

kerosene and 20W oil (cleaning).

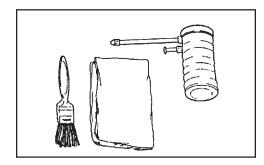



# WARNING

# **DANGER**

Hedge Clipper blades are very sharp. Touching them may lead to severe personal injury. Avoid touching blades whenever possible, and always wear gloves to protect hands.

- 1. Move stop switch to stop position.
- 2. Disconnect spark plug wire from spark plug.
- 3. Brush loose debris from blade and coat both sides of blade with the 50-50 cleaning mixture.
- 4. Allow cleaning mixture to soften the remaining gummy residue then wipe it from the blade.
- 5. Apply clean oil to the entire length of the blade. Be certain the blade bolts are lubricated.
- 6. Wipe excess oil from the blade before putting the unit back in service.

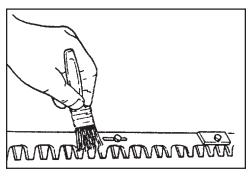

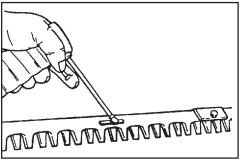

# Gear Box Assembly

#### Level 1.

*Tools required:* 8 x 10 mm Open end wrench, Clean rag


Gear Box Gasket P/N 61041405360, ECHO LUBE™ Parts Required:


(P/N 91014) or Lithium Based Grease.

1. Clean dirt from filler plug area and remove plug.

2. Carefully add 1 or 2 oz. of grease into hole. **DO NOT** force grease. Too much pressure will force grease past seals and cause damage. Recheck grease level, and add as required.

3. Wipe excess grease from around filler plug area, and replace the filler plug. Tighten plug securely.

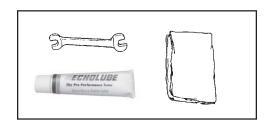

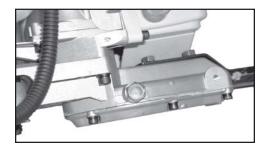


#### SHARPENING BLADES

#### Level 3.

Tools required: Flat file, Screwdriver

Parts required: None

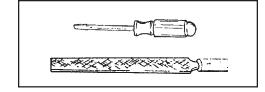

# WARNING A DANGER

Hedge Clipper blades are very sharp. Touching them may lead to severe personal injury. Avoid touching blades whenever possible, and always wear gloves to protect hands.


- 1. Move stop switch to stop position.
- 2. Disconnect spark plug wire.
- Slide blades to allow file clearance using slots on bottom of blades. Do not pry against cutting edges.
- 4. Follow the original shape, and file each cutting edge carefully to avoid damage to adjacent teeth. Maintain 6 mm (.25 in.) radius at base of each tooth.

#### **IMPORTANT**

If a power grinder is used **DO NOT** allow blade to over heat.

5. Lubricate blades (see "Lubrication instructions").



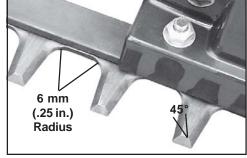



### **BLADE ADJUSTMENT**

Level 2.

Tools required: (2) 10 mm Sockets and Extensions

Parts required: None



Hedge clipper blades are very sharp. Touching them may lead to severe personal injury. Use a socket and extension when adjusting blade bolts or blade locknuts in order to keep hands at a safe distance from sharp blades.

#### **IMPORTANT**

Blades should only be removed and reinstalled by an Authorized ECHO Servicing Dealer, otherwise premature wear or internal damage may occur.

- 1. Tighten blade bolts until snug, then loosen blade bolts 1/2 turn.
- 2. Hold blade bolts from turning using 10 mm socket, and tighten blade lock nuts with other 10 mm socket.

#### NOTE

Locking ability of Hedge Clipper blade lock nuts will diminish each time they are removed. Replace if turning resistance is not felt when installing locknuts.





# **T**ROUBLESHOOTING

ENGINE PROBLEM TROUBLESHOOTING CHART				
Problem	Check	Status	Cause	Remedy
	Fuel at carburetor	No fuel at carburetor	Fuel strainer clogged Fuel line clogged Carburetor	Clean or replace Clean or replace See your Echo dealer
	Fuel at cylinder	No fuel at cylinder	Carburetor	See your Echo dealer
Engine cranks - starts hard/		Muffler wet with fuel	Fuel Mixture too rich	Open choke Clean/replace air filter Adjust carburetor See your Echo dealer
doesn't start	Spark at end of plug wire	No spark	Stop switch off Electrical problem Interlock switch	Turn switch to ON See your Echo dealer See your Echo dealer
Spark at plug	No spark	Spark gap incorrect Covered with carbon Fouled with fuel Plug defective	Adjust to .65mm (0.026 in.) Clean or replace Clean or replace Replace plug	
	Air filter	Air filter dirty	Normal wear	Clean or replace
	Fuel filter	Fuel filter dirty	Contaminants/residues in fuel	Replace
Engine runs, but dies or	Fuel vent	Fuel vent plugged	Contaminants/residues in fuel	Clean or replace
does not	Spark Plug	Plug dirty/worn	Normal wear	Clean and adjust or replace
accelerate properly	Carburetor	Improper adjustment	Vibration	Adjust
	Cooling System	Cooling system dirty/plugged	Extended operation in dirty/dusty locations	Clean
	Spark Arrestor Screen	Spark arrestor screen plugged	Normal wear	Replace
Engine does not crank	N/A	N/A	Internal engine problem	See your Echo dealer



Fuel vapors are **extremely** flammable and may cause fire and/or explosion. **Never** test for ignition spark by grounding spark plug near cylinder plug hole, otherwise serious personal injury may result.



# **S**TORAGE





## DANGER

During operation the muffler or catalytic muffler and surrounding cover become hot. Always keep exhaust area clear of flammable debris during transportation or when storing, otherwise serious personal injury may result.

## Long Term Storage (over 30 days)

Do not store your unit for a prolonged period of time (30 days or longer) without performing protective storage maintenance which includes the following:

1. Store unit in a dry, dust free place, out of the reach of children.

# **WARNING**



# DANGER

Hedge Clipper blades are very sharp. Touching them may lead to severe personal injury. Avoid touching blades whenever possible, and always wear gloves to protect hands.

# WARNING A DANGER



Do not store in enclosure where fuel fumes may accumulate or reach an open flame or spark, otherwise serious personal injury may result.

- 2. Place the stop switch in the "OFF" position.
- 3. Remove accumulation of grease, oil, dirt and debris from exterior of unit.
- 4. Perform all periodic lubrication and services that are required.
- 5. Apply clean oil to the entire length of the blade. Be certain the blade bolts are lubricated.
- 6. Install blade cover on blades.
- 7. Tighten all the screws and nuts.

- 8. **Drain** the fuel tank **completely** and pull the recoil starter handle several times to remove fuel from the carburetor.
- 9. Remove the spark plug and pour 7cc (1/4 oz.) of fresh, clean, two-stroke engine oil into the cylinder through the spark plug hole.
  - A. Place a clean cloth over the spark plug hole.
  - B. Pull the recoil starter handle 2-3 times to distribute the oil inside the engine.
  - C. Observe the piston location through the spark plug hole. Pull the recoil handle slowly until the piston reaches the top of its travel and leave it there.

10. Install the spark plug (do not connect ignition cable).

#### **IMPORTANT**

Always store and transport hedge clippers in a stable, horizontal position. Support gear case and cutting blades to prevent excessive flexing, which may cause damage to these components. Always install blade cover when transporting or storing unit.

# **S**PECIFICATIONS

MODEL	НС-201
Length	1075 mm (42.3 in.)
Width	240 mm (9.45 in.)
Height	200 mm (7.87 in.)
Weight, dry	5.54 kg (12.2 lb.)
Type of Engine	Air cooled, two-stroke, single cylinder, gasoline engine
Displacement	21.2 cc (1.29 cu.in.)
Bore	32.2 mm(1.27 in.)
Stroke	26.0 mm(1.02 in.)
Exhaust System	Spark Arrestor Muffler w/catalyst
Carburetor	Zama w/purge
Ignition System	Flywheel Magneto, Capacitor discharge ignition
Spark Plug	BPM-8Y (Gap 0.65 mm (0.026 in.)
Fuel	Mixed Fuel - gasoline and oil
Fuel/Oil Ratio	50:1 two-stroke air cooled engine oil
Gasoline	89 Octane unleaded. DO NOT use fuel containing methyl alcohol,
	more than 10% ethyl alcohol or 15% MTBE.
Oil	Echo Power Blend ™ Premium Universal 2-Stroke Oil
Fuel Tank Capacity	0.5 lit. (16.9 fl. oz)
Starter System	Automatic Recoil Starter
Clutch	Centrifugal Type
Gear Case Ratio	5.88:1
Cutter	Single Edge
Length	737 mm (29.0 in.)
Pitch	35 mm (1.38 in.)
Height	23 mm (0.91 in.)
Maximum Diameter Cut	
Soft Material	25.4 mm (1 in.)
Woody Material	13 mm(1/2 in.)
Idle Speed (RPM)	2,750-3,250
Wide Open Throttle (RPM)	9,500 - 11,500



NOTES

NOTES		
NOTES		
NOTES	N	IOTES
	N	IOTES

# Servicing Information Parts/Serial Number

Genuine ECHO Parts and ECHO REPOWER<sup>TM</sup> Parts and Assemblies for your ECHO products are available only from an Authorized ECHO Dealer. When you do need to buy parts **always** have the Model Number and Serial Number of the unit with you. You can find these numbers on the engine housing. For future reference, write them in the space provided below.

Model Number \_\_\_\_\_ Serial Number \_\_\_\_\_

#### **SERVICE**

An Authorized ECHO Service Dealer must perform Service of this product during the warranty period. For the name and address of the Authorized ECHO Service Dealer nearest you, ask your retailer or call: 1-800-432-ECHO (3246). Dealer information is also available on our Web Site. When presenting your unit for Warranty service/repairs, proof of purchase is required.

#### ECHO CONSUMER PRODUCT SUPPORT

If you require assistance or have questions concerning the application, operation or maintenance of this product you may call the ECHO Consumer Product Support Department at 1-800-673-1558 from 8:30 am to 4:30 pm (Central Standard Time) Monday through Friday. Before calling, please know the model and serial number of your unit to help your Consumer Product Support Representative.

#### WARRANTY REGISTRATION

You may register your Echo equipment using the warranty registration card or register on-line at www.echo-usa.com. Registering provides a direct link between you and Echo if we find it necessary to contact you.



DEALER?
Call
1-800-432-ECHO
or
www.echo-usa.com

CONSUMER PRODUCT SUPPORT 1-800-673-1558 8:30 - 4:30 Mon - Fri C.S.T.



#### ADDITIONAL OR REPLACEMENT MANUALS

<u>Safety Manuals</u> in English/Spanish or English/French are available, free of charge, from your ECHO dealer or at www.echo-usa.com.

Operator's and Parts Manuals are available by:

- Downloading free from www.echo-usa.com
- Purchasing from your Echo Dealer.
- Manuals are available by sending a written request stating the model number and serial number of your Echo unit, part number of the manual, your name and address, and mail to the address below.

<u>Safety Videos</u> are available from your Echo dealer. A \$5.00 shipping charge will be required for each video.



400 OAKWOOD ROAD LAKE ZURICH, IL 60047 www.echo-usa.com